

# PERTRONIC INDUSTRIES LTD

## INSTALLATION NOTE Remote Vibrating Alarm System




### Instruction for Connecting Battery Leads




**Figure 1: Top Cover**

1. Remove the four screws from the unit.
2. Remove the top cover.

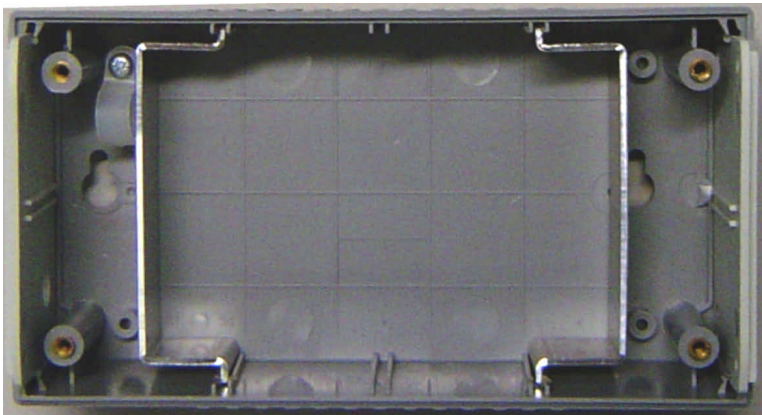


**Figure 2: Inside the Case**

3. Insert the battery provided as illustrated below in Figure 3.

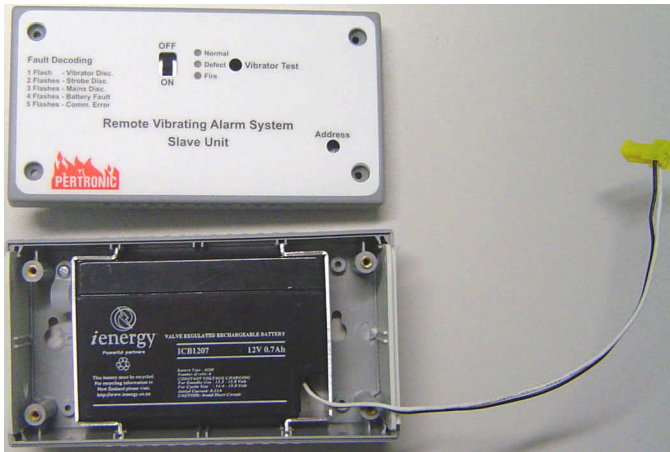

**Figure 3: Battery Ready for Connecting**

4. Connect the battery leads as show in Figure 4.

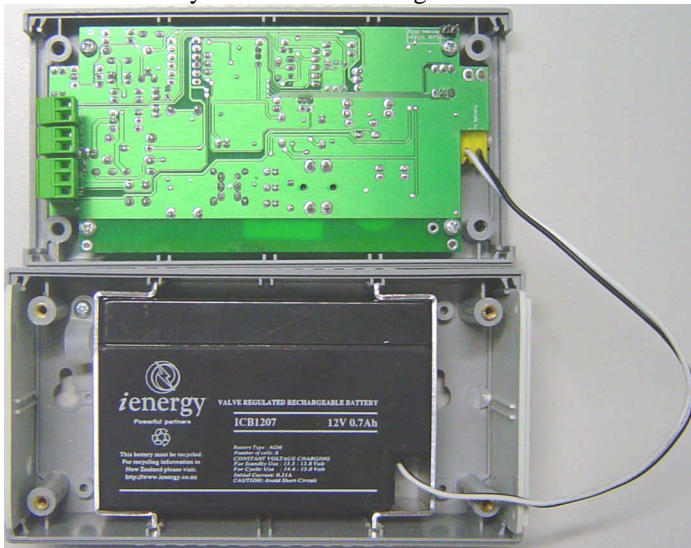

**Figure 4: Battery Connected**

**NOTE**

Battery connection procedure is the same for both Master and Slave Remote Vibrating Units.