

Vision Fire & Security

VESDA[®]

LaserPLUS Product Guide

November 9, 2004

Part:19145



Vision Systems

Copyright Information

This document is protected by copyright under the laws of Australia and other jurisdictions throughout the world. It must not by any means, either in whole or part, be reproduced, communicated to the public, adapted, distributed, sold, modified, published except as permitted by any laws or statute or with prior written consent of VFS International Pty Ltd. Copyright© 2004 VFS International Pty Ltd ACN 100 259 381

Disclaimer

The manufacturer reserves the right to change designs or specifications without obligation and without further notice. VESDA, LaserTECHNIC, LaserPLUS, LaserSCANNER, LaserCOMPACT, LaserFOCUS, VESDAnet, VESDALink, ASPIRE, ASPIRE2, AutoLearn, VSM, VConfig, InfoWORKS, PROACTIV, PRECISION, VSC, ADPRO, FastTrace, FastVu, FastScan, Axiom, PRO, Amux and Video Central are brands and trade marks used under license by the distributor.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures, re-orientate or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment to a power outlet which is on a different power circuit to the receiver or consult the dealer or an experienced radio/television technician for help.

General Warning

This VESDA® Aspirating Smoke Detection System must only be installed, configured and used strictly in accordance with the General Terms and Conditions and System Design Manual available from VFS International Pty Ltd. You acknowledge that you have read and agree to those terms and conditions. All proper health and safety precautions must be taken during the installation, commissioning and maintenance of the VESDA® Aspirating Smoke Detection System. The system should not be connected to a power source until all the components have been installed. Proper safety precautions must be taken during tests and maintenance of the VESDA® products when these are still connected to the power source. Failure to do so or tampering with the electronics inside the products can result in an electric shock causing injury or death and may cause equipment damage. VESDA® is not responsible and cannot be held accountable for any liability that may arise due to improper use of the equipment and/or failure to take proper precautions. Only persons trained through a VESDA® accredited training course can install, test and maintain the system.

Limitation of Liability

This VESDA® Aspirating / Air Sampling Smoke Detection System must only be installed, configured and used strictly in accordance with the General Terms and Conditions, this manual and the System Design Manual available from VFS International Pty Ltd (**VFS**). You acknowledge that you have read and agree to those terms and conditions.

You acknowledge that you have been provided with a reasonable opportunity to appraise the VESDA® System and have made your own independent assessment of the fitness or suitability of the VESDA® System for your purpose. You acknowledge that you have not relied on any oral or written information, representation or advice given by or on behalf of VFS or its representatives.

VFS has no liability to you or any person for incidental or consequential loss, expense or damages including, without limitation, loss of business, loss of profits or loss of data. You indemnify VFS for any claim, amount or liability brought against VFS in connection with the VESDA® System.

You expressly agree that you assume the entire risk as to the results and performance of the VESDA® System resulting from the configuration of the VESDA® System. VFS does not warrant, guarantee or make any representations, either expressly or implied, regarding the current or future use, or the results of the use, of the VESDA® System, with respect to its correctness, accuracy, reliability, completeness, interworking, functionality, currentness or otherwise resulting from the configuration of the VESDA® System.

To the full extent permitted by law, VFS expressly excludes all conditions, warranties and liability, whether imposed or implied by statute or by rule of law or otherwise, which are not expressly set out in the General Terms and Conditions.

To the extent permitted by law, your sole recourse for any defect of, damage to, or performance standard of the VESDA® System will be under the express warranties the General Terms and Conditions (if applicable) and VFS will in no event be liable to pay any amount or damages resulting from or in connection with the VESDA® System.

To the extent by law that any limitation or exclusion can not apply, the total liability of VFS in relation to the VESDA® System is limited to:

- (i) in the case of services, the cost of having the services supplied again; or
- (ii) in the case of goods, the lowest cost of replacing the goods, acquiring equivalent goods or having the goods repaired.

To the extent permitted by law, VFS has no liability with respect to damage to or arising out of, or the condition or performance of, the VESDA® System resulting from (i) negligence or improper use, storage, installation, configuration commission, service maintenance or handling of the VESDA® System (where 'improper' includes treatment other than in accordance with the VESDA Manual, these terms and conditions or the information provided at a training session); (ii) accident, unforeseeable circumstances or disaster; (iii) modifications to the VESDA® System other than in accordance with VFS's instructions; (iv) attachment of or interoperation with features, software or products not approved by VFS in writing; or (v) where the VESDA® System has been serviced by persons not authorized by VFS in writing to service the VESDA® System.

VESDA Product Warranty Conditions

VFS International Pty Ltd (**VFS**) warrants that new VESDA products (excluding consumable items) will conform to its published specifications and remain in good working order during the warranty period of 24 (twenty four) months from the date an invoice is issued by VFS to its distributor.

VFS also warrants that products serviced or repaired by its service department will remain in good working order for a warranty period of 12 (twelve) months from the date of service. This service or repair warranty is only available on products less than 7 (seven) years old and only covers those component parts of the products serviced, repaired or replaced.

Should product under warranty not be in good working order, VFS will, at its option, either repair or replace the product or its component parts at no additional charge.

Spare parts and replacement product, covered under this warranty, will be furnished on an exchange basis and will, at the option of VFS either be new, equivalent to new or reconditioned. Returned parts and products to VFS become the property of VFS.




This warranty does not cover the repair or damage to the product resulting from or arising out of (i) negligence or improper use storage, installation, configuration, commission, service, maintenance or handling of the product (where 'improper' includes treatment other than in accordance with any manual or instructions for use of the product); (ii) accident, unforeseeable circumstances or disaster; (iii) modifications to the product other than in accordance with VFS's instructions; (iv) attachment of features or interoperation with features, software or products not approved by VFS in writing; or (v) where the product has been serviced by persons not authorized by VFS in writing to service the product.

Document Conventions

The following typographic conventions are used in this document.

Convention	Description
Bold	Used to denote: emphasis Used for names of menus, menu options, toolbar buttons
<i>Italics</i>	Used to denote: references to other parts of this document or other documents. Used for the result of an action

The following icons are used in this document

Convention	Description
	Caution: This icon is used to indicate that there is a danger to equipment. The danger could be loss of data, physical damage, or permanent corruption of configuration details.
	Warning: This icon is used to indicate that there is a danger of electric shock. This may lead to death or permanent injury.
	Warning: This icon is used to indicate that there is a danger of inhaling dangerous substances. This may lead to death or permanent injury.

Warranty service may be obtained by:

Notifying Vision Systems and giving full description of fault. Vision Systems will first attempt to rectify fault by supplying replacement component parts. If rectification is not achieved by component part replacement then distributor is to return faulty product to Vision Systems at Vision Systems cost once Vision Systems has given approval to do so.

Contact Us

Australia and Asia	The Americas	Europe & Middle East
Vision Systems Private Bag 215 495 Blackburn Road Mount Waverley VIC 3149 Australia Toll free: 1800 700 203 Tel: +61 (0) 3 9211 7200 Fax: +61 (0) 3 9211 7201	Vision Systems 700 Longwater Drive Norwell, Massachusetts, 02061 USA Toll free: 800 229 4434 Tel: +1 78 740 2223 Fax: +1 78 740 4433	Vision Systems Vision House, Focus 31, Mark Road Hemel Hempstead Hertfordshire HP2 7BW United Kingdom Tel: +44 (0) 1442 242 330 Fax: +44 (0) 1442 249 327

www.vesda.com www.adpro.com.au www.millbank.co.uk

Codes and Standards Information

We strongly recommend that this document is read in conjunction with the appropriate local codes and standards for smoke detection systems and electrical connections. This document contains generic information and some sections may not comply fully with all local codes and standards. In these cases, the local codes and standards must take precedence.

FM 3611 Hazardous Approval Warning

Exposure to some chemicals may degrade the sealing of relays used on the detector. Relays used on the detector are marked "TX2-5V" or "G6S-2-5V" or "EC2-5NU".

UL Warning

The fire alarm threshold (signal) that initiates an evacuation procedure via the Fire Alarm Panel must not be set higher than 0.625%/ft. The detector can send this signal either via the Fire Alarm Panel Output signal or the Pre-alarm output signal.

Safety Label

This VESDA product incorporates a laser device and is classified as a Class 1 laser product that complies with FDA regulations 21 CFR 1040.10. The laser is housed in a sealed detector chamber and contains no serviceable parts. This laser emits invisible light and can be hazardous if viewed with the naked eye. Under no circumstances should the detector chamber be opened.

Document: 10278_01

The product complies with the following standards.

AS1603.8-1996

GEI 1-048:Jan 1997

FM3230-3250 FM3820

21 CFR 1010.221 CFR 1010.3

AS2211 EN60950 AS/NZS3548 FCC Class B

EN 50081-1 EN 50130-4

UL 268 UL268A

UL and FM Compliancy

All installers must ensure that environments that require UL approved product must have the requirements of a remote display or FACP connected to the detectors. Failure to do so will void product compliance for UL and FM certification that is stated on the detector approval and rating label.

Approval Certification:

Vision Fire & Security have had this product tested and approved by UL and FM. This product is fully listed and compliant as long as the exception in UL268 is adhered to. Please see section 17.5 of UL268, 2003 Edition.

"17.5 A lamp or equivalent means shall be provided on a spot-type detector head or base to identify it as the unit from which the alarm was initiated".

Exception: The alarm-indicating-means is not required on a detector whose use is restricted to a specific control unit that identifies the individual detector in alarm.

As long as these models are connected to a remote display or to a Fire Alarm Control Panel (FACP) that identifies if the detector is in alarm then it is a compliant product.

Contents

Scope	1
Introduction to the LaserPLUS	1
LaserPLUS Features	1
Operation of the LaserPLUS	1
LaserPLUS Configurations	3
Display module	4
VESDA LCD Programmer	6
LaserPLUS Components	7
LaserPLUS Product Information	8
Product Specifications	8
LaserPLUS Dimensions	10
LaserPLUS Ratings and Approvals	11
Default Settings	12
Relays	13
LaserPLUS relay Assignments and Conditions to Change States	14
Relays default settings	14
General Purpose Input (GPI) Functions	15
Mounting the LaserPLUS	16
Securing the mounting bracket	16
Mounting the LaserPLUS in Normal Orientation	17
Mounting the LaserPLUS in the Inverted Orientation	17
Mounting the LaserPLUS without a mounting bracket	17
Recess mounting kit	18
These kits are used to house a detector inside a wall cavity.	18
Connecting the LaserPLUS to the Pipe Network	19
Inlet Pipes	19
Managing the Exhaust Air	20
LaserPLUS Wiring Connections	20
The Termination Card	20
VESDAnet Terminals	20
Connections for GPI	21
Power Source	22
Back Up Battery	22
Powering Up	24
Preliminary Systems Check	24
Maintaining the LaserPLUS detector	25
Replacing the chassis/Air Inlet Pipe Manifold	26
Internal Wiring for LaserPLUS	28
Spare Parts	30

1.1 Scope

The LaserPLUS Product Guide is written to provide you with comprehensive knowledge of the detector.

This guide introduces you to the LaserPLUS features, technical specifications and gives an understanding of its components and their function. You will also find instructions on installing, cabling and powering up the detector.

This guide is for anyone involved with the design, maintenance and purchasing of a VESDA system. It is assumed that anyone using this manual has knowledge and the appropriate certification from the local fire and electrical authorities.

1.2 Introduction to the LaserPLUS

The LaserPLUS is an aspirating smoke detector providing very early warning of fire conditions by drawing air samples through an air sampling pipe network. The detector chamber can detect presence of smoke at very low concentrations. The embedded and PC software complimenting the LaserPLUS provides a wide range of user defined parameters and reporting capabilities. The detector easily interfaces with fire warning and fire suppression release systems, and can be easily integrated into a building management system.

LaserPLUS Features

The LaserPLUS features make it a versatile smoke detection product:


- Each detector can cover an area up to 2,000 m² (20,000 sq. ft.)
- Wide sensitivity range
- Four programmable alarm thresholds
- AutoLearn feature
- Four pipe Inlets
- Individual pipe flow monitoring
- Replaceable air filter cartridge
- Option for inverted mounting
- Recessed mounting option
- Modular to meet site specific requirements
- Modular Display Module and LCD Programmer
- Seven programmable relays
- High efficiency aspirator
- Programmable general purpose Input
- PC capable programming and monitoring
- Multilingual displays
- Event log for up to 18,000 events

1.3 Operation of the LaserPLUS

An air sampling pipe network collects air samples from a protected area. The VESDA integrated aspirator draws air into the sampling pipes through a pipe inlet manifold (up to four pipes can be connected to a LaserPLUS detector). For further information on air sampling pipe networks please see the Pipe Network Design and Installation Manuals.

Some of this air flows to the dual stage filter. The first stage air filter removes dust and dirt from the sampled air and flows to the laser detector chamber to detect the presence of smoke.

Any smoke detected in the laser detection chamber is signaled to the main processor card. If the presence of detected smoke is higher than the set thresholds it is reported as an alert, action, fire 1 or fire 2 alarm depending upon the alarm thresholds. The second stage filter further filters the air to produce ultra clean air. The ultra clean air is used to clean the optical surfaces in the laser detection chamber.

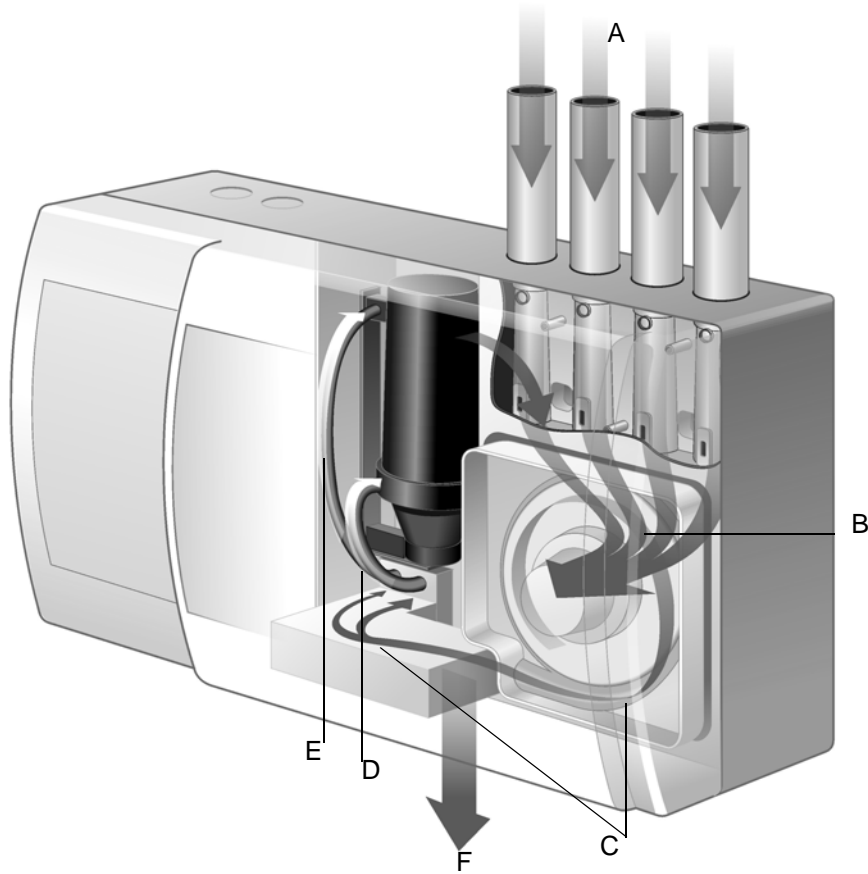

Legend	
A	Air inlets from pipe networks
B	Air is drawn into the aspirator
C	Some air is filtered and:
D	flows into the chamber for testing
E	is filtered a second time, then used to flush the chamber with ultra clean air
F	All air is then vented

Figure 1 - Operation and internal air flow of a LaserPLUS

LaserPLUS Configurations

The modular options available with a LaserPLUS are:

- Fire and OK LEDs (FOK)
- LCD Programmer
- LaserPLUS Display Module


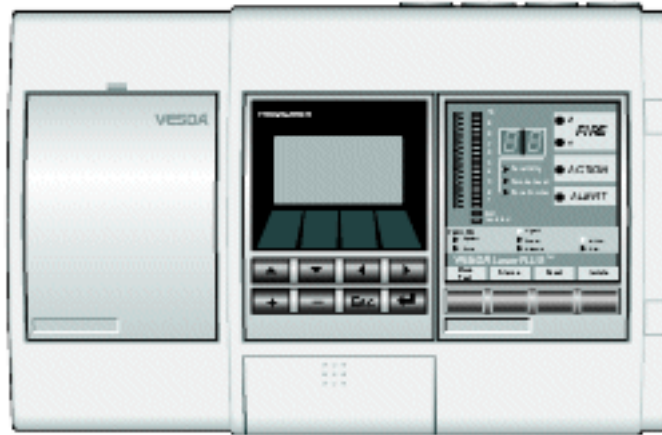


Figure 2 - VLP-012 VESDA LaserPLUS installed with LCD Programmer and Display Module

Display module

The LaserPLUS Display Module is mounted either on the detector front cover or at a remote location in a remote mounting box or a 19" subrack. It provides a visual representation of the smoke levels and the four alarm stages for the assigned detector. An array of fault LEDs illuminate in different configurations to report Urgent, Minor, Zone and System faults. Up to 20 Display Modules can be assigned to one detector, however the Display Module can be configured to report the status of only one detector at a time.

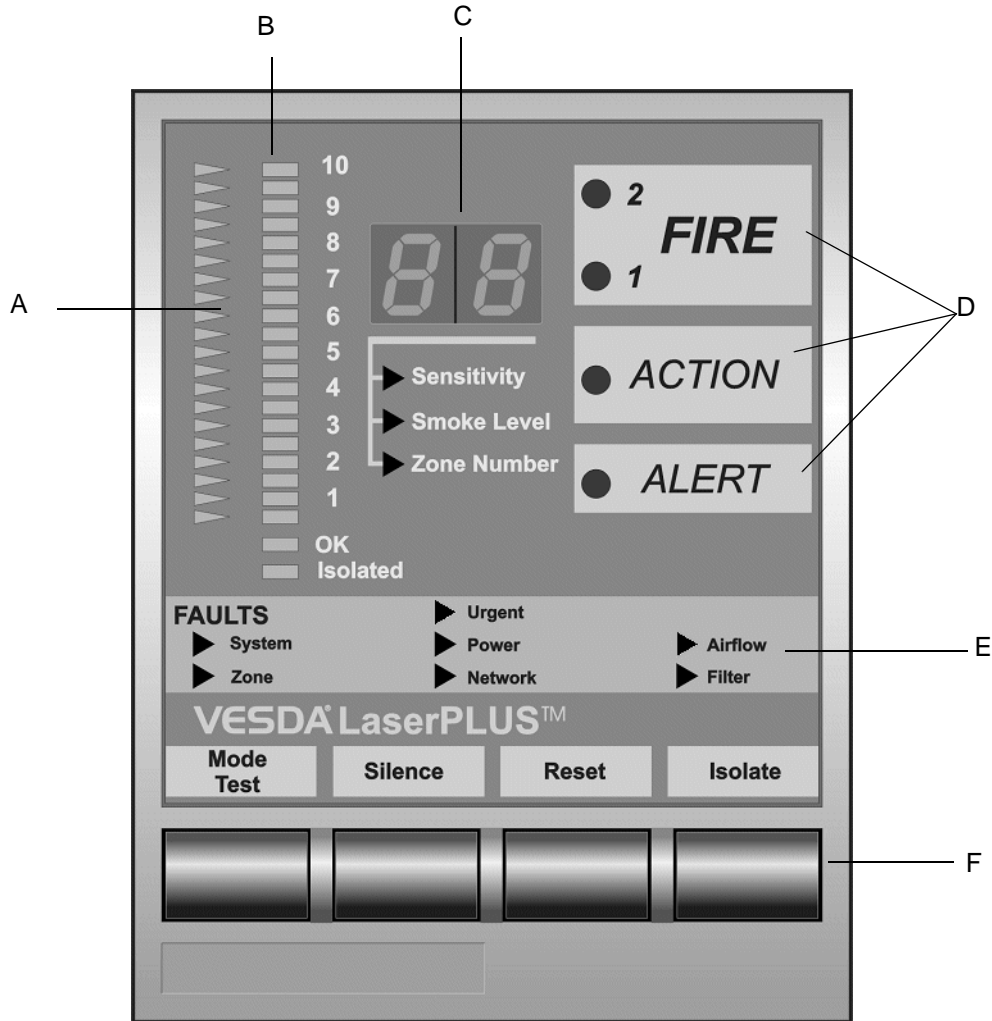

Legend	
A	Alarm Threshold Indicators
B	Bar graph of detected smoke
C	Numerical Display
D	Alarm LEDs
E	Fault LEDs
F	Push Button Keys

Figure 3 - Display Module for LaserPLUS

OK LED	The OK LED stays illuminated during normal operation indicating the unit is functioning normally. When this LED is off a warning beep sounds, indicating a Fault condition is active.
Isolate LED	This LED is illuminated when the detector is Isolated and relays are deactivated disabling alarm outputs of the detector. The display can be programmed to beep every 60 seconds.
Alarm Levels	<p>ALERT: When illuminated this LED indicates that the smoke level is above the alert threshold. This means the detector has identified very early stages of a fire condition and/or that the smoke level in the area is above normal.</p> <p>ACTION: When illuminated this LED indicates that the detected smoke level has passed the threshold value fixed for Action, but is not intended to initiate a general fire alarm response procedure.</p> <p>FIRE 1: When illuminated this LED indicates that the detected smoke level is above the threshold value set to initiate a general fire alarm response procedure. This indicates a fire may be imminent or is in progress. When interfaced with a Fire Alarm Control Panel (FACP) it can generate an automatic fire alarm.</p> <p>FIRE 2: When illuminated this LED indicates a fire is in progress. The detector can be interfaced with an FACP to activate automatic suppression systems and evacuation procedures.</p>
Bar graph	The Bar graph is a 20 step indicator where each indicator represents an increase in the detected level of smoke, relative to the preset fire alarm level.
Threshold Indicators	The illuminated LEDs represent visual settings for ALERT, ACTION, and FIRE 1 alarm levels. The FIRE 1 indicator is always at the top.
Fault LEDs	<p>The Fault LEDs illuminate to indicate:</p> <p>URGENT: A serious fault requiring immediate attention</p> <p>SYSTEM: A fault affecting the network to which the Display Module is connected</p> <p>ZONE: A fault in the VESDA Zone monitored by the Display Module</p> <p>POWER: A fault in the power supply if the GPI function is used</p> <p>NETWORK: A communications fault on VESDAnet</p> <p>AIRFLOW: Higher or lower than acceptable levels of air flow through the inlet pipe(s)</p> <p>FILTER: The air filter requires changing</p>

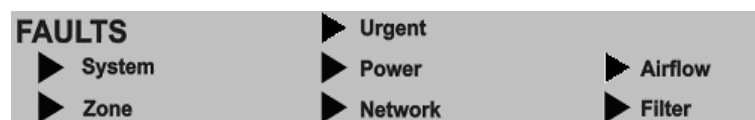


Figure 4 - Illuminated lights showing faults

These buttons enable various systems functions. These do not allow configuring the system. The buttons can be disabled by the systems administrator.

Push Button Keys

Mode/Test (Dual Function): Selects modes on the numerical display - sensitivity, smoke level, or zone number. When depressed for more than two seconds it performs a light test function.

Silence: This button silences any alarm or fault warnings. The LEDs stop flashing to acknowledge a fault or alarm condition.

Reset: Resets any latched alarms and faults on the detector. Any active alarms or faults are reported again after the time delays have elapsed.

Isolate: Isolates the detector from any external devices or systems (an isolate alarm will normally be raised at the Fire Alarm Control Panel).

Note: It is normal practise to signal the Isolate condition to the Fire Control Panel using the Isolate relay.

Sensitivity: Shows the level of smoke that must be measured to illuminate the entire bar graph and always corresponds with the Fire 1 alarm level.

Smoke Level: Indicates the current level of smoke in the relevant VESDA Zone and is represented as % obs/m or % obs/ft.

Numerical Display

Zone Number: This is the VESDA Zone number assigned to the Display Module.

Note: The Mode button is used to select the parameter to display in the numeric display. These values represent the current readings for the corresponding parameters mentioned alongside the lit LED.

VESDA LCD Programmer

The VESDA LCD Programmer is used for configuring, commissioning and maintenance of the devices on VESDAnet. It can replace either the center or the right plate of the front cover of the detector, or can be mounted at a remote location. A hand-held model is also available. The hand-held model is connected to the VESDAnet socket on the termination card of the detector. For a detailed description and use of the LCD Programmer please refer to the VESDA LCD Programmer Manual.


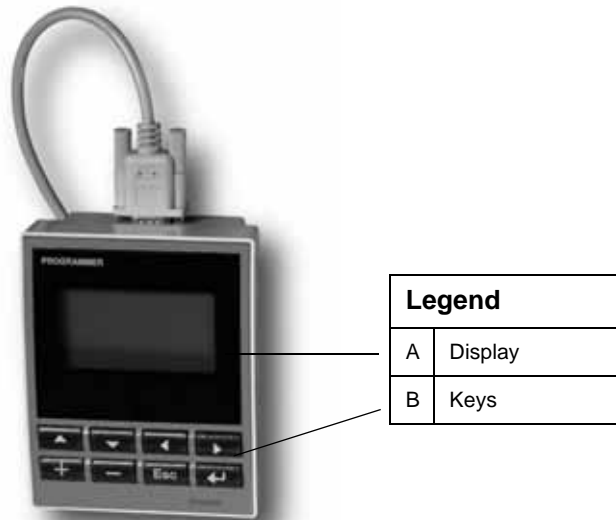


Figure 5 - LCD Programmer module

LaserPLUS Components

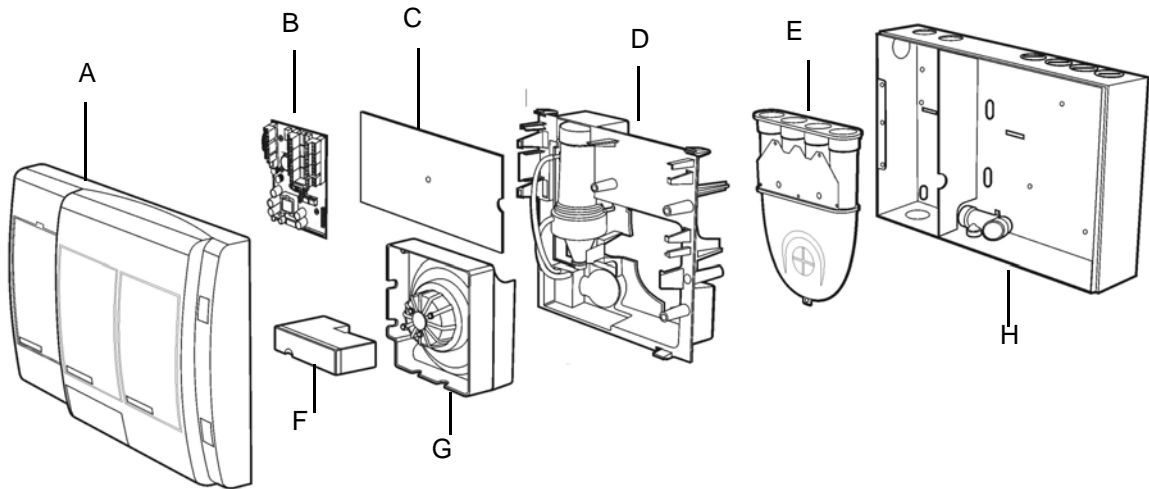

Legend			
A	Front cover	E	Pipe inlet manifold
B	Termination card	F	Air filter
C	Blank card protecting processor card	G	Aspirator
D	Chassis with laser detector chamber	H	Mounting box/enclosure

Figure 6 - An exploded view of the detector

1.4 LaserPLUS Product Information

Product Specifications

Supply Voltage	18 to 30 VDC
Power Consumption	@24 VDC
<ul style="list-style-type: none"> LaserPLUS with Blank Plates 3,000rpm 	Normal: 5.8 W Alarm On: 7.0 W
<ul style="list-style-type: none"> LaserPLUS with Blank Plates @ 4,200rpm 	Normal: 9.6 W Alarm On: 10.8 W
<ul style="list-style-type: none"> Programmer Module 	Normal: 0.6 W (Backlight Off) Alarm On: 2.2 W (Backlight On)
<ul style="list-style-type: none"> Display Module 	Normal: 1.6 W Alarm On: 2.2 W
Dimensions (WHD)	350 mm x 225 mm x 125 mm (13.8 in x 8.9 in x 4.9 in)
Weight	4.0 kg (9 lbs) including Display and Programmer Modules
Operating Temperature (To operate the LaserPLUS detector outside these parameters please contact your nearest VESDA Technical Office)	Detector Ambient: UL tested: 0° to 39°C (32° F to 103°F) Sampled Air: -20° to 60°C (-4° to 140°F) Humidity: 10-95% RH, non-condensing
Storage Temperatures (Non-operational)	Up to 2 years (battery life) Dry (<95% humidity) 0° to 85°C Must not exposed to sunlight or other radiation sources
Sampling Pipe Network	Maximum length per pipe 100 m (328 ft) Aggregate pipe length: 200 m (650 ft) Pipe Modelling Design Tool: ASPIRE™
Pipe Size	Internal Diameter: 15-21 mm (0.874 inch) External Diameter: 25 mm (1.05 inch) (25 mm to 1.050 inch adaptor supplied for USA market)
Relays	7 relays. Contacts rated 2A @ 30 VDC. Programmable to latch or non-latch states Programmable 0 - 60 seconds time delay for each relay
Relays Default Configuration	7 relays: Alert, Action, Fire 1, Fire 2, Minor Fault, Urgent Fault and Isolate. (7 x NO/NC contacts)

IP Rating	IP30
Cable Access	8 x 25 mm (1in) knockouts in various positions
Cable Termination	Screw terminal blocks (0.2-2.5 sq mm, 30-12 AWG)
Alarm Range	0.005 to 20.00% obs/m (0.0015 to 6.25% obs/ft.)
Threshold Setting Range	Alert: 0.005 - 1.990% obs/m (0.0015 - 0.6218% obs/ft.) Action: 0.010 - 1.995% obs/m (0.0031 - 0.6234% obs/ft.) Fire 1: 0.015 - 2% obs/m (0.0046 - 0.625% obs/ft.) Fire 2: 0.020 - 20% obs/m (0.0062 - 6.25% obs/ft.)** ** Limited to 12% obs/m 4% obs/ft. in UL mode All shipments are factory configured for UL Mode. If the UL Mode is switched OFF the UL listing will be voided.
Key Software Features	
• Event log:	Up to 18,000 events stored on FIFO basis
• AutoLearn:	Minimum 15 minutes Maximum 15 days, 23 hrs, 59 minutes Recommended minimum period 14 days During AutoLearn, thresholds are NOT changed from pre-set values
• Referencing:	Compensation for external ambient conditions
• Four Alarm Levels:	Alert, Action, Fire 1 and Fire 2
• Two Fault Warning Levels:	Minor Fault and Urgent fault
• Maintenance Aids:	Filter and flow monitoring Event reporting via VESDAnet or event log

Table 1 - LaserPLUS Detectors Specifications

Note: For operating the LaserPLUS Detector outside the parameters mentioned above please contact VESDA Technical Support

Note: UL Mode: Factory Default = ON (Fire 2 set to 12% obs/m 4% obs/ft. to comply with UL268)

Note: Factory Default = OFF (Fire 2 Threshold can be set up to 20% obs/m 6.25%/ft).

LaserPLUS Dimensions

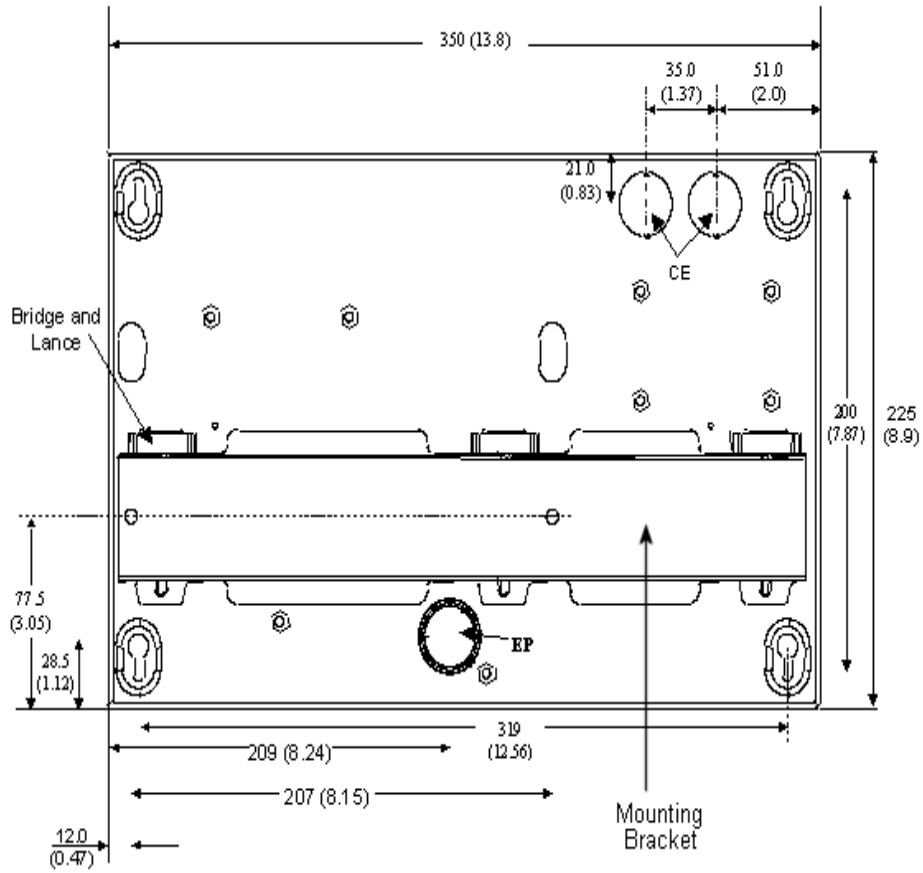


Figure 7 - LaserPLUS dimensions - rear view

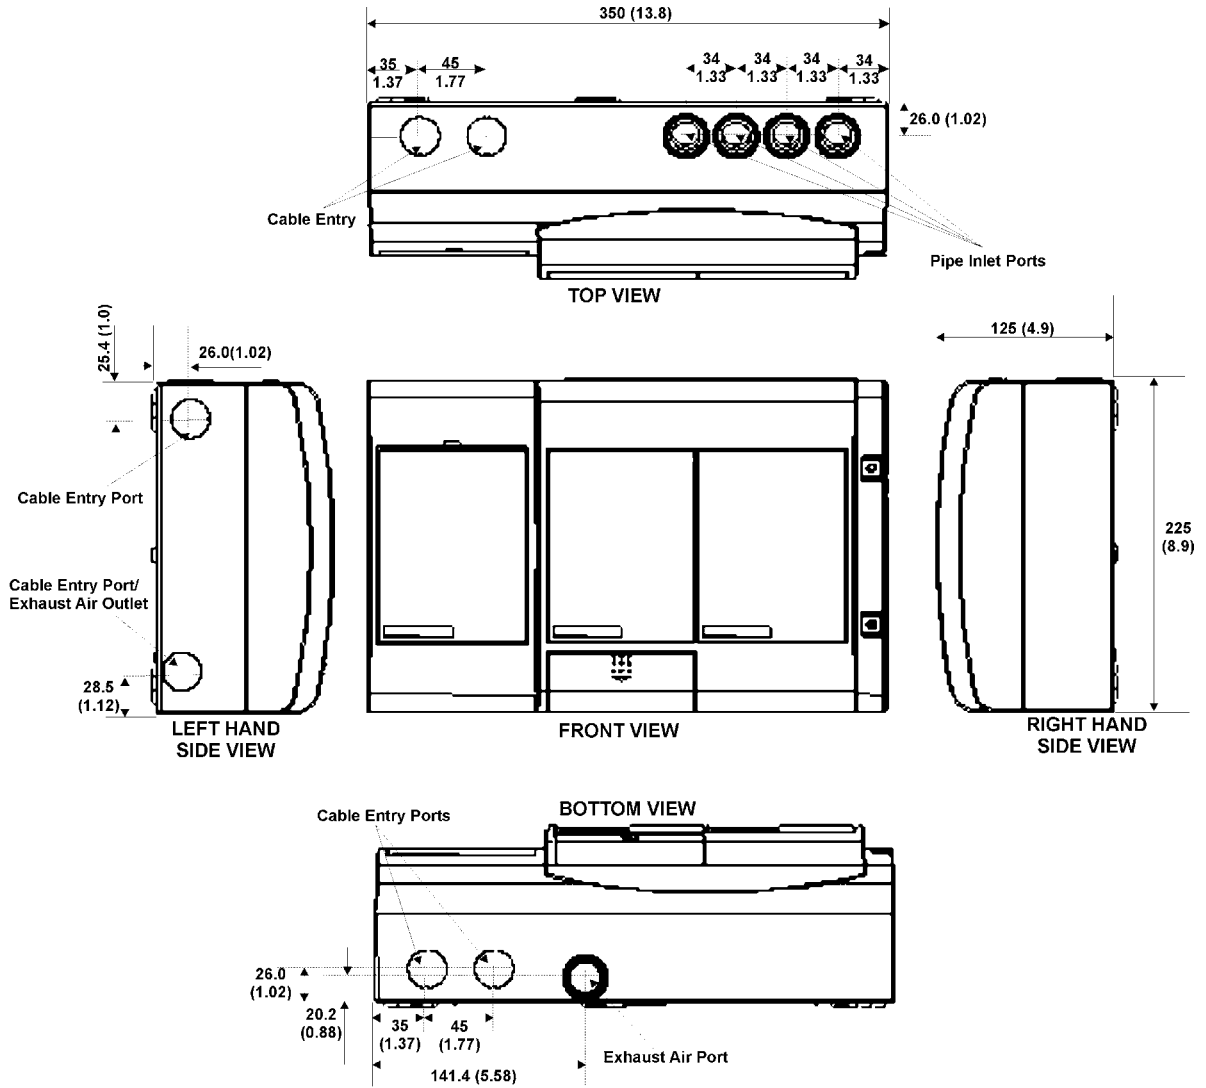


Figure 8 - LaserPLUS dimensions

LaserPLUS Ratings and Approvals

Vision Fire & Security Vision Products Pty Ltd A.B.N. 25 008 009 514 a member of the Vision Systems Group Private Bag 215, 495 Blackburn Road, Mount Waverley, VIC 3149 AUSTRALIA		5-5198 SMOKE DETECTOR FOR SPECIAL APPLICATION ALSO SUITABLE FOR OPEN AREA PROTECTION ISSUE NO. A-XXXX			LOSS PREVENTION CERTIFICATION BOARD
VESDA® LaserPLUS Detector Class 1 Laser Product Complies with 21 CFR 1040.10 and 1040.11					
Model No. VLP-		Ser. No.			
Working Voltage: 18 - 30 Vdc		Power Diss: 20W max			
Relay Contacts: 2 A max @ 30 Vdc		Patents pending			
Sensitivity Range: 0.005 %/m - 20 %/m or 0.0015 %/ft - 6 %/ft (Note: In default "UL mode", max. sensitivity is limited to 4%/ft)					
FM Hazardous Locations: Suitable for Class I Division 2, Groups A, B, C and D, T5					
Made in Australia		Tested By: SSL & VdS UL & CUL FM FDA VESDA		Standards Compliance: AS1603.8-1996 GEI 1.048:Jan 1997 UL268 FM 3230-3250 21 CFR 1010.2 AS2211 AS/NZS 3548 EN 50081-1	
				UL268A FM 3820 21 CFR 1010.3 EN60950 FCC Class B EN 50130-4	
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.					
01587_11 Mar 2001					

Figure 9 - Example of an approvals label

Default Settings

Parameter	Default Value	Range		Access Level
		Minimum	Maximum	
Event Log - Events				
• Smoke Level	Enabled	N/A	N/A	Adm
• Alarms	Enabled	N/A	N/A	Adm
• Faults	Enabled	N/A	N/A	Adm
• User Action	Enabled	N/A	N/A	Adm
Fire 2 Threshold	2% obs/m 0.625% obs/ft.	0.02% obs/m 0.0062% obs/ft.	20.% obs/m 6.25% obs/ft.	Adm
Fire 1 Threshold	0.2% obs/m 0.0625% obs/ft.	0.015% obs/m 0.0046% obs/ft.	2% obs/m 0.6250% obs/ft.	Adm
Action Threshold	0.14% obs/m 0.044% obs/ft.	0.010% obs/m 0.0031 obs/ft.	1.995% obs/m (0.6234% obs/ft.	Adm
Alert Threshold	0.08% obs/m 0.025% obs/ft.	0.005% obs/m 0.0015% obs/ft.	1.990% obs/m 0.6218% obs/ft.	Adm
Alarm Delays...Fire 2	10 seconds	0 seconds	60 seconds	Adm
Alarm Delays...Fire 1	10 seconds	0 seconds	60 seconds	Adm
Alarm Delays...Action	10 seconds	0 seconds	60 seconds	Adm
Alarm Delays...Alert	10 seconds	0 seconds	60 seconds	Adm
Delay Times	Simultaneous	Simultaneous	Cumulative	Adm
Instant Fire	Disabled	Enabled	Disabled	Adm
Change-over Times:				
• Day	07:00:00	Two seconds	11:59:58	Adm
• Night	19:00:00			
Weekend	Saturday & Sunday	Adjust to suit environment	Adjust to suit environment	Adm
Holidays:				
• First Day	1-Jan-90	Adjust to suit environment	Adjust to suit environment	Adm
• Last Day	1-Jan-90			
Smoke Change:				
• Change By	0.02% obs/m 0.0062% obs/ft.	0.005% obs/m 0.0015% obs/ft.	0.2% obs/m 0.0625% obs/ft.	Adm
• Min. Interval	2 seconds	2 seconds	10 seconds	Dst
AutoLearn	14 days 0 Hours 0 Minutes	0 Days 0 Hours 15 minutes	15 days 23 Hours 59 Minutes	Adm Adm Adm

Parameter	Default Value	Range		Access Level
		Minimum	Maximum	
Air flow Thresholds:				
• High Urgent	130%	105%	200%	Adm
• High Minor	120%	105%	200%	Adm
• Low Minor	80%	25%	95%	Adm
• Low Urgent	70%	25%	95%	Adm
• Delay	0 seconds	0 seconds	60 seconds	Adm
Flow Control:				
• Aspirator Speed	3,000rpm	3,000rpm	4,200rpm	Adm
Filter Service Interval	1825 days (5 years)	1 Day	1825 days (5 years)	Adm
Reference detector:				
• Reference Zone No.	255	Selectable	Selectable	Adm
• Dilution	100%	1%	100%	Adm
• Delay	2 minutes	0 minutes	15 minutes	Adm
Display - relay Card	None (display only - 7 relay fitted)	Selectable depending on card fitted	Selectable depending on card fitted	Adm
Relay Set	See Table 3, "Relay assignments and conditions to change state for 7 relays HTC," on page 14	See Table 3, "Relay assignments and conditions to change state for 7 relays HTC," on page 14	See Table 3, "Relay assignments and conditions to change state for 7 relays HTC," on page 14	Adm
Communications:				
Network Delay	15 seconds	10 seconds	45 seconds	DST
Preferred Port	A	N/A	N/A	DST
Health Check	45 seconds	40 seconds	60 seconds	DST
Open - ended	None	N/A	N/A	DST
UL Version	On	Selectable	Selectable	Adm

Table 2 - Factory default settings and permissible thresholds

Relays

The relays on the head termination card interface to Fire Alarm Control Panels to communicate faults, alarms and isolate states. The relays can be programmed using PC based software or the LCD Programmer and can be assigned multiple assignments. See the LCD Programmer Manual for details. relays 3 and 6 are permanently set for Urgent Fault and Fire 1 respectively and can be programmed for additional functions. The table below illustrates default assignments for relays and assignment of multiple functions. It is possible to assign the same function to more than one relay.

LaserPLUS relay Assignments and Conditions to Change States

Relays 1, 2, 4, 5 and 7 are fully configured. (For example, relay 5 could be configured to de-energize on Alert)

Note: Assignments to relays 3 and 6 are fixed to Urgent Fault and Fire 1 respectively. These relays may be assigned additional assignments.

Relay #	Default	State change	Latch
1	Isolate	Energizes when an operator isolates the detector by pressing the Isolate key on the Display Module or by activating the command via a PC or a LCD Programmer or GPI option.	Unlatched
2	Minor Fault	De-energizes when a Minor Fault is detected.	Latched
3	Urgent Fault	De-energizes when an Urgent Fault is detected.	Latched
4	Alert	Energizes when the Alert alarm is initiated.	Latched
5	Action	Energizes when the Action alarm is initiated.	Latched
6	Fire 1	Energizes when the Fire 1 alarm is initiated.	Latched
7	Fire 2	Energizes when the Fire 2 alarm is initiated.	Latched

Table 3 - Relay assignments and conditions to change state for 7 relays HTC

Relays default settings

Relay	1	2	3	4	5	6	7
Isolate	✓						
Minor Fault		✓					
Urgent Fault			✓				
Alert				✓			
Action					✓		
Fire1						✓	
Fire 2							✓

Note: A ✓ indicates the default setting. Relays 3 and 6 are permanently configured for Urgent Fault and Fire 1 respectively. All other relays can be re configured. More than one function can be configured to any relay.

Table 4 - Default relay assignment

General Purpose Input (GPI) Functions

The input terminal requires a voltage supply between 5V and 30 VDC to operate. The input is isolated from the system by an opto-coupler device. Connect the GPI + terminal to the positive output and the GPI - terminal to the ground output of the external device. The GPI can be configured to initiate a number of different actions - including, by default, a Remote Reset function. The GPI can be configured through the 'Miscellaneous' screen menu of the LCD programmer. See the LCD Programmer Manual for details.

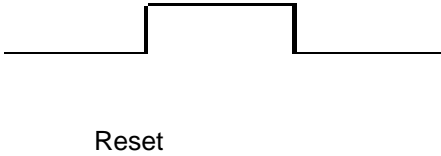
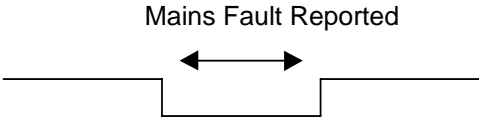
 
 
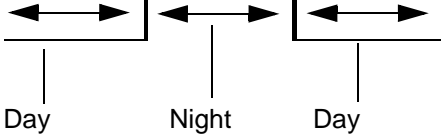
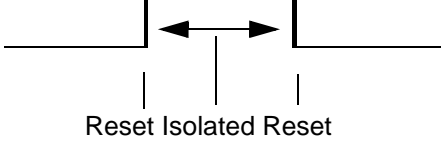

Function	State change	
External Reset	Detector Reset when ≥ 5 VDC is at this terminal.	
Mains OK	The detector monitors the state of the external power supply and responds to the following conditions. Mains OK ≥ 5 VDC at this terminal Mains Fail ≤ 2 VDC at this terminal	
Standby Mode	The detector Isolates and the aspirator turns OFF when ≥ 5 VDC is at this terminal Note: No Alarms can be generated in this state	
Isolate	The detector isolates when the voltage rises above 5 VDC and De-isolates when the voltage falls below 5V.	
Use Night-time Threshold	The detector switches over from day-time to night-time thresholds when ≥ 5 VDC are at these terminals.	
Reset+ Isolate	While power is applied to the GPI the detector is isolated. In addition, the disconnection or connection of power to the GPI resets the unit. ≥ 5 VDC detector isolates ≤ 2 VDC detector reset	
Inverted Reset	This is the reverse of the normal reset function. ≤ 2 VDC detector reset ≥ 5 VDC normal operating mode	

Table 5 - GPI functions

- Note:** The signal voltage into the GPI terminals must be between 5 to 30 VDC.
- Note:** When the detector is isolated or de-isolated as a GPI function, the status cannot be changed through the normal isolate/de-isolate functions of the Display Module or the LCD Programmer.
- Note:** When the night-time threshold is configured as a GPI function, it overrides the clock settings for day-start and night-start.

When using the standby or remote isolate options it is recommended that all displays on VESDAnet are configured to have the Isolate button disabled. When programming the display through the LCD Programmer choose Isolate Disabled from the Button Lockout menu.

1.5 Mounting the LaserPLUS

The LaserPLUS detector can be mounted onto the wall or on any suitable secure surface using the mounting bracket. It is **strongly recommended** that the detector is mounted on to the mounting bracket included with the packaging. Determine the cable entry ports and the air exhaust port before mounting the detector. Consideration should also be given to the positioning of the pipe inlet ports in relation to the existing pipe network.



Caution: Press out the relevant knockouts taking care **not to damage** the relays and terminals on the termination card.

Securing the mounting bracket

The orientation required for the LaserPLUS detector will determine how the mounting bracket is placed. To secure the mounting bracket to the mounting surface place the flat side against the surface ensuring that the lances do not sit flush to the surface. The figure below illustrates the bracket position for normal and inverted orientations. Secure the mounting bracket to the surface using appropriate fasteners, ensuring that the bracket is horizontally straight and sits flush on the surface.

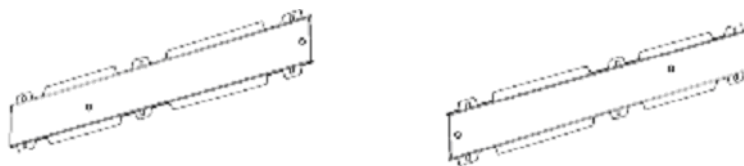


Figure 10 - The mounting bracket in normal and inverted orientation

Mounting the LaserPLUS in Normal Orientation

Place the three bridges located at the rear of the detector onto the lances of the mounting bracket. Push downwards until it locks onto the lances and engages the fitting dimples. To prevent unwanted removal of the detector, secure the detector to the mounting surface by placing two screws through the keyhole slots situated near the termination card.



Figure 11 - Mounting the LaserPLUS detector onto the mounting bracket

Mounting the LaserPLUS in the Inverted Orientation

If the detector is fitted with a LCD Programmer and/or a Display Module, re-orient these to the upright position. Mount the detector in inverted orientation onto the mounting bracket.

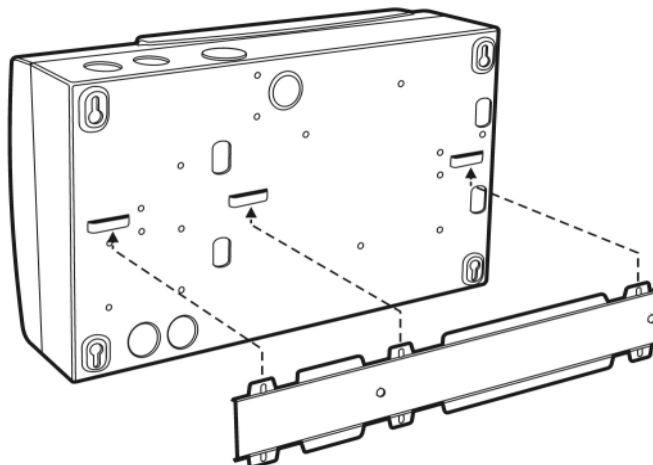


Figure 12 - Mounting the LaserPLUS detector in inverted orientation onto the mounting bracket

Mounting the LaserPLUS without a mounting bracket

In the event the detector has to be mounted directly onto the mounting surface, remove the chassis from the mounting box. See *Replacing the chassis/Air Inlet Pipe Manifold* on page 26 for details.

Use the four keyhole slots to secure the mounting box to a flat surface, ensuring that it is horizontally straight. Re-install the chassis into the mounting box. Carefully re-connect the looms and complete the cabling prior to closing the front cover. See *Internal Wiring for LaserPLUS* on page 28

Note: The laser detector chamber, head processor card and flow sensors are factory calibrated as a matched set. Separating the set and replacing it with components from another set may cause the detector to malfunction, requiring re-calibration at the factory.

Recess mounting kit

These kits are used to house a detector inside a wall cavity.

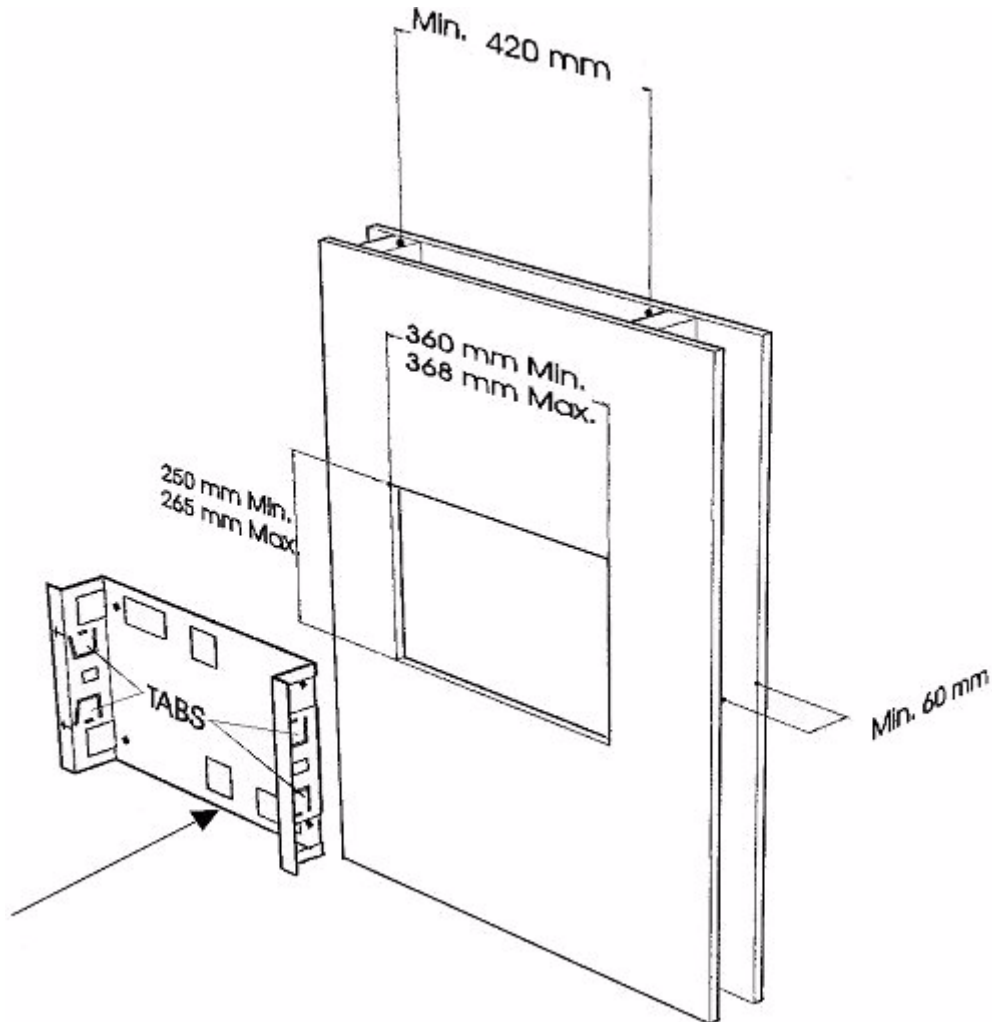


Figure 13 - Recess mounting kit

1.6 Connecting the LaserPLUS to the Pipe Network

Inlet Pipes

The inlets in the pipe inlet manifold are designed to receive a standard pipe of 25 mm (1 in) OD. A 25 mm to 1.050 inches adaptor to fit the pipe inlet manifold is included for all shipments to USA.

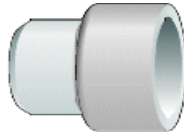


Figure 14 - Pipe Adaptor

The design of the air inlet ports allow insertion of the sampling pipe to a depth of 15 mm. (0.60 in). This prevents the sampling pipes from damaging the flow sensors. While connecting the detector to the pipe network:

- Ensure a minimum length of 500 mm (19.7 in) of straight pipe before terminating the pipes at the air inlet ports of the detector.
- Square off and de-burr the end of the sampling air pipes, ensuring the pipes are free from swarf.
- Determine the Air Inlet Ports to be used. See Table 6 on page 19 for details.
- Remove the plugs from **only** those Air Inlet Ports intended for use.
- Insert the pipes into the pipe inlet(s) ensuring a firm fit.

Note: **DO NOT** glue the inlet pipes to the pipe inlet manifold.

When configuring the detector ensure that the correct pipes in use are selected.:

No. of Pipes	Preferred Pipe Inlet Port to Use			
	Pipe 1	Pipe 2	Pipe 3	Pipe 4
1		✓		
2		✓	✓	
3		✓	✓	✓
4	✓	✓	✓	✓

Table 6 - Preferable use of pipe inlet ports

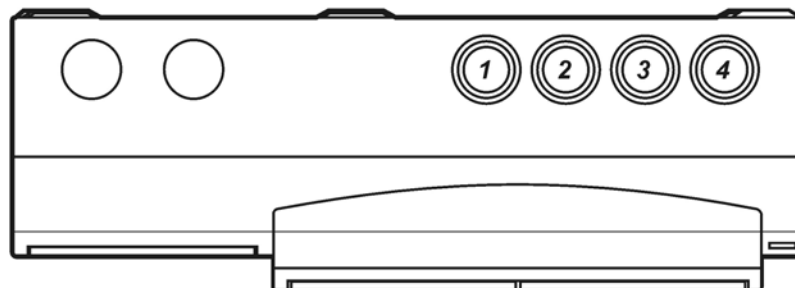


Figure 15 - Pipe inlet port numbering

Managing the Exhaust Air

To exhaust air from the detector, use the exhaust ports at the rear or at the bottom of the head mounting box. Remove the appropriate exhaust port plugs and if required, connect an outlet pipe to the exhaust manifold. In the event the side port is used as an exhaust port, press out the knockout hole. Remove the plug on the exhaust manifold, located at the divider of the chassis and the termination card. Run a 25 mm (1 inch) pipe through the side port and insert into the exhaust manifold, ensuring it is a tight fit.


Note: DO NOT glue this pipe to the exhaust manifold.

Note: Some applications may require the air exhausted from the detector to be returned to the sampling area.

1.7 LaserPLUS Wiring Connections

The Termination Card

The termination card acts as the interface for VESDAnet, power supply, relays and the General Purpose Input (GPI).

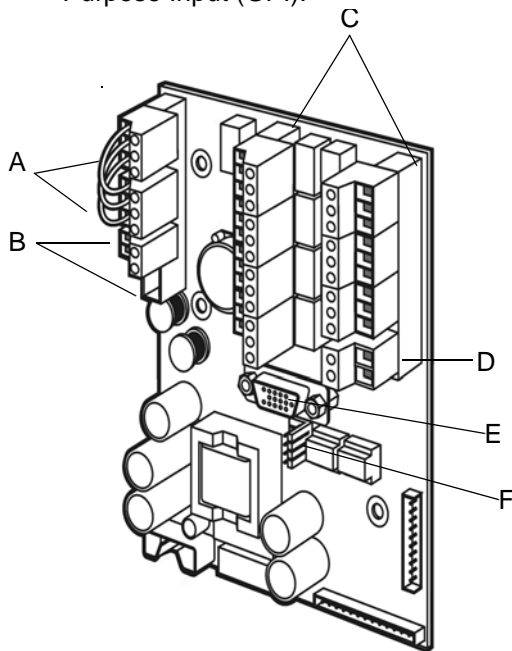

Legend	
A	VESDAnet Terminals
B	Power Terminals
C	Relay Terminals
D	GPI Terminal
E	VESDAnet Socket
F	FOK LED Connectors

Figure 16 - Terminal card illustrating relays and termination points

VESDAnet Terminals

VESDAnet is a bidirectional data communication network between connected VESDA devices. VESDAnet cables are terminated at the VESDAnet A and B Terminals on the termination card. Communication wires from another VESDA device are brought into the detector at one terminal and looped out to another device on VESDAnet from the other terminal. It is necessary to maintain the polarity throughout the network. It is recommended that RS 485 (Belden 9841 - 120 Ohm) twisted pair cables, or similar cables be used.

The LaserPLUS detector is shipped with the VESDAnet A and B terminals looped. If the detector is not to be networked with other devices, then do not disturb this loop. Remove this loop to connect the detector to the VESDAnet.

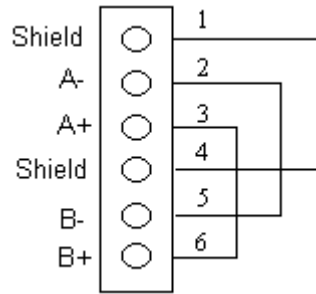


Figure 17 - Stand-alone VESDAnet connection

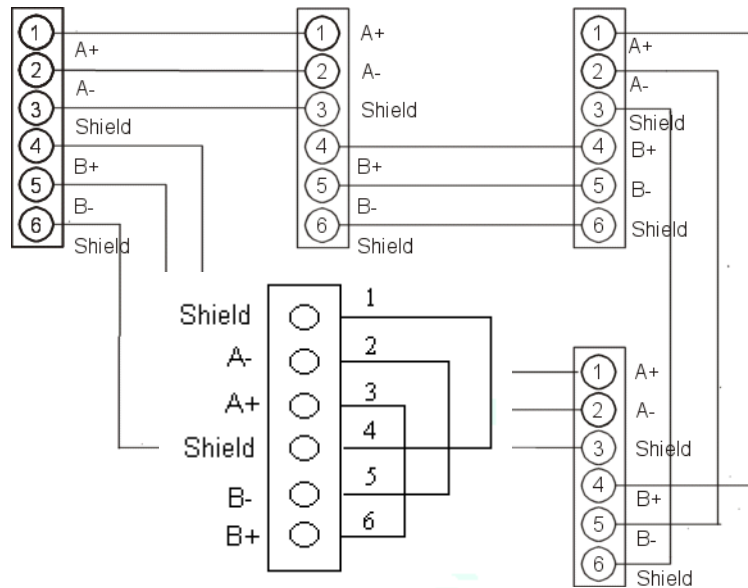


Figure 18 - An example of the wire connection for VESDAnet (closed loop for illustrative purposes only)

Connections for GPI

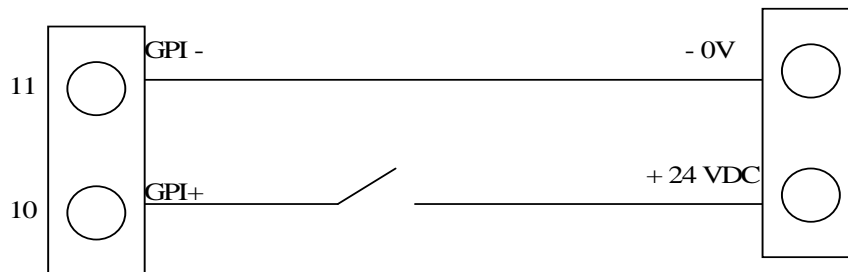


Figure 19 - Wire connection details (GPI)

1.8 Power Source

There are two sets of power terminals on the termination card. Use one set to connect to a 24 VDC power supply and if required loop out to another device via the second set. The detector has reverse polarity protection to minimize the risk of reverse power connection to the detector. For further information see *Product Specifications* on page 8.



Caution: The LaserPLUS detector will not operate when the supply is reversed.

Note: Operating the detector when DC supply voltage is outside the voltage range of 18 VDC and 30 VDC may cause damage to the device.

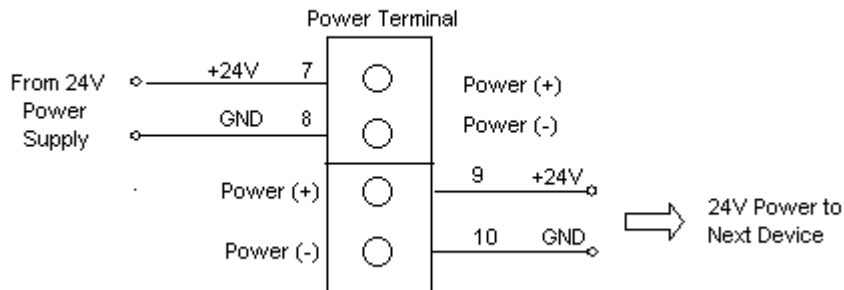


Figure 20 - Wire connection details for power terminals on relays termination card

1.9 Back Up Battery

The power supply for the LaserPLUS detector is switched to a back up battery in the event of a mains power supply disruption. The size of the back up battery is determined by local standards and codes, the total power required by the system, back up time required, allowance for reduction in capacity with age and expected temperature variations.

Note: It is recommended that batteries be inspected and changed as per manufacturer's specifications or as per your local codes and standards.

To facilitate the calculation of the backup battery size a Battery Calculation Sheet is included below.

Equipment	Normal loads @ 24 V DC			Full alarm load @ 24 V DC		
	Load mA	Qty.	Total	Load mA	Qty.	Total
Detector @ 3000rpm	240			290		
Detector @ 3500rpm	280			330		
Detector @ 4000rpm	350			400		
Detector @ 4200rpm	450			500		
Integral Display	60			80		
Integral Programmer	20 (backlight off)			80 (backlight on)		
Remote Display	90			110		
Remote Programmer	50 (backlight off)			110 (backlight on)		
Hand-held Programmer	50 (backlight off)			110 (backlight on)		
Systems relay Module	60			105		
Remote termination card - 7 relays	60			105		
Other 24V loads						
		Total mA			Total mA	
			X			X
	Standby Hours			Alarm Hours		
			=			
	Standby Capacity			Alarm Capacity		
				Total Capacity = Standby + Alarm		
				Divided by 1000 for Standby Capacity		
				Multiply by battery factor X1.25		

Table 7 - Calculating the size of backup battery

Note: If intelligent VESDA power supply is fitted it will report power failures (F15) on VESDA^{net}. VLP & VLS with GPI terminals connected will maintain their aspirator speed for an hour after the loss of mains power. After which, the aspirator speed will be limited to 3000 rpm to conserve power.

1.10 Powering Up

A LaserPLUS detector must be powered up by VESDA accredited personnel only.

After installing the LaserPLUS detector it is necessary to power up the system.

The system takes approximately 15 seconds to power up.

If the system fails to power up, check all power wires are secured to its terminals and the polarities of the power wires are correctly terminated.

On power up:

- The aspirator starts up and air is felt flowing out of the exhaust port
- If a programmer module is fitted, the word “VESDA” will be displayed
- If a Display Module is fitted, the following indicators are lit:
 - Fire Alarm Threshold indicators
 - Smoke Threshold indicators on bargraph
 - Two digit numerical display
 - Various fault indicators if there are any faults
 - System OK indicator if there are no faults

If any of the above does not happen, contact your commissioning engineer or distributor to troubleshoot.

Note: It is normal for the detector to display troubles immediately after power up. Reset the detector by pressing the reset button on the front cover of the detector to unlatch the relays and fault LEDs. The fault LEDs on the front cover will illuminate. Proceed with the preliminary systems check.

1.11 Preliminary Systems Check

A preliminary systems check is required after installing the LaserPLUS detector, before it is commissioned for use. The check can be conducted by connecting the detector to a LCD Programmer or using VConfig PRO, or VSM3 PC based software. The preliminary systems check includes:

- Conducting a VESDA^{net} communications check
- Selecting pipes in use
- Accepting factory default configurations, or changing to site requirements
- Normalizing the air flow
- Conducting a basic pass/fail smoke test
- For details on preliminary systems check refer to the LCD Programmer or the relevant software manuals

Refer to the VESDA LCD Programmer and Commissioning Guides for further details.

1.12 Maintaining the LaserPLUS detector

To maintain the VESDA LaserPLUS at its peak performance the maintenance schedule given below should be followed. Maintenance can be conducted by the original installer, a VESDA distributor, or a service contractor. To work effectively the LaserPLUS detector needs to be supported by a well designed pipe network. The VESDA Maintenance Manual contains a schedule for pipe network maintenance.

Maintenance Check	Quarterly	Six Monthly	Annual	Every Two Years
Power Supply	✓			
Check Pipe Network		✓		
Filter Inspection			✓	
Pipe Integrity Smoke Test			✓	
Check Pipe Flow			✓	
Clean Sampling Point.				✓
Flush Pipe Network				✓

Table 8 - Maintenance schedule for LaserPLUS detector

Note: The frequency of maintenance checks could vary depending upon local codes and standards and the environment of the installation.




Caution: While a VESDA Zone is isolated, no fire warnings will be issued by the LaserPLUS detector and any fire will go undetected. Prior to any maintenance or testing:

- Inform appropriate supervising authority about the risk associated with isolating a VESDA Zone.
- Check to see if the LaserPLUS detector is also being used by third party
- Ensure that any ancillary devices dependent on the LaserPLUS detector are enabled by the isolation before work is begun.

Replacing the chassis/Air Inlet Pipe Manifold


1. Isolate unit by pressing the Isolate button on the zone configured display or by selecting **Isolate Zone** from the **Zone** menu in VConfig Pro or VSM3. This isolates the outputs from the unit to a Fire Alarm Control Panel.
2. Save node configuration by using VConfig Pro or VSM3, highlight the detector in the Device Tree Window and select **Save Node Configuration** from the **Device** menu.
3. Remove power by disconnecting the power cables.
4. Remove the front panel by first opening the cover plate and screw covers, then unscrew the front cover.

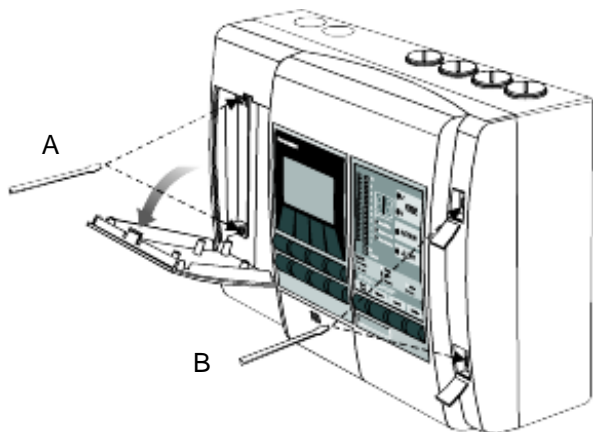

Legend	
A	Cover plate screws
B	Screw covers

Figure 21 - Removing front cover

5. Disconnect data cables connecting the chassis assembly to the termination card, front panel modules (if fitted) and manifold.

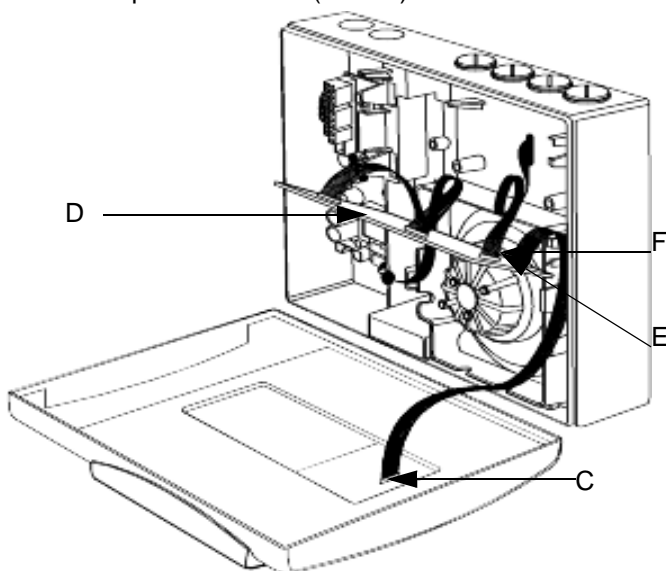

Legend	
C	Termination cable
D	Head processor card
E	Flow sensor cable
F	Scanner cable

Figure 22 - Remove data cables

6. Unscrew the three manifold retaining screws
7. Remove chassis, holding the chassis by the aspirator assembly. Release the two lower locking tabs by lifting the chassis upward and pulling outward. Use a screwdriver to assist with tab release.

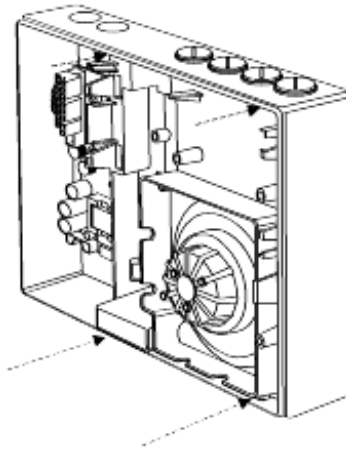


Figure 23 - Remove the chassis



Caution: Care must be taken not to damage the cable running to the manifold.

Note: The chassis consists of the Detection Chamber, head processor card and flow sensors. These are factory calibrated as a matched set and must not be separated. Separating the set and replacing it with components from another LaserSCANNER will cause the detector to malfunction. This will require the chassis to be returned to the factory.

8. Disconnect the flow sensor lead.
9. Unscrew manifold retaining screws.

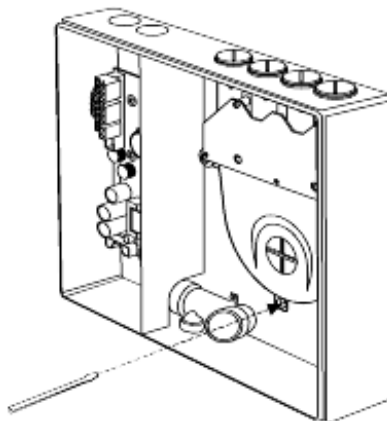


Figure 24 - Removing pipe inlet manifold

10. Remove the manifold by sliding it downward, away from the pipe network.
11. Attach the replacement manifold and chassis by reversing the procedure above.
12. Configure the node using VConfig PRO or VSM3 by highlighting the detector in the Device Tree window and highlighting 'Restore Node Configuration' from the device menu, or reprogram the detector using the LCD Programmer.

Note: Data cables must be plugged and unplugged only after power has been removed. Ensure all connectors are seated correctly before applying power to unit. Failure to observe this requirement may cause data corruption that requires factory recalibration.

Internal Wiring for LaserPLUS

The table below provides the cable loom interconnecting details inside the detector. Use the look up table in conjunction with the attached circuit diagram to assist with maintenance.

From	To	Connector Name on CPU	Cable Name	# Pins
CPU card	Filter Switch Card	Filter switch or X12	Fil SW	5
CPU card	Termination or X1 connector on termination card	Termination or X1	Termination	13
CPU card	Relays or X2 connector on termination card	Relays or X3	Relays	10
CPU card	Detection chamber Do not disconnect	Pre-amp or X9	Pre Amp	6 Wire ribbon
CPU card	Detection chamber	Laser or X10	Laser	6
CPU card	Aspirator	Aspirator or X11		5
CPU card	Term or X1 connector on programmer or display	Expansion or X2		11

Table 9 - Interconnecting loom details

Note: All connectors are polarized and can only be inserted one way into the socket.

Note: Do not attempt to force the connector into its socket. If there is any difficulty, reverse the orientation of the connector before inserting again.

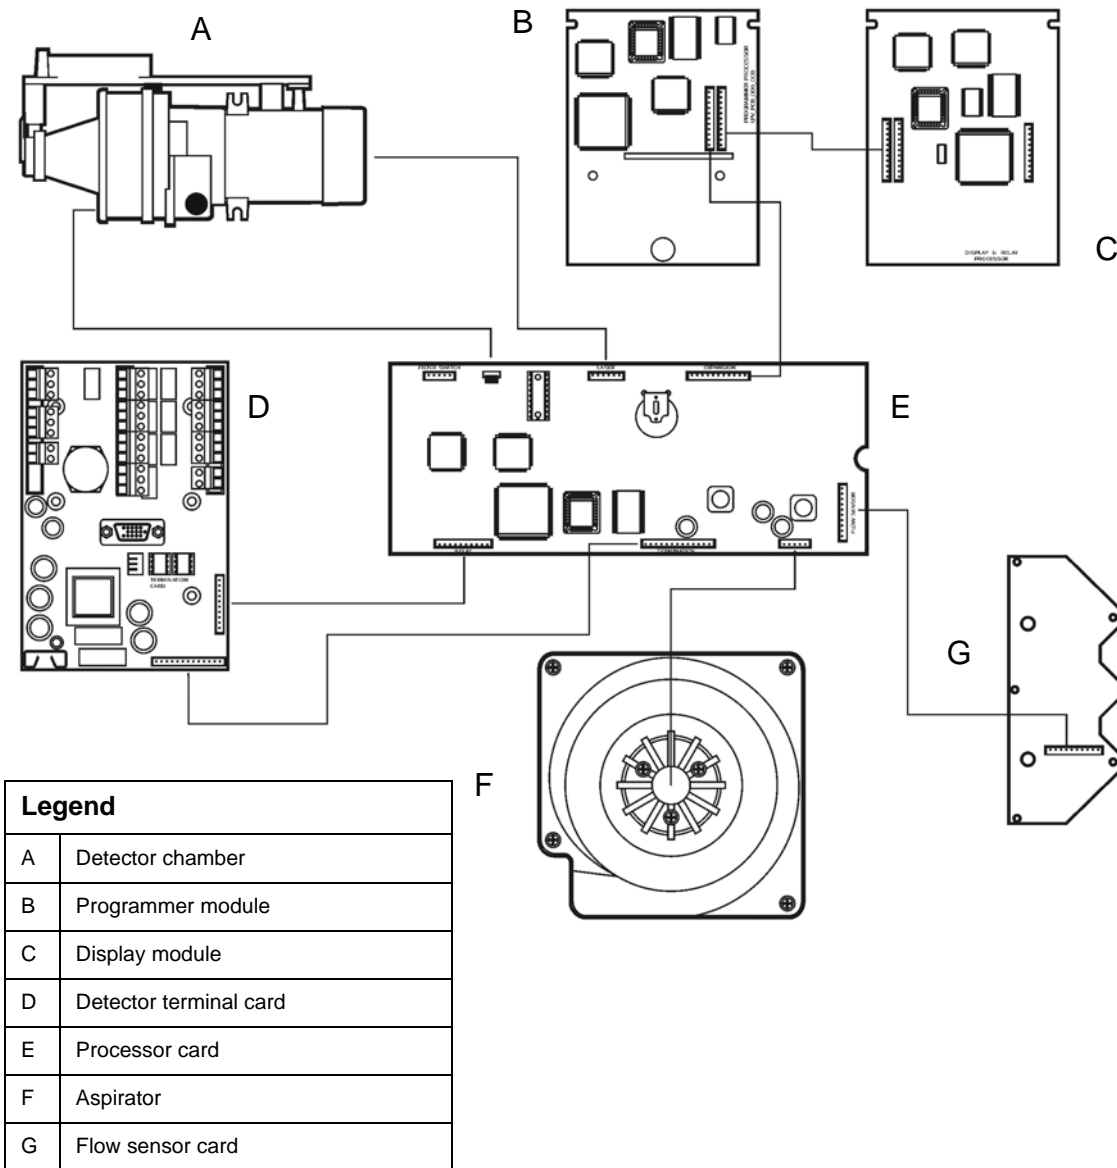


Figure 25 - Internal wiring diagram

Spare Parts

On larger sites having multiple detectors it is advisable to stock certain critical spare parts. A suggested list of spare parts with quantities is given below:

Part No.	Description	Number of detectors Installed to warrant ONE spare part	
		Normal Service	Mission Critical
VSP-000	Blank Plate, non-EMC painted, with VESDA logo	N/A	N/A
VSP-001	LCD Programmer	50	20
VSP-002	Display Module	50	20
VSP-005	Filter Cartridge	20	10
VSP-006	VLP detector chassis assembly complete with manifold	50	20
VSP-011	Recess Mounting Kit for VLP	N/A	N/A
VSP-013	Detector Cover Assembly complete with EMC shields	N/A	N/A
VSP-014	7-relay termination card	50	20
VSP-015	LaserPLUS detector Aspirator Assembly	N/A	20
VSP-019	Filter Cover	N/A	N/A
VSP-100	Blank Plate with FOK LEDs and Logo	If Applicable	If Applicable
VSP-200	Blank Plate, EMC Painted, without Logo	If Applicable	If Applicable

Table 10 - Suggested spare parts stock

Index

A

Action	5
Action relay	14
Action Threshold	12
Air flow normalizing	24
Air flow Thresholds.....	13
Airflow fault	5
Alarm Delays	
Alert	12
Fire 1.....	12
Fire 2.....	12
Alarm level	
Action	5
Alert	5
Fire 1.....	5
Fire 2.....	5
Alarm levels	5
Alert	5
Alert relay	14
Alert Threshold	12
Aspirator	1
Aspirator Speed	13
AutoLearn	12

B

Back up battery	22
Bar graph	5
Battery back up	22

C

Change-over Times	12
Chassis/Air Inlet Pipe Manifold	26
Chassis/Air Inlet Pipe Replacement	26

Check Pipe Flow	25
Check Pipe Network	25
Clean Sampling Point	25
Communications	13
Connecting LaserPLUS to Pipe Network.	19
Conventions	ii

D

Default settings	12
Delay	13
Delay Times	12
Detection chamber	2
Detector Chamber	1
Detector Front Cover	4
Dilution	13
Dimensions	8
Dimensions - LaserPLUS	10
Display - Relay Card	13
Display Module	3, 4

E

Exhaust Air	20
External Reset	15

F

Fault	
Minor.....	4
System	4
Urgent	4
Zone	4
Fault lights	24
Faults LED	5
Features list	1

Filter fault	5	Isolate button	6
Filter Inspection	25	Isolate LED	5
Filter Service Interval	13	Isolate relay	14
Fire 1	5		
Fire 1 relay	14	L	
Fire 1 Threshold	12		
Fire 2	5	Laser detection chamber	2
Fire 2 relay	14	LaserPLUS	
Fire 2 Threshold	12	Components	7
Fire and OK LEDs	3	Default settings	12
First Stage Air Filter	1	Exploded view	7
Flow Control	13	Maintenance	25
Flush Pipe Network	25	Mounting	16
FOK	3	Ratings and approvals	11
		Specifications	8
		Wiring connections	20
		LaserPlus	
G		Systems Check	24
		LCD Programmer	3
GPI connection	21	LCD programmer	6
GPI Functions	15	Low Minor	13
		Low Urgent	13
H			
		M	
Health Check	13		
High Minor	13	Mains OK	15
High Urgent	13	Maintenance	25
Holidays	12	Minor fault	4
		Minor fault relay	14
I		Mode button	6
		Mode/Test button	6
Inlet Pipes	19		
Instant Fire	12	N	
Internal Wiring	28		
Introduction	1	Network Delay	13
Inverted Reset	15	Network fault	5
IP Rating	9	Normalizing air flow	24
Isolate	15	Numerical Display	6

O

OK LED	5
Open - ended Loop	13
Operating Temperature	8
Optical surfaces	2

P

Pipe Inlet Manifold	1
Pipe Integrity Smoke Test	25
Pipe Size	8
Power.....	15
Power Consumption	8
Power fault	5
Power Source.....	22
Power Supply.....	25
Powering up.....	24
Preferred Port	13
Preliminary Systems Check	24
Programmer.....	6
Push Button Keys.....	6

R

Reference Zone No.	13
Relay Set	13
Relays	8, 13
Relays - default settings	14
remote location	
Display Module - Introduction to LaserPLUS Detector	4
Reset Button	24
Reset button	6
Reset+Isolate	15

S

Sampling Pipe Network	8
Second Stage Filter.....	2
Sensitivity.....	6
Silence button	6
Smoke Change.....	12
Smoke Level	12
Smoke level	6
Socket - VESDAnet	6
Spare parts	30
Specifications	8
Standby Mode	15
Starting Up	24
System fault.....	4, 5

T

Termination Card.....	20
Threshold Indicators	5
Threshold Setting	9

U

UL Version.....	13
Ultra clean air.....	2
Unlatch relays	24
Urgent Fault	14
Urgent fault.....	4, 5
Use Night-time Threshold	15

V

VESDAnet.....	6
VESDAnet closed Loop	21
VESDAnet Terminals.....	20

Voltage	8	Wiring Connections	20
----------------------	---	---------------------------------	----

W

Weekend times	12
Weight	8

Z

Zone fault	4, 5
Zone number	6