

# VESDA VLF-500

## Product Guide

November 2017

Document: 7209

Revision: A

Build: 1

Part Number: 20297



## Intellectual Property and Copyright

This document includes registered and unregistered trademarks. All trademarks displayed are the trademarks of their respective owners. Your use of this document does not constitute or create a licence or any other right to use the name and/or trademark and/or label.

This document is subject to copyright owned by Xtralis AG ("Xtralis"). You agree not to copy, communicate to the public, adapt, distribute, transfer, sell, modify or publish any contents of this document without the express prior written consent of Xtralis.

## Disclaimer

The contents of this document is provided on an "as is" basis. No representation or warranty (either express or implied) is made as to the completeness, accuracy or reliability of the contents of this document. The manufacturer reserves the right to change designs or specifications without obligation and without further notice. Except as otherwise provided, all warranties, express or implied, including without limitation any implied warranties of merchantability and fitness for a particular purpose are expressly excluded.

## General Warning

This product must only be installed, configured and used strictly in accordance with the General Terms and Conditions, User Manual and product documents available from Xtralis. All proper health and safety precautions must be taken during the installation, commissioning and maintenance of the product. The system should not be connected to a power source until all the components have been installed. Proper safety precautions must be taken during tests and maintenance of the products when these are still connected to the power source. Failure to do so or tampering with the electronics inside the products can result in an electric shock causing injury or death and may cause equipment damage. Xtralis is not responsible and cannot be held accountable for any liability that may arise due to improper use of the equipment and/or failure to take proper precautions. Only persons trained through an Xtralis accredited training course can install, test and maintain the system.

## Liability

You agree to install, configure and use the products strictly in accordance with the User Manual and product documents available from Xtralis.

Xtralis is not liable to you or any other person for incidental, indirect, or consequential loss, expense or damages of any kind including without limitation, loss of business, loss of profits or loss of data arising out of your use of the products. Without limiting this general disclaimer the following specific warnings and disclaimers also apply:

### Fitness for Purpose

You agree that you have been provided with a reasonable opportunity to appraise the products and have made your own independent assessment of the fitness or suitability of the products for your purpose. You acknowledge that you have not relied on any oral or written information, representation or advice given by or on behalf of Xtralis or its representatives.

### Total Liability

To the fullest extent permitted by law that any limitation or exclusion cannot apply, the total liability of Xtralis in relation to the products is limited to:

- i. in the case of services, the cost of having the services supplied again; or
- ii. in the case of goods, the lowest cost of replacing the goods, acquiring equivalent goods or having the goods repaired.

### Indemnification

You agree to fully indemnify and hold Xtralis harmless for any claim, cost, demand or damage (including legal costs on a full indemnity basis) incurred or which may be incurred arising from your use of the products.

### Miscellaneous

If any provision outlined above is found to be invalid or unenforceable by a court of law, such invalidity or unenforceability will not affect the remainder which will continue in full force and effect. All rights not expressly granted are reserved.

## Scope

This Product Guide describes the features of the VESDA VLF-500, the specifications and functions, installation requirements, commissioning and operation procedures. A schedule for preventative maintenance is also provided.

## Document Conventions

The following typographic conventions are used in this document:

| Convention     | Description                                                                                                             |
|----------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Bold</b>    | <b>Used to denote:</b> emphasis.<br>Used for names of menus, menu options, toolbar buttons                              |
| <i>Italics</i> | <b>Used to denote:</b> references to other parts of this document or other documents. Used for the result of an action. |

The following icons are used in this document:

| Convention                                                                         | Description                                                                                                                                                                             |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <b>Caution:</b> This icon is used to indicate that there is a danger to equipment. The danger could be loss of data, physical damage, or permanent corruption of configuration details. |
|   | <b>Warning:</b> This icon is used to indicate that there is a danger of electric shock. This may lead to death or permanent injury.                                                     |
|  | <b>Warning:</b> This icon is used to indicate that there is a danger of inhaling dangerous substances. This may lead to death or permanent injury.                                      |

## Contact Us

|                                  |                  |
|----------------------------------|------------------|
| <b>UK and Europe</b>             | +44 1442 242 330 |
| <b>D-A-CH</b>                    | +49 431 23284 1  |
| <b>The Americas</b>              | +1 781 740 2223  |
| <b>Middle East</b>               | +962 6 588 5622  |
| <b>Asia</b>                      | +86 21 5240 0077 |
| <b>Australia and New Zealand</b> | +61 3 9936 7000  |
| <b>www.xtralis.com</b>           |                  |

## Codes and Standards Information for Air Sampling Smoke Detection

We strongly recommend that this document is read in conjunction with the appropriate local codes and standards for smoke detection and electrical connections. This document contains generic product information and some sections may not comply with all local codes and standards. In these cases, the local codes and standards must take precedence. The information below was correct at time of printing but may now be out of date, check with your local codes, standards and listings for the current restrictions.

### FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures; re-orientate or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment to a power outlet which is on a different power circuit to the receiver or consult the dealer or an experienced radio/television technician for help.

### FDA

This Xtralis product incorporates a laser device and is classified as a Class 1 laser product that complies with FDA regulations 21 CFR 1040.10. The laser is housed in a sealed detector chamber and contains no serviceable parts. The laser emits invisible light and can be hazardous if viewed with the naked eye. Under no circumstances should the detector chamber be opened.

### FM Hazardous Applications

3611 Hazardous Approval Warning: Exposure to some chemicals may degrade the sealing of relays used on the detector. Relays used on the detector are marked "TX2-5V", "G6S-2-5V" or "EC2-5NU".

VESDA detectors must not be connected or disconnected to a PC while the equipment is powered in an FM Division 2 hazardous (classified) location (defined by FM 3611).

### FM Approved Applications

The product must be powered from VPS-100US-120 or VPS-100US-220 only.

### ONORM F3014

ONORM F3014, transport times for all tubes (including capillaries) must not exceed 60 seconds from any hole. This means that the predesigned pipe networks that include capillaries cannot be used.

### AS1603.8

The performance of this product is dependent upon the configuration of the pipe network. Any extensions or modifications to the pipe network may cause the product to stop working correctly. You must check that ASPIRE approves alterations before making any changes. ASPIRE is available from your VESDA ASD distributor.

### AS1851.1 2005

Maintenance Standards. Wherever this document and the AS1851.1 differ, AS1851.1 should be followed in preference to this document.

## Regional Regulatory Requirements and Notices

### UL

For open area protection the fire alarm threshold (signal) that initiates an evacuation procedure via the Fire Alarm Panel must not be set less sensitive than 0.625%/ft. The detector can send this signal via the Fire Alarm Panel Output signal or the Pre-alarm output signal.

Through validation testing, Underwriters Laboratories Inc. has verified that VESDA ECO gas detectors, when installed within the sample pipe network, present no significant effects on the smoke detection performance of VESDA. The use of the ASPIRE calculation software is required to verify system design performance with all devices included in the design.

### ActivFire

The fire alarm threshold (signal) that initiates an evacuation procedure via the Fire Alarm Panel must not be set less sensitive than 1%/m.

### European Installations

The product must use a power supply conforming to EN54: Part 4.

### EN54-20

The product must use a power supply conforming to EN 54-4.

The product is compliant with EN 54-20 sensitivity requirements provided the following conditions are met:

- For a Class A detector, hole sensitivity must be better than 1.5% obscuration/m and transport time less than 90 seconds
- For a Class B detector, hole sensitivity must be better than 4.5% obscuration/m and transport time less than 90 seconds
- For a Class C detector, hole sensitivity must be better than 10% obscuration/m and transport time less than 90 seconds

The product is compliant with EN 54-20 flow monitoring requirements provided the following conditions are met:

- The minor low and minor high flow thresholds should be set at 80% and 120% respectively
- The flow through the detector predicted by ASPIRE should be in the range 12 to 54 lpm

These limits should be verified using ASPIRE during the design of the sampling pipe network.

### Additional information:

- Class A detectors passed EN 54-20 approvals testing with 30 holes and 0.05% obscuration/m detector sensitivity
- Class B detectors passed EN 54-20 approvals testing with 30 holes and 0.15% obscuration/m detector sensitivity
- Class C detectors passed EN 54-20 approvals testing with 30 holes and 0.32% obscuration/m detector sensitivity

## Product Listings

- UL
- ULC
- FM
- CCC
- ActivFire
- CE
- LPCB
- VdS
- VNIPO
- NF
- EN 54-20

Regional approvals listings and regulatory compliance vary between VESDA product models. Refer to [www.xtralis.com](http://www.xtralis.com) for the latest product approvals matrix.

Document: 7209

Revision: A

Build: 1

Part Number: 20297

# Table of Contents

|          |                                             |           |
|----------|---------------------------------------------|-----------|
| <b>1</b> | <b>Introduction</b>                         | <b>3</b>  |
| 1.1      | General Notification                        | 3         |
| <b>2</b> | <b>Installation</b>                         | <b>5</b>  |
| 2.1      | Dimensions                                  | 5         |
| 2.2      | Mounting                                    | 6         |
| 2.3      | Installing the Detector                     | 7         |
| 2.4      | Detector Removal                            | 10        |
| 2.5      | Air inlet pipe connections                  | 11        |
| 2.6      | Exhaust air pipe connections                | 11        |
| 2.7      | Wiring Connections                          | 12        |
| 2.8      | RS232-compatible serial port                | 17        |
| 2.9      | Installation Checklist                      | 18        |
| <b>3</b> | <b>Sampling Pipe Network Design</b>         | <b>19</b> |
| 3.1      | Single Pipe Network                         | 20        |
| 3.2      | Branched Pipe Network                       | 21        |
| 3.3      | Return air sampling (return grilles)        | 22        |
| 3.4      | Installation Considerations                 | 23        |
| 3.5      | Air sampling in a duct                      | 23        |
| <b>4</b> | <b>Commissioning</b>                        | <b>25</b> |
| 4.1      | General                                     | 25        |
| 4.2      | AutoLearn Smoke                             | 25        |
| 4.3      | AutoLearn Flow                              | 26        |
| 4.4      | Xtralis VSC                                 | 26        |
| 4.5      | Commissioning smoke test                    | 26        |
| <b>5</b> | <b>Detector Overview</b>                    | <b>27</b> |
| 5.1      | Features                                    | 27        |
| 5.2      | Description                                 | 27        |
| 5.3      | Applications                                | 27        |
| <b>6</b> | <b>Product Interface</b>                    | <b>29</b> |
| 6.1      | Front View                                  | 29        |
| 6.2      | Instant Recognition Display                 | 30        |
| 6.3      | Controls and Indicators                     | 31        |
| 6.4      | Smoke level & Instant Fault Finder displays | 34        |
| <b>7</b> | <b>Factory Defaults</b>                     | <b>37</b> |
| <b>8</b> | <b>Specifications</b>                       | <b>39</b> |
| 8.1      | Power Supply                                | 39        |
| 8.2      | Case                                        | 39        |
| 8.3      | Operating Conditions                        | 39        |
| 8.4      | Sampling Network                            | 39        |
| 8.5      | Area Covered                                | 40        |
| 8.6      | Field Wiring                                | 40        |
| 8.7      | Interfaces                                  | 40        |
| 8.8      | Alarm Ranges                                | 40        |
| 8.9      | Display                                     | 40        |
| 8.10     | Event Log                                   | 40        |
| 8.11     | AutoLearn Smoke and Flow                    | 40        |
| 8.12     | Referencing                                 | 40        |
| 8.13     | Ordering Information                        | 41        |
| <b>9</b> | <b>Maintenance</b>                          | <b>43</b> |

|              |                                                            |           |
|--------------|------------------------------------------------------------|-----------|
| 9.1          | Overview .....                                             | 43        |
| 9.2          | Maintenance Schedule .....                                 | 44        |
| 9.3          | Replace the Filter Cartridge .....                         | 45        |
| 9.4          | Aspirator Replacement .....                                | 46        |
| <b>10</b>    | <b>Commissioning Forms .....</b>                           | <b>47</b> |
| 10.1         | VESDA Commissioning Form .....                             | 47        |
| 10.2         | VLF-500 Detector Commissioning Form .....                  | 48        |
| 10.3         | Display/Relay Configuration .....                          | 49        |
| 10.4         | Relay Configuration .....                                  | 49        |
| 10.5         | VESDAnet Interface Card (VIC-010) (plug-in) .....          | 49        |
| 10.6         | VESDAnet Multi-Function Relay Card (VIC-020/VIC-030) ..... | 49        |
| 10.7         | Ancillary Devices .....                                    | 50        |
| 10.8         | ASPIRE Data .....                                          | 50        |
| 10.9         | Smoke Test .....                                           | 50        |
| 10.10        | Air Sampling Test Results .....                            | 50        |
| <b>11</b>    | <b>Glossary .....</b>                                      | <b>53</b> |
| <b>12</b>    | <b>Frequently Asked Questions (FAQ) .....</b>              | <b>55</b> |
| <b>Index</b> | <b>.....</b>                                               | <b>57</b> |

# 1 Introduction

The VESDA VLF-500 early warning air sampling smoke detector incorporates world leading VESDA very early warning laser based aspirated smoke detection technology. It provides localized fire risk management solutions for small, critical environments. The VLF-500 monitors areas up to 500 m<sup>2</sup> (5380 sq. ft.) dependant on local codes and standards. The VESDA VLF complements the existing VESDA detector range and has been designed to provide simple installation and commissioning, absolute smoke detection and reliable and consistent response to smoke events without being affected by false alarms.

## 1.1 General Notification

**Note:** Prior to carrying out any work or maintenance on the VESDA VLF take the necessary steps to advise the monitoring authority that power may be removed and the system disabled.



**Caution:** Electrostatic discharge precautions need to be taken prior to removing the front cover from the detector otherwise damage may occur to the unit.



**Attention :** Il convient de prendre des précautions contre les décharges électrostatiques avant d'enlever le capot avant du détecteur, sinon l'appareil risque d'être endommagé.

This page is intentionally left blank.

## 2 Installation

The VESDA VLF detector is shipped with all the components necessary for installation with the exception of pipe and associated materials.

Components include:

- 1 VESDA VLF detector with fitted exhaust deflector
- 1 Mounting bracket
- 1 End of Line resistor (refer to GPI – General Purpose Input (Terminals 1 & 2) on page 13)
- 2 M4 x 20 mm locking screws
- this Product Guide

Check all components for damage and refer any concerns to your VESDA distributor.

### Notes:

- Removing the rear cover of the detector will void your warranty.
- Opening or removing the sealed laser detection chamber will void your warranty.

### 2.1 Dimensions

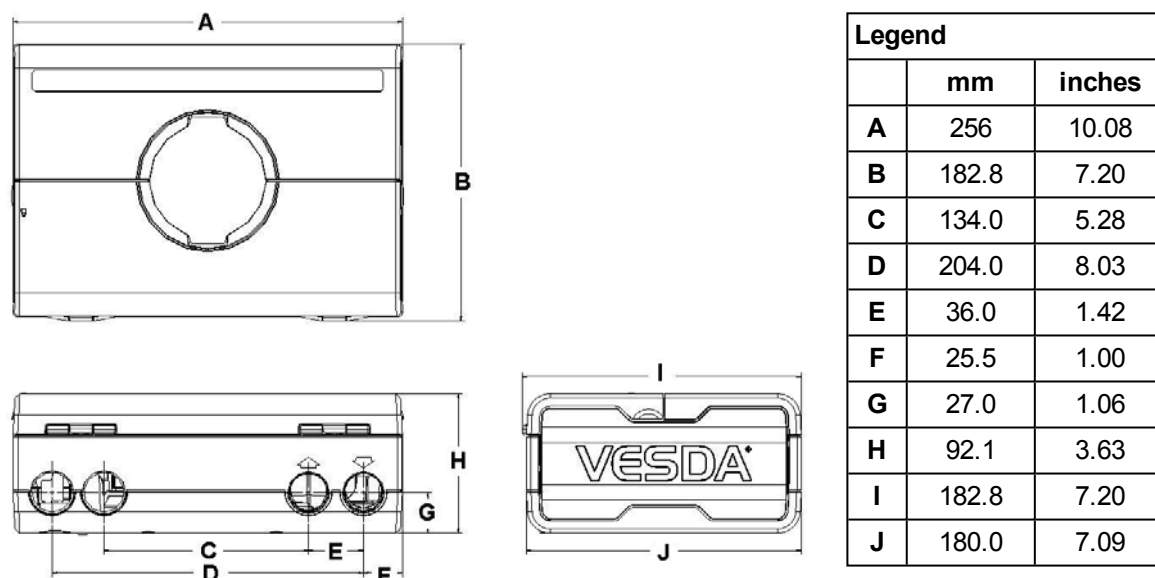


Figure 2-1: Dimensions of the Detector

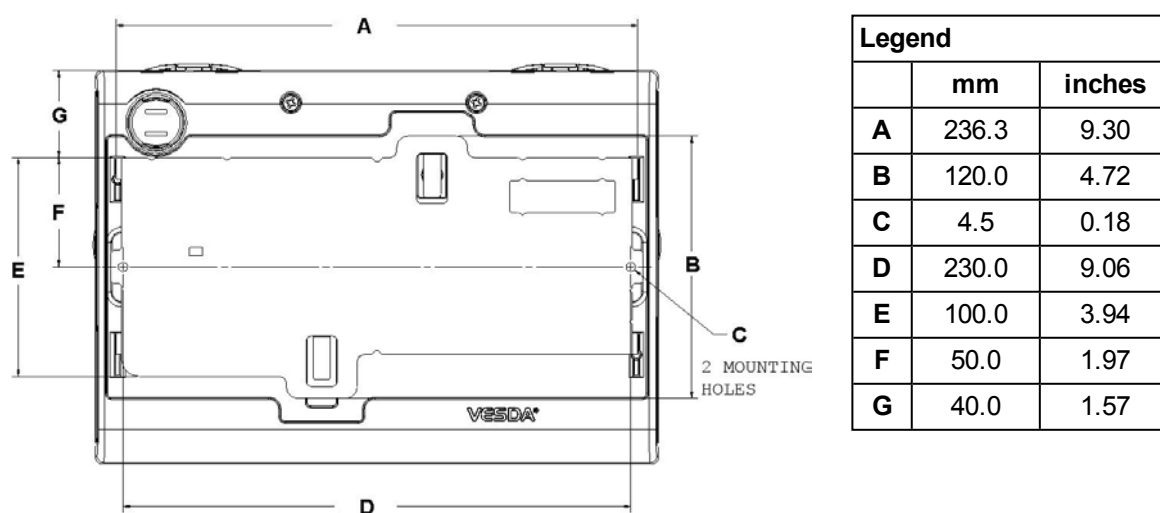


Figure 2-2: Dimensions of the Detector with Mounting Bracket

## 2.2 Mounting

The VESDA VLF can be installed upright, inverted or horizontally.

**Note:** Ensure the smoke detector is mounted away from obstructions and below ceiling level.



**Caution:** An exhaust deflector must be fitted for upright mounting, unless the exhaust port is connected to a return air pipe.



**Attention :** Le déflecteur d'échappement est prévu pour un montage à la verticale, à moins que l'orifice d'échappement ne soit raccordé à un tuyau de reprise d'air.




**Caution:** Do not install this unit on its side. There is a risk of particulate and condensation collecting on critical elements of the detector chamber reducing the detectors performance.



**Attention :** N'installez pas le détecteur sur le côté. Les particules et la condensation risqueraient de s'accumuler sur des éléments critiques de la chambre de détection, ce qui réduirait les performances du détecteur.

Ensure that there is sufficient clearance to mount the detector, noting the location of air sampling pipes and cable entry points. Owing to the rigid nature of the plastic pipe, installation must provide for sufficient movement in all pipework (air inlet, air exhaust and cable pipes) to allow pipe ends to be easily fitted and removed.

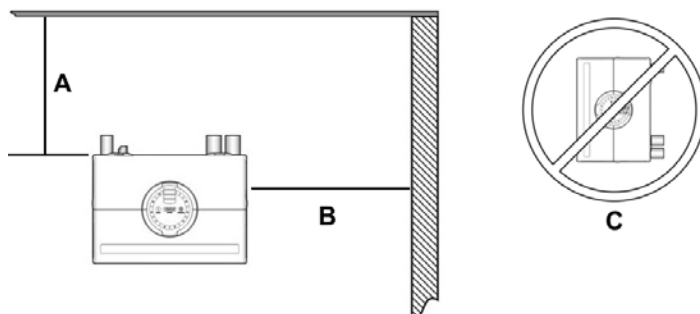

| Legend   |                                                                                     |
|----------|-------------------------------------------------------------------------------------|
| <b>A</b> | Min. 200 mm (8 in.) below ceiling level                                             |
| <b>B</b> | Min. 500 mm (20 in.) from a wall or obstruction to allow access to the security tab |
| <b>C</b> | Do not install the detector on its side                                             |

Figure 2-3: Mounting Location

## 2.3 Installing the Detector

In all installation cases the mounting bracket must be fitted (upright) as shown in Figure 2-4 on page 8.

**Note:** Ensure the mounting surface is flat. This will permit an air tight seal to be achieved between the sampling pipe and the tapered air ports on the detector.



**Warning:** Prior to drilling the attachment holes for the mounting bracket, ensure that all mounting surfaces (i.e. walls, cabinet sides, etc.) are clear of electrical wiring and plumbing.



**Avertissement :** Avant de percer les trous de fixation pour le support de montage, assurez-vous que toutes les surfaces de montage (c'est-à-dire les murs, les côtés des armoires, etc.) ne comportent pas de câbles électriques ni de tuyaux.

Where the pipe network and cabling are already fitted, the bracket can be used to aid alignment of the detector with the pipes. The Installation procedure below explains this process.

### 2.3.1 Installation Procedure

Cut the air inlet pipe and exhaust pipe (if used) at 90°, and to the same length (for normal and inverted mounting). Remove all rough edges. This is critical to obtain an air tight seal with the smoke detector.

1. Position the air inlet centerline mark (A) of the mounting bracket against the end of the air inlet pipe. Refer to Figure 2-4 below.
2. In the cut out section of the mounting bracket mark a line across the top of the cut out if metric size pipe is used or mark a line across the bottom of the cut out if Imperial size pipe is used.
3. Slide the mounting bracket down (up for inverted mounting) until the top of the bracket aligns with the marked line.
4. Mark off and drill the 2 bracket mounting holes (H).
5. Screw the bracket to the wall.
6. Hook the smoke detector onto the mounting bracket tabs and pull it down into place.
7. Use the two M4 x 20 mm locking screws provided and screw them into the screw holes on the left and right side of the detector. See the items marked (F) in Figure 2-4 below.
8. The air sampling pipe can now be attached and power connected.  
(Refer to Section 2.7 on page 12 for connection information).

For inverted installation, to mark off the location of the mounting holes, follow steps 1 – 4 with the mounting bracket inverted to that shown in Figure 2-4 below. Also refer to Section 2.3.2 on page 9.

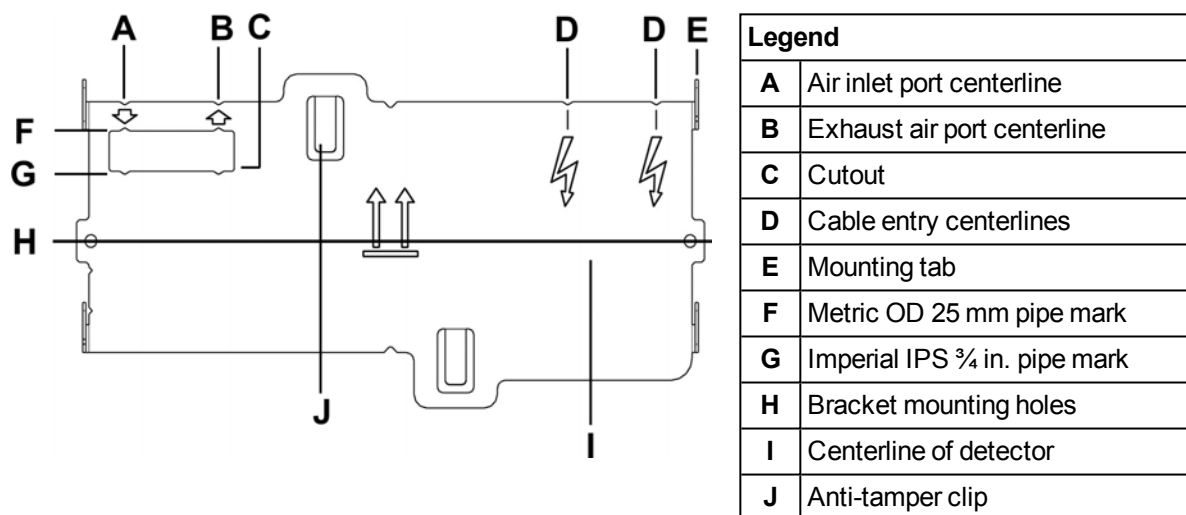


Figure 2-4: Mounting bracket orientation for upright and inverted mounting

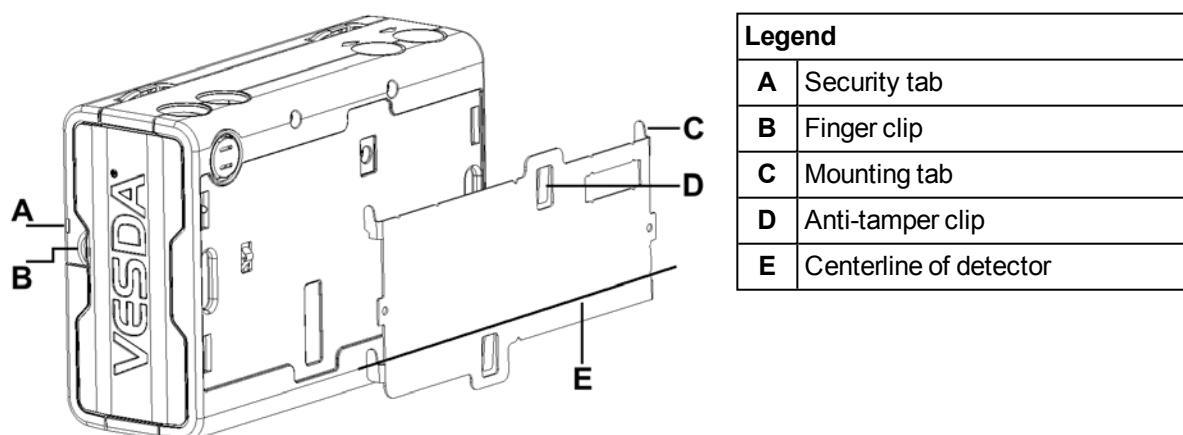


Figure 2-5: Mounting bracket rear view

### 2.3.2 Inverting the user interface display



**Caution:** Electrostatic discharge precautions need to be taken prior to removing the front cover from the detector.




**Attention :** Il convient de prendre des précautions contre les décharges électrostatiques avant d'enlever le capot avant du détecteur.

For inverted mounting applications, the VESDA VLF will require the user interface display to be turned through 180°. This is carried out prior to installing the detector. Also refer to Figure 2-4 on page 8.

#### Inverting the user interface display:

1. Place the detector on its back, push in the securing tab and lift up the field service access door. (Refer to Figure 6-3 on page 31).
2. Remove the 2 retaining screws and lift off the main cover.
3. Disconnect the restraining strap from the clip (C) and the ribbon cable from the user interface card (B) and place the cover aside.
4. Open the clips (E).
5. Lift out the user interface display card, carefully turn it through 180° and then clip it back into place.
6. Reconnect the ribbon cable and the restraining strap.
7. Replace the main cover and screw down the 2 retaining screws.
8. Close the field service access door.

The detector is now ready for inverted installation.

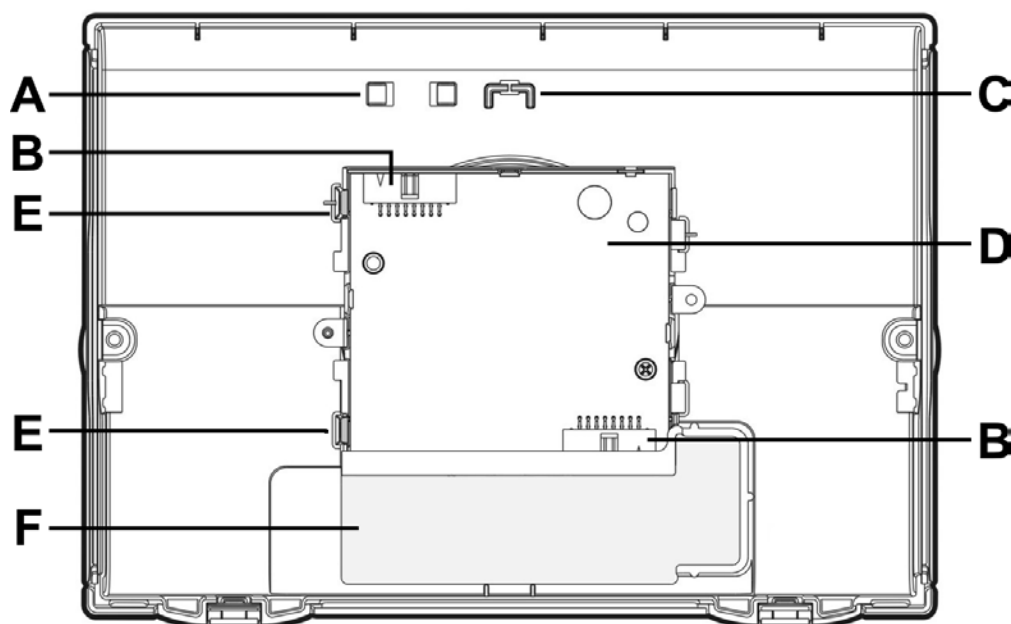

| Legend   |                        |          |                             |
|----------|------------------------|----------|-----------------------------|
| <b>A</b> | Ribbon cable clip      | <b>D</b> | Interface card              |
| <b>B</b> | Ribbon cable connector | <b>E</b> | Clip                        |
| <b>C</b> | Retaining strap clip   | <b>F</b> | Air filter cartridge cavity |

Figure 2-6: Inside view of the front cover (as it would appear inverted)

## 2.4 Detector Removal



**Caution:** Electrostatic discharge precautions need to be taken prior to removing the front cover from the detector otherwise damage may occur to the unit.




**Attention :** Il convient de prendre des précautions contre les décharges électrostatiques avant d'enlever le capot avant du détecteur, sinon l'appareil risque d'être endommagé.

**Note:** Take the necessary steps to advise the monitoring authority of work being carried out and that the system needs to be disabled.

1. Turn off the power to the detector.
2. Disconnect the sampling pipes.
3. Push in the security tab and lift up the field service access door, refer to Figure 6-3 on page 31 for further information.
4. Unscrew the front cover retaining screws (E).
5. Lift off and swing down the front cover, a restraining strap will take the load. For inverted mounted detectors the cover should be removed and placed aside.
6. Disconnect all field wiring from the terminal block.
7. Unscrew the two M4 x 20 mm locking screws on the left and right side of the detector. See the items marked (F) in Figure 2-7 below.
8. Use a screw driver to push down the anti-tamper clip in hole (A), at the same time, push the detector base up.
9. Lift the detector off the mounting bracket.

Once the detector has been removed re-fit the front cover to keep the internal components safe from damage and the electrical cabling safe.

**Note:** For inverted mounted detectors, the front cover will need to be removed prior to unhooking the detector from the mounting bracket. Disconnect the retaining strap and the ribbon cable from the user interface card and place the cover aside.

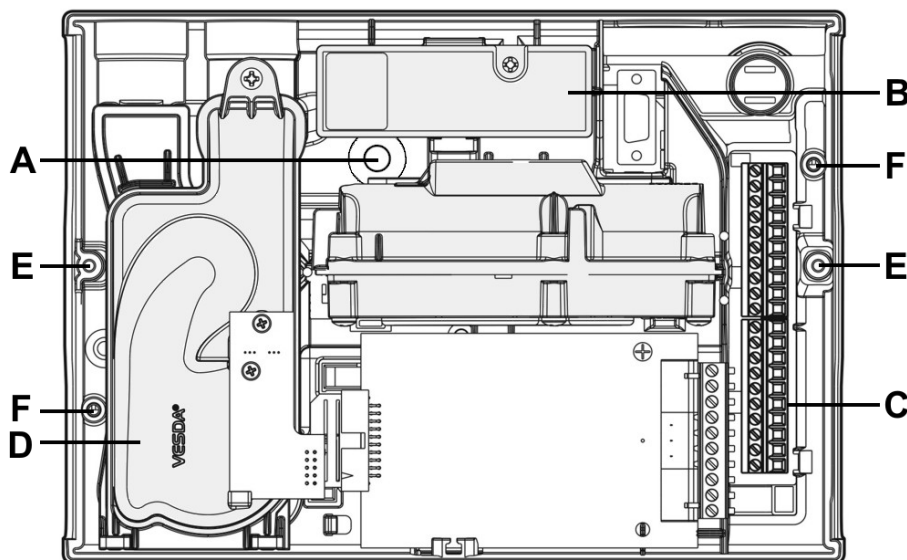

| Legend   |                              |          |                             |
|----------|------------------------------|----------|-----------------------------|
| <b>A</b> | Anti-tamper clip access hole | <b>D</b> | Aspirator                   |
| <b>B</b> | Air Filter Cartridge         | <b>E</b> | Retaining screw             |
| <b>C</b> | Terminal block               | <b>F</b> | Bracket locking screw holes |

Figure 2-7: Detector removal

## 2.5 Air inlet pipe connections

The tapered shape of the air inlet port is designed to accept standard pipes of OD 25 mm (ID 21 mm) or IPS  $\frac{3}{4}$  in (OD 1.05 in) and provide an air tight seal.

**Note:** Do not glue the air inlet pipe to the detector. This will void your warranty.

## 2.6 Exhaust air pipe connections

Where the VESDA VLF is located outside the protected area, consideration must be given to returning the exhaust air to the protected environment to balance pressure differences that may exist between the two areas. In the majority of applications, this is not necessary as pressure differences are minimal.

In some circumstances, the pre-engineered solutions in this manual may not be suitable and it is recommended that alternate designs are verified by a suitably qualified installer using ASPIRE.

Examples of these circumstances are: where pressure differences exceed 50 Pa; in situations where the detector is located outside the protected area; in cases where there are hazardous substances inside the protected area eg hospital operating theatres, laboratories. In these cases, the exhaust should be returned to the protected area.

Return air pipes need to be as short as possible to minimize the effect of airflow resistance in the return air pipe network. Remove the fitted exhaust deflector and install a return air pipe where required.

The air exhaust port is tapered to accept standard pipes of OD 25 mm (ID 21 mm) or IPS  $\frac{3}{4}$  in. and provide an air tight seal.

**Note:** Do not glue the exhaust air pipe to the detector. This will void your warranty.

## 2.7 Wiring Connections



**Caution:** Electrostatic discharge precautions need to be taken prior to removing the front cover from the detector otherwise damage may occur to the unit.



**Attention :** Il convient de prendre des précautions contre les décharges électrostatiques avant d'enlever le capot avant du détecteur, sinon l'appareil risque d'être endommagé.

### 2.7.1 Detector cabling requirements

The screw type terminals located on the termination card within the VESDA VLF will accept wire sizes from 0.2 mm<sup>2</sup> to 2.5 mm<sup>2</sup> (30 – 12 AWG).

Refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii for code-specific requirements.

Refer to the VESDA System Design Manual for cabling details.

To reach the terminal block, open the field service access door, refer to Section 6.3 on page 31, and then unscrew the front cover retaining screws. Lift off and swing down the front cover. The terminal block is located on the right hand side of the detector.

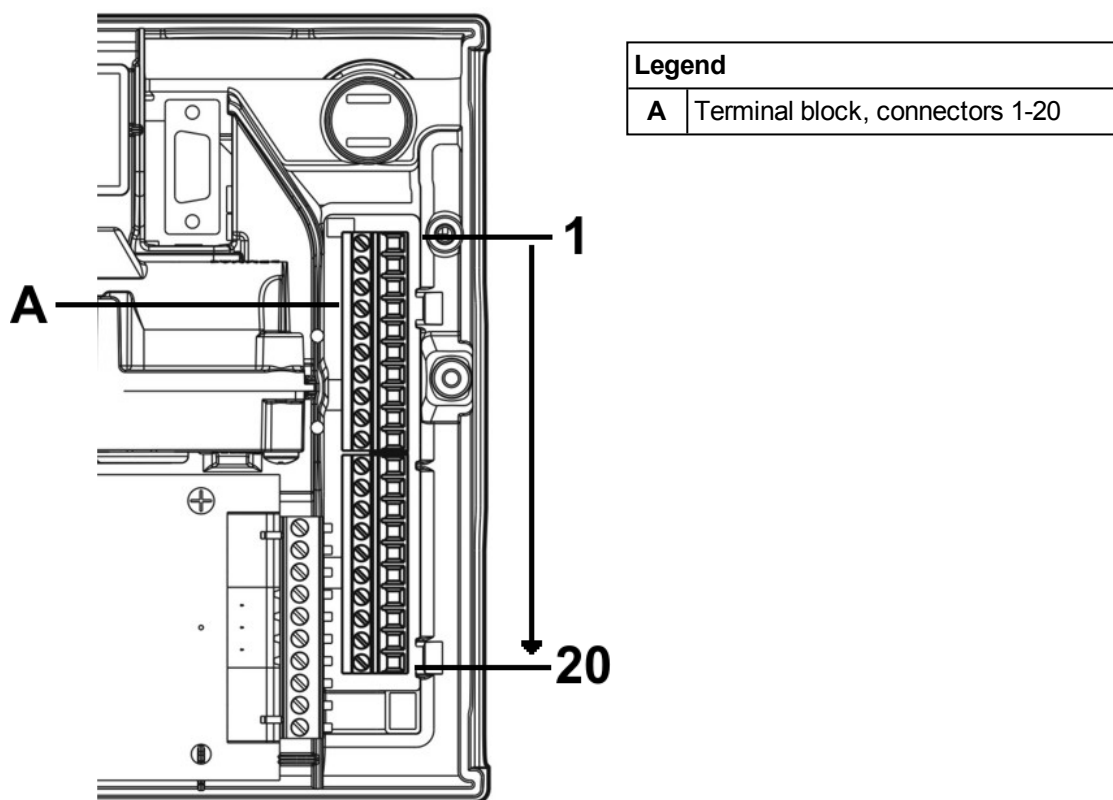


Figure 2-8: Terminal Block


## 2.7.2 GPI – General Purpose Input (Terminals 1 & 2)

The General Purpose Input (GPI) is a programmable input. When the GPI function parameter is set to external, the detector shall indicate an external equipment fault condition by monitoring the line impedance. An End of Line (EOL) resistor is supplied with the product and must be assembled in parallel with the device to be monitored.

The EOL resistor provides a known termination to the external equipment, this allows the VESDA VLF to detect open or short circuits. The detector monitors the EOL resistor (Figure 2-10) and reports any faults when the GPI function is set to any value, except **None**.

**Caution:** These terminal blocks come assembled and should NOT be disassembled.

**Avertissement :** Ces borniers sont livrés montés et ne doivent PAS être démontés.

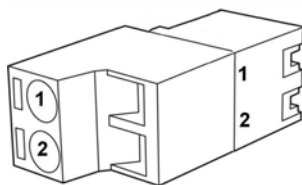

| Legend   |           |
|----------|-----------|
| <b>A</b> | GPI Pin 1 |
| <b>B</b> | GPI Pin 2 |

Figure 2-9: Terminal and plug set up, GPI connections

The GPI function parameter can be set to the values shown in the table below to achieve several different functions:

Table 2-1: GPI programming

| GPI Function parameter value | Result                                                                                                                                                                                                                                                                                                                      |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>None</b>                  | GPI is disabled. If GPI will not be used we recommend that you leave the EOL resistor assembled.                                                                                                                                                                                                                            |
| <b>Reset</b>                 | Detector is reset on activation of the GPI (closing contact).<br><b>Note:</b> The factory-default value of the GPI function is Reset.                                                                                                                                                                                       |
| <b>Disable</b>               | Detector is disabled while GPI is active (contact closed) and reset on de-activation of the input (contact open).                                                                                                                                                                                                           |
| <b>Standby</b>               | Detector is placed in standby (disabled, plus aspirator turned off) while GPI is active (contact closed) and reset on de-activation of the input (contact open).                                                                                                                                                            |
| <b>Alarm set 1</b>           | Activation of GPI forces alarm threshold set 1 to be used. It overrides normal selection.                                                                                                                                                                                                                                   |
| <b>Alarm set 2</b>           | Activation of GPI forces alarm threshold set 2 to be used. It overrides normal selection.                                                                                                                                                                                                                                   |
| <b>External</b>              | Detector indicates a fault while the GPI is active (contact closed). Typically this is used to monitor external power supply units.<br><b>Note:</b> If the contact is closed it will raise an Instant Fault Finder No.6 fault. If wire is broken to the monitoring device it will raise an Instant Fault Finder No.8 fault. |

The GP input detects a short circuit (e.g. the PSU fault relay) at or below 100 Ohms.


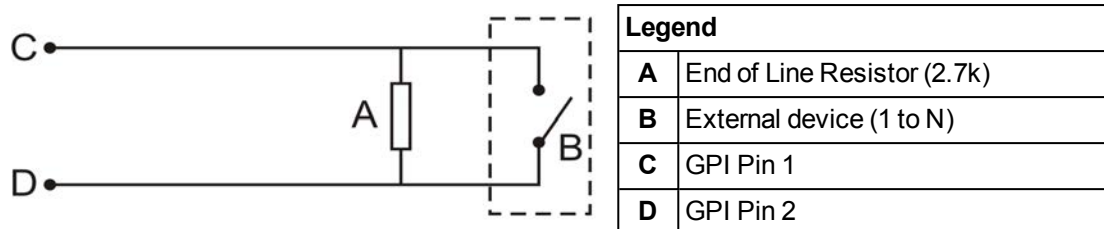


Figure 2-10: Triggering of GPI

### 2.7.3 Extra terminals (Terminals 3, 4, 5, 6 & 7)

Terminals reserved for future use.

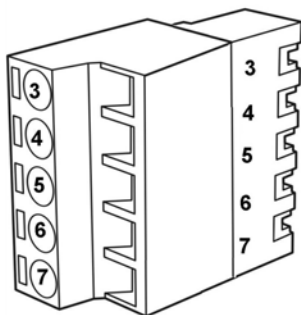

| Legend   |                  |
|----------|------------------|
| <b>3</b> | Display Tx       |
| <b>4</b> | Display Rx       |
| <b>5</b> | Display Comm Gnd |
| <b>6</b> | Display Power -  |
| <b>7</b> | Display Power +  |

Table 2-2: Terminal block display, spare power terminals

### 2.7.4 Power supply (Terminals 8, 9, 10 & 11)

|                             |                                 |
|-----------------------------|---------------------------------|
| <b>Operating voltage:</b>   | 24 VDC nominal (18 - 30 VDC)    |
| <b>Power consumption:</b>   | 9.8 W nominal, 11.7 W in alarm  |
| <b>Current consumption:</b> | 410 mA nominal, 490 mA in alarm |


It is recommended that the power supply be compliant with local codes and standards required by the regional authority. For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.



**Caution:** Check the product termination wiring label during installation and subsequent maintenance visits.



**Attention :** Vérifiez l'étiquette de câblage de terminaison à la pose et lors des visites de maintenance ultérieures.

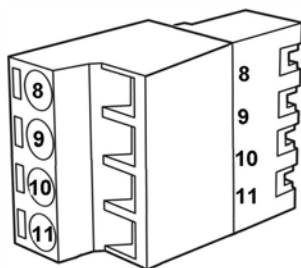


| Legend    |                       |                                                                              |
|-----------|-----------------------|------------------------------------------------------------------------------|
| <b>8</b>  | Power Return<br>0 VDC | From power<br>supply unit                                                    |
| <b>9</b>  | Power in 24 VDC       |                                                                              |
| <b>10</b> | Power Return<br>0 VDC | To next detector<br>(if more than 1<br>detector per<br>Power Supply<br>Unit) |
| <b>11</b> | Power Out<br>24 VDC   |                                                                              |

Figure 2-11: Terminal block display, power supply

## 2.7.5 Relays (Terminals 12 - 20)

The relays allow alarm and fault signals to be hard wired to external devices, such as fire alarm control panels and loop interface modules away from the detector (example, sounding a siren at Action threshold). Refer to the appropriate installation manual for connectivity instructions.

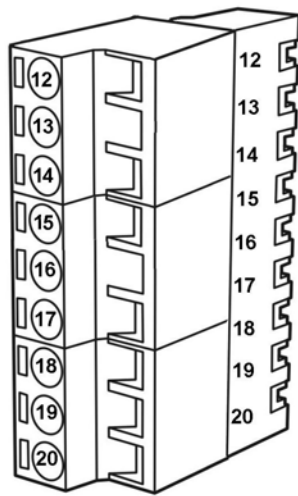

| Legend |        |              |
|--------|--------|--------------|
| 12     | NC     | Fault Relay  |
| 13     | Common |              |
| 14     | NO     |              |
| 15     | NC     | Action Relay |
| 16     | Common |              |
| 17     | NO     |              |
| 18     | NC     | Fire 1 Relay |
| 19     | Common |              |
| 20     | NO     |              |

|               |                                                           |
|---------------|-----------------------------------------------------------|
| <b>NC</b>     | Normally closed contact of relay (with no power applied). |
| <b>NO</b>     | Normally open contact of relay (with no power applied).   |
| <b>Common</b> | Common contact for the relay.                             |

Figure 2-12: Terminal block display, relays

**Note:** By default, the Fault relay is normally energized when no fault is present. For example when there is no fault present, terminal 12 is held open and terminal 14 is held closed. When there is a fault present, terminal 12 is held closed and terminal 14 is held open.

## 2.7.6 Typical Wiring To Fire Alarm Control Panel (FACP)

The diagram below shows the correct way to wire VESDA detectors to a conventional fire alarm control panel (FACP). It also shows where an End Of Line (EOL) resistor is correctly installed.

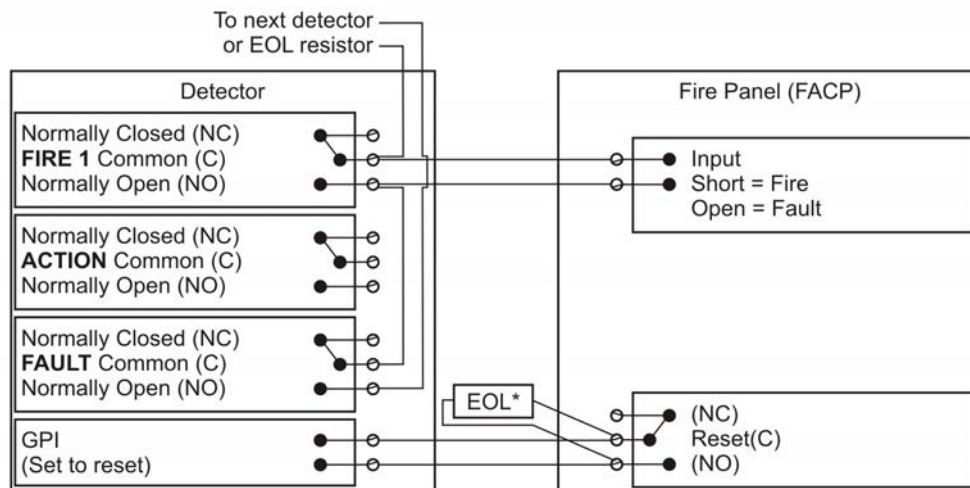


Figure 2-13: Typical wiring to a fire panel with EOL

### 2.7.7 Wiring to an Address Loop Module

This wiring example is for wiring VESDA detectors to a typical Address Loop module 3 input 1 output. These are example drawings. Refer to the appropriate product manual for the exact wiring details of the third party equipment.

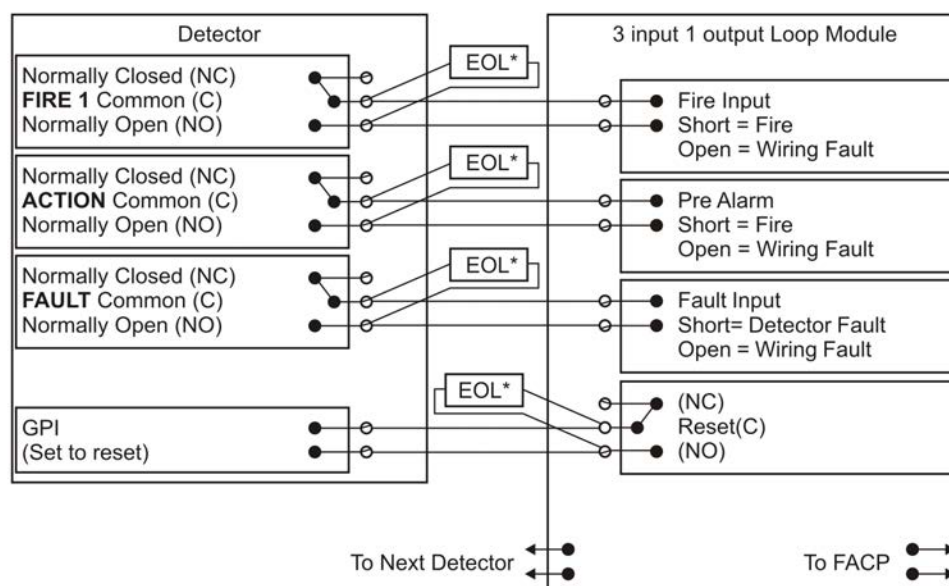


Figure 2-14: Addressable Loop Module with EOL

### 2.7.8 Interface Card

The VESDA VLF allows for the installation of a variety of interface cards. Refer to the specific interface card installation sheet, product guide, or your local VESDA support person for further information regarding installation and configuration of this card.

## 2.8 RS232-compatible serial port

The RS232 serial port requires a standard 9-pin DB9 PC COM serial extension cable (male to female) for configuring the detector using a PC with Xtralis VSC software installed, for status monitoring and command input, and for event log extraction and software upgrades.

For code specific information, see Codes and Standards Information for Air Sampling Smoke Detection on page iii.

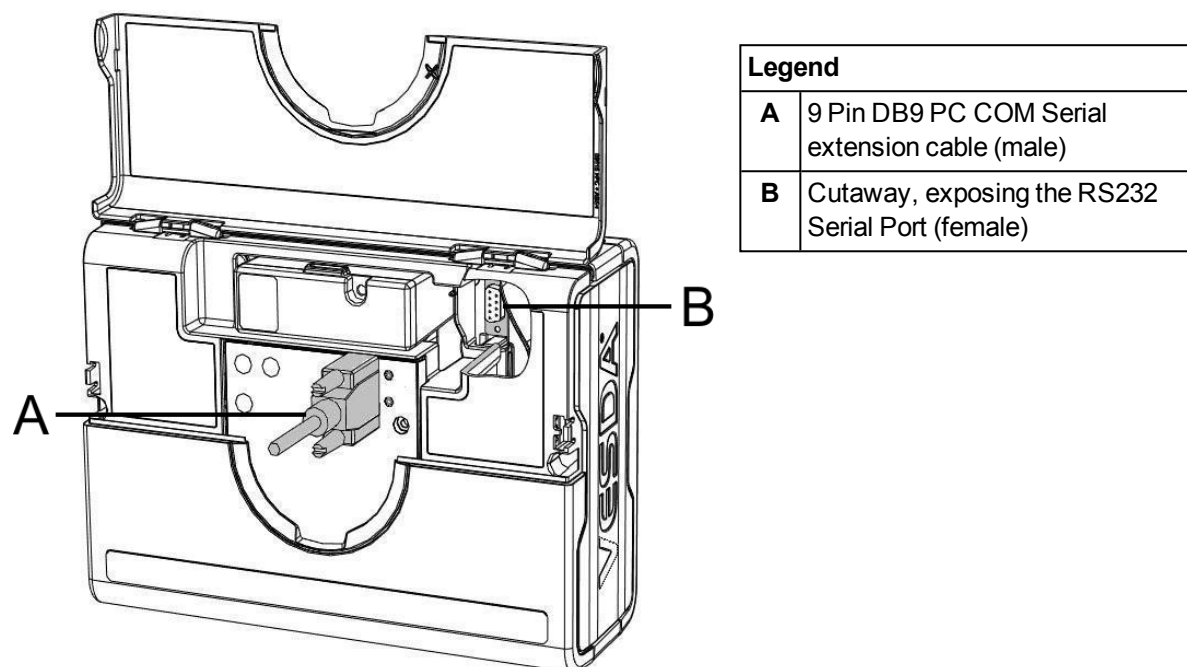


Figure 2-15: 9 pin connector and RS232 serial port

## 2.9 Installation Checklist

|                                                             |  |
|-------------------------------------------------------------|--|
| <b>Site Name</b>                                            |  |
| <b>Address</b>                                              |  |
| <b>Detector Serial Number(s) and Date of Manufacture</b>    |  |
| <b>Interface Card Serial Number and Date of Manufacture</b> |  |
| <b>Name of Installer</b>                                    |  |
| <b>Signature</b>                                            |  |
| <b>Date</b>                                                 |  |

Perform the following checks listed below to ensure that all the necessary items are completed before handing over to a commissioning engineer.

| <b>Installation Checks</b>                                                                                                                                         | <b>Yes</b> | <b>No</b> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|-----------|
| Were the detector and the mounting bracket intact in the box?                                                                                                      |            |           |
| Is the detector securely locked onto its mounting bracket?<br>Note that the two mounting bracket securing-screws are provided in a separate bag with the detector. |            |           |
| Is the sampling air pipe firmly connected to the air inlet port? Ensure the pipe is NOT glued.                                                                     |            |           |
| Have the power wires been connected to the correct terminals on the detector?                                                                                      |            |           |
| If required, has the end of line resistor been connected?                                                                                                          |            |           |
| Have the alarm signaling wires been terminated to the correct terminals of the detector?                                                                           |            |           |
| Has the Interface card been correctly installed according to the instructions provided (if applicable)?                                                            |            |           |
| Has the plug at the exhaust port been removed and the exhaust pipe (if fitted) not glued?                                                                          |            |           |
| Has the front cover been replaced correctly?                                                                                                                       |            |           |
| Has AutoLearn Flow and AutoLearn Smoke been performed?<br>Please state the AutoLearn Smoke period: _____                                                           |            |           |
| Is the air sampling pipework installed and checked as per the site plans?                                                                                          |            |           |

### 3 Sampling Pipe Network Design

The VESDA VLF supports a number of pre-engineered pipe network designs to simplify installation. The pre-engineered pipe networks have been designed with pressure, flow and transport time considerations. They have been verified and are shown below. For setup details refer to the VESDA System Design Manual.

The pre-engineered designs assume the following constraints:

1. There must be no mixing of open hole and capillary tubes in a pipe network design. All sampling points must be of the same type.
2. All sampling points must be evenly spaced in a pipe network design.
3. Branched designs must use the same number of sampling points along each branch.
4. Open hole designs must use the same size hole throughout the design.
5. Capillary tube designs must use the same size and length of capillary tube throughout the design.
6. The distance from the detector to the first sampling point must be 1 to 2 times the distance between sampling points. For example, if the sampling points are 4 meters apart, then the distance from the detector to the first sampling point must be between 4 and 8 meters.

Given the constraints detailed above, the pre-engineered pipe network designs will provide:

| Parameter         | Value                                                                           |
|-------------------|---------------------------------------------------------------------------------|
| Transport times   | less than 60 seconds for open holes<br>less than 90 seconds for capillary tubes |
| Suction pressure  | greater than or equal to 25 Pa across holes and capillary tubes                 |
| Detector pressure | greater than 70 Pa                                                              |
| Flow rate         | 12 - 54 L/min                                                                   |

For alternate or complex pipe network designs including end caps with sampling holes use the ASPIRE pipe modeling software to verify pipe performance. For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

### 3.1 Single Pipe Network


The table below shows the appropriate hole sizes for pre-engineered designs for a single pipe set up.

Table 3-1: Single pipe hole numbers and sizes

| Single Pipe Network – max. length 50 m (150 ft.) |                                                   |                                            |                               |                                        |
|--------------------------------------------------|---------------------------------------------------|--------------------------------------------|-------------------------------|----------------------------------------|
| Sampling holes                                   | ID 21 mm Pipe                                     |                                            | IPS ¾ in. Pipe                |                                        |
|                                                  | Open Hole                                         | Open Hole 5.2 mm Capillary* with 5 mm hole | Open Hole                     | 3/8 inch Capillary* with 1/8 inch hole |
|                                                  | Hole Size (mm)                                    | Length (m)                                 | Hole Size (in.)               | Length (ft.)                           |
| 5                                                | 4.0 – 5.0                                         | 0 – 1.8                                    | $\frac{5}{32} - \frac{7}{32}$ | 0 – 12                                 |
| 6                                                | 3.5 – 4.5                                         | 0.3 – 1.8                                  | $\frac{5}{32} - \frac{7}{32}$ | 0 – 12                                 |
| 7                                                | 3.5 – 4.0                                         | 0.5 – 2.0                                  | $\frac{5}{32} - \frac{3}{16}$ | 0 – 12                                 |
| 8                                                | 3.5 – 4.0                                         | 0.8 – 2.2                                  | $\frac{5}{32} - \frac{3}{16}$ | 0 – 12                                 |
| 9-24*                                            | Use ASPIRE to calculate hole sizes in this range* |                                            |                               |                                        |

\*For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.


The set up below shows a single pipe arrangement with 4 sampling holes and a fitted end cap without a sampling hole.

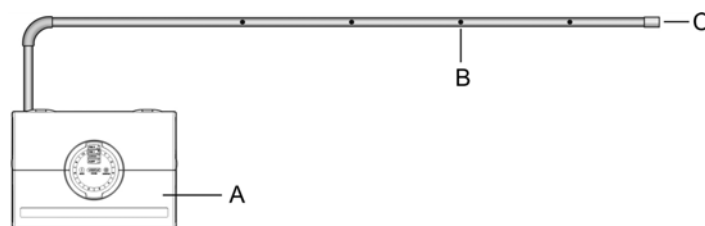

| Legend   |                |          |               |                            |
|----------|----------------|----------|---------------|----------------------------|
| <b>A</b> | Smoke Detector | <b>B</b> | Sampling Hole | <b>C</b> End cap (no hole) |

Figure 3-1: Open hole, single pipe

The set up below shows a single pipe arrangement with 6 capillary drop pipes and a fitted end cap without a sampling hole.

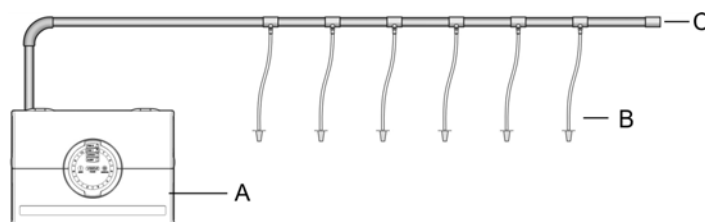

| Legend   |                |          |                |                            |
|----------|----------------|----------|----------------|----------------------------|
| <b>A</b> | Smoke Detector | <b>B</b> | Capillary Tube | <b>C</b> End cap (no hole) |

Figure 3-2: Capillary tubes, single pipe

## 3.2 Branched Pipe Network


The table below shows the appropriate hole sizes for pre-engineered designs for a branched pipe set up.

Table 3-2: Branched pipe hole numbers and sizes

| Branched Pipe Network –<br>(2 branches) |                                                   | max. length 30 m (90 ft.)<br>max. distance from detector to branch 5 m (15 ft.) |                               |                                              |
|-----------------------------------------|---------------------------------------------------|---------------------------------------------------------------------------------|-------------------------------|----------------------------------------------|
| Sampling<br>Holes per<br>Branch<br>pipe | ID 21 mm Pipe                                     |                                                                                 | IPS ¾ in. Pipe                |                                              |
|                                         | Open Hole                                         | 5.2 mm<br>Capillary* with 5<br>mm hole                                          | Open Hole                     | 3/8 inch<br>Capillary* with<br>1/8 inch hole |
|                                         | Hole Size (mm)                                    | Length (m)                                                                      | Hole Size (in.)               | Length (ft.)                                 |
| 3                                       | 3.5 – 5.5                                         | 0 – 2.0                                                                         | $\frac{5}{32} - \frac{7}{32}$ | 0 – 12                                       |
| 4                                       | 3.0 – 5.0                                         | 0 – 3.0                                                                         | $\frac{1}{8} - \frac{3}{16}$  | 0 – 12                                       |
| 5                                       | 3.0 – 4.0                                         | 0 – 3.0                                                                         | $\frac{1}{8} - \frac{5}{32}$  | 0 – 12                                       |
| 6                                       | 3.0 – 4.0                                         | 0.2 – 3.0                                                                       | $\frac{1}{8} - \frac{5}{32}$  | 0 – 12                                       |
| 7-12*                                   | Use ASPIRE to calculate hole sizes in this range* |                                                                                 |                               |                                              |

\*For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.


The set up below shows a branched pipe arrangement with 5 sampling holes per branch and fitted end caps without sampling holes.

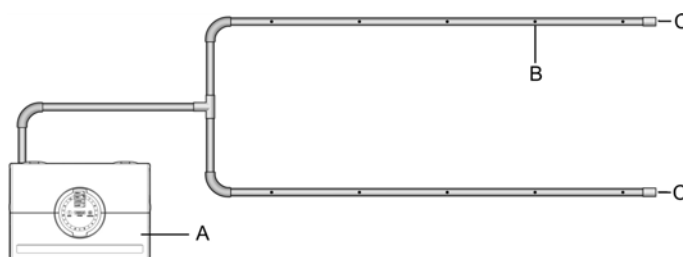

| Legend   |                |          |               |                            |
|----------|----------------|----------|---------------|----------------------------|
| <b>A</b> | Smoke Detector | <b>B</b> | Sampling Hole | <b>C</b> End cap (no hole) |

Figure 3-3: Open hole, branched pipe

The set up below shows a branched pipe arrangement with 3 capillary drop pipes per branch and fitted end caps without sampling holes.

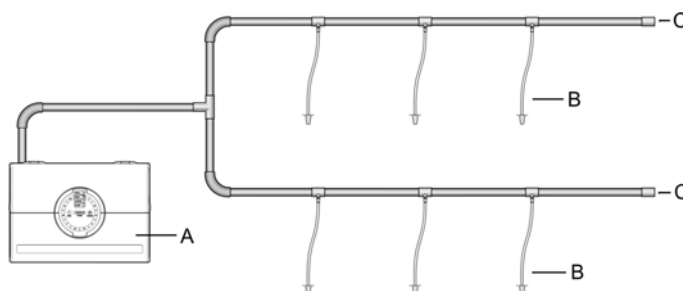

| Legend   |                   |          |                |
|----------|-------------------|----------|----------------|
| <b>A</b> | Smoke Detector    | <b>B</b> | Capillary Tube |
| <b>C</b> | End cap (no hole) |          |                |

Figure 3-4: Capillary pipes, branched pipe

### 3.3 Return air sampling (return grilles)

The VESDA VLF is suitable for air sampling across return air grilles of Air Handling Units. The recommended coverage of the VESDA VLF is 0.4 m<sup>2</sup> (4 sq. ft.) per sampling hole. This should be considered in conjunction with local codes and standards.

**Note:** Rotate the air sampling hole approximately 45° away from the direction of the incoming airflow and towards the grille surface. This will minimize the risk of a Low Flow Fault being recorded in situations where air flow changes (e.g. where the Air Handling Unit is turned off).

Some points to consider for setting up a pipe network are:

- sampling holes should be evenly spaced (within 20% of the separation distance to each other)
- an un-vented end cap should be fitted to the end of the sampling pipe
- during installation, consideration should be given to the future maintenance requirements of the air handling unit. Access to filters should not be restricted and pipe network should be easily removable by the use of socket unions


For full details concerning return air grille sampling pipe network design, consult the VESDA System Design Manual.

The table below shows the appropriate hole sizes for pre-engineered designs for return air grille set ups.

Table 3-3: Return air sampling pipe hole numbers and sizes

| <b>Return Air Sampling – U Shaped design with equal holes on each side</b> |                              |                                |
|----------------------------------------------------------------------------|------------------------------|--------------------------------|
| Sampling Holes                                                             | ID 21 mm Pipe Hole Size (mm) | IPS ¾ in. Pipe Hole Size (in.) |
| 8                                                                          | 3.0 – 4.5                    | $\frac{1}{8} - \frac{5}{32}$   |
| 10                                                                         | 3.0 – 4.0                    | $\frac{1}{8} - \frac{5}{32}$   |
| 12                                                                         | 3.0 – 3.5                    | $\frac{1}{8}$                  |
| 14                                                                         | 3.0                          | $\frac{1}{8}$                  |

\*For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

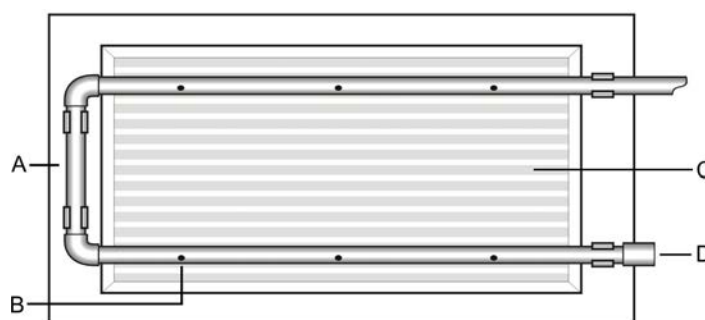

| <b>Legend</b> |               |          |                   |
|---------------|---------------|----------|-------------------|
| <b>A</b>      | Sampling pipe | <b>C</b> | Return grille     |
| <b>B</b>      | Sampling hole | <b>B</b> | End cap (no hole) |

Figure 3-5: Return air sampling over an air handling unit grille

## 3.4 Installation Considerations

**Note:** For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

The VESDA VLF provides very early warning smoke detection specifically for small environments.

The pre-engineered pipe network designs can support up to 8 sampling holes for single pipes and 12 sampling holes for branched pipe arrangements. The number of sampling holes used can be increased to 24, however, ASPIRE will need to verify that the additional sampling holes can be supported. Sampling holes are positioned according to the standards relating to conventional point detector placement.

The pre-engineered pipe network solutions described in Section 3.1 on page 20 and Section 3.2 on page 21 achieved transport times of less than 60 seconds for open hole sampling and less than 90 seconds for capillary sampling.

Where the VESDA VLF is located outside the protected area (e.g. in a corridor outside the room), consideration must be given to returning the detector exhaust air to the protected environment to balance the pressure differences that may exist. In the majority of applications, this is not necessary as pressure differences are minimal. The exhaust should also be returned to the protected area in cases where there are hazardous substances inside the protected area, eg hospital operating theatres. Where practical considerations fall outside pre-engineered designs or where pressure differences exceed 50 Pa, in situations where the detector is located outside the protected area, the solutions presented in this manual may not be suitable and it is recommended that alternate designs are verified by a suitably qualified installer using ASPIRE.

The following points should be considered when installing the sampling pipe:

- minimize flexing in sampling pipes by supporting the pipe every 1.5 m (5 ft) or less, or at a distance described in local codes and standards
- evenly arrange the sampling pipe network over return air grilles
- sampling pipe fits firmly into the tapered detector port, **DO NOT** glue this connection
- allow sufficient movement at the detector to permit pipe removal for maintenance
- keep the exhaust deflector fitted to prevent foreign objects falling into the detector
- keep the return air pipe as short as possible to minimize airflow resistance in the pipe
- pipe ends must be made smooth for bonding
- sampling holes must be drilled in line and perpendicular to the pipe
- sample holes must be clear of rough edges and debris
- pipes are free of debris
- all joints must be bonded except the endcaps and pipes entering the detector

**Notes:**

- In protected areas sampling holes should face into the direction of airflow, or point downwards in static airflow situations. When variable flows are present, position the sampling holes at 30° to the airflow.
- You should try to keep the sampling holes evenly spaced.
- For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

## 3.5 Air sampling in a duct

For air sampling in a duct please refer to the VESDA System Design Manual for duct probe design. For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

This page is intentionally left blank.

## 4 Commissioning

### 4.1 General

The VESDA VLF has been designed to simplify commissioning processes. The AutoLearn function allows the unit to assess its environment and setup appropriate alarm and flow thresholds. The unit may also be programmed through Xtralis VSC software, for all programmable settings. For further information refer to Chapter 7 on page 37.

**Note:** Detectors should be commissioned with a smoke test.

Flow rates outside the detector's operating limits will cause overflow or underflow faults and prevent normalization from occurring.

Prior to commissioning the detector, check:

1. That the power is connected and on.
2. That the pipe network is clean and correctly fitted with all joints correctly seated and sealed (except the endcaps and pipe which enters the detector which must not be glued).
3. That the exhaust deflector is fitted (unless exhaust is returned to the protected environment).

For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

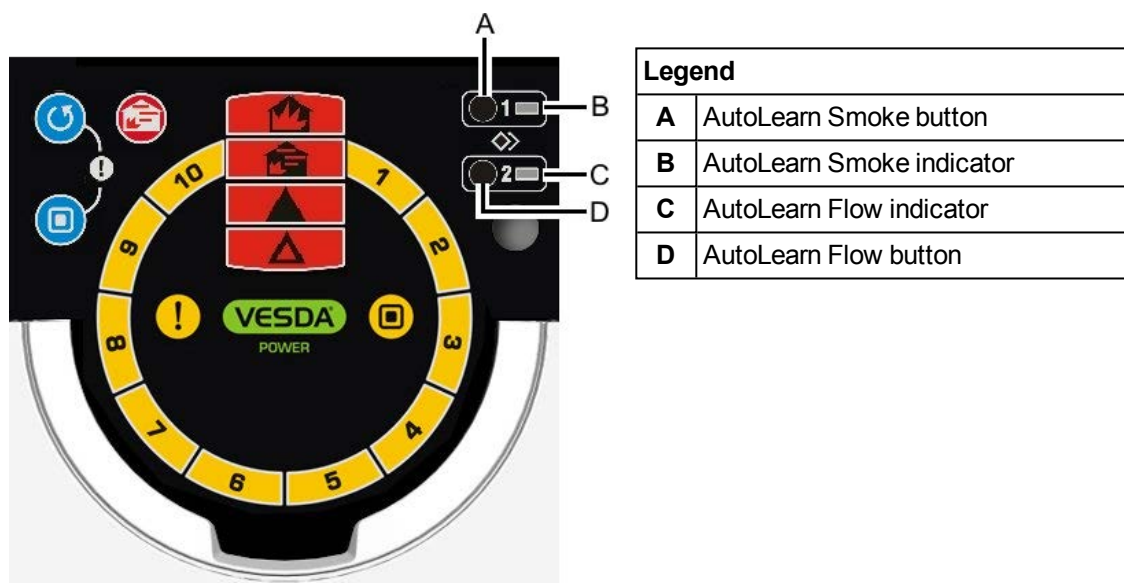


Figure 4-1: Interface display

**Notes:**

- It is important that the protected area is working under normal operating conditions when operating the AutoLearn processes.
- AutoLearn functions can be de-activated by a second press of the appropriate button. This will leave the thresholds at their default settings and not at the settings prior to AutoLearn.

### 4.2 AutoLearn Smoke

AutoLearn Smoke is initiated by pressing the recessed button numbered 1, which is located under the field service access door.

During the AutoLearn Smoke process, the VESDA VLF determines the average smoke and peak smoke obscuration levels and sets suitable alarm thresholds for the operating environment. This process will minimize false alarms due to normal environment smoke variations.

The AutoLearn Smoke LED will remain on for the duration of the AutoLearn process. At the start of the process the alarm thresholds are set to the default values. During this learning cycle, alarm conditions can be reported. If an alarm condition occurs (Alert or higher alarm) AutoLearn will not complete its cycle. In this situation restart the AutoLearn process. If AutoLearn is stopped by you or due to an alarm condition, the alarm thresholds will be left at the default settings.

**Conditions during learning are assumed to be representative of normal operating conditions.**

The AutoLearn Smoke learning times range from above 15 minutes to 15 days, with the default being set to 14 days.

If AutoLearn is running during the changeover period from Day and Night Thresholds function, make sure that AutoLearn runs for at least an hour in both the Day and Night.

Table 4-1: AutoLearn Smoke range

| Alarm Level | AutoLearn Smoke Range                       |
|-------------|---------------------------------------------|
| Alert       | 0.025 - 0.4 %obs/m (0.008 - 0.125 %obs/ft)* |
| Action      | 0.044 - 0.7 %obs/m (0.014 - 0.219 %obs/ft)* |
| Fire1       | 0.063 - 1.0 %obs/m (0.020 - 0.313 %obs/ft)* |
| Fire2       | 0.313 - 5.0 %obs/m (0.100 - 0.563 %obs/ft)* |

\*For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

## 4.3 AutoLearn Flow

AutoLearn Flow process is initiated by pressing the recessed button numbered 2, which is located under the field service access door. During the AutoLearn Flow process, the VESDA VLF determines the average and peak air flow levels monitored over time and sets suitable air flow thresholds that will not give rise to false flow rates due to normal flow variations (such as might arise through air-conditioning related false alarms). The system will normalize the flow and then monitor the flow trend to set the flow fail thresholds.

The AutoLearn Flow indicator LED will remain on for the duration of the AutoLearn process. At the start of the process the flow thresholds are set to the default values. During this learning cycle, alarm conditions can be reported. If a flow fault is reached, AutoLearn will not complete its cycle. In this situation restart the AutoLearn process. If AutoLearn is stopped by you or due to a flow fault condition, the flow thresholds will be left at the default settings.

**Conditions during learning are assumed to be representative of normal operating conditions.**

The AutoLearn Flow learning times range from 15 minutes to 15 days, with the default being set to 14 days.

## 4.4 Xtralis VSC

Xtralis VSC is an optional software application that allows all VESDA detectors to be configured. All parameters can be set manually or previously saved configuration settings may be applied. Refer to the Xtralis VSC online help for details regarding the setting of these thresholds.

## 4.5 Commissioning smoke test

It is recommended that a smoke test be carried out to prove the integrity of the pipe network, to demonstrate that the system is working and to measure the transport time to the detector.

This test involves introducing a smoke sample at the furthest sampling hole and then measuring the time taken for the smoke to travel to the detector. Results are logged and compared to subsequent tests to note variations of the system.

Refer to the VESDA System Design Manual for details of the commissioning smoke test.

## 5 Detector Overview

### 5.1 Features

- Laser Based Absolute Smoke Detection
- Wide Sensitivity Range
- Programmable Alarm Thresholds
- Clean Air Barrier for Optics Protection
- Instant Recognition Display
- Instant Fault Finder™
- AutoLearn™ Smoke
- AutoLearn™ Flow
- Ultrasonic Flow Sensing
- Referencing (requires a VESDAnet Interface Card)
- Field Service Access Door
- Separate Event Logging
- Pipe Modeling Support Software – ASPIRE™
- Xtralis VSC software for field support

### 5.2 Description

The Instant Recognition Display of the VESDA VLF smoke detector shows alarm levels and detector status information. The Smoke Dial, (see (F) in Figure 6-1 on page 29), a part of the Instant Recognition Display, provides clear information of a smoke event, relative to the Fire 1 Alarm Threshold. This display also identifies system and operational faults, when using the Instant Fault Finder function. Each segment of the Smoke Dial also corresponds to a specific fault condition.

A Field Service Access Door is provided to allow easy access to AutoLearn functions for detector commissioning. It provides access for filter replacement and connecting a PC for comprehensive configuration and diagnostics processes.

The detector uses Ultrasonic Flow Sensing to monitor the integrity of the sampling pipe network by detecting pipe air flow change. Ultrasonic flow sensing is not affected by temperature, humidity or pressure.

Detector history is provided by the non-volatile Event Logging feature. Smoke trend data, flow trend data, fault events, configuration events and operational events are recorded. Using Xtralis VSC these event types can be filtered individually.

### 5.3 Applications

The VESDA VLF can be used for open areas, return air grilles, or for cabinet protection in many small areas including:

- telecommunication facilities
- computer rooms
- control rooms
- storage facilities
- electrical and switching cabinets

For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

This page is intentionally left blank.


## 6 Product Interface

The VESDA VLF provides the following information and control options without the need for additional configuration tools.

- Detector status: Normal, Alarm, Disabled and Fault.
- Alarm levels: Alert, Action, Fire 1 and Fire 2.
- Smoke levels relative to Fire 1.
- Detector fault types (Instant Fault Finder).
- Test, Reset and Disable.
- AutoLearn Smoke (setting alarm thresholds).
- AutoLearn Flow (setting baseline for normalizing air flow and flow thresholds).

### 6.1 Front View

Front view of the detector as installed and operating. This view shows cable and air sampling pipe entry points, the Instant Recognition display and the fitted exhaust deflector.

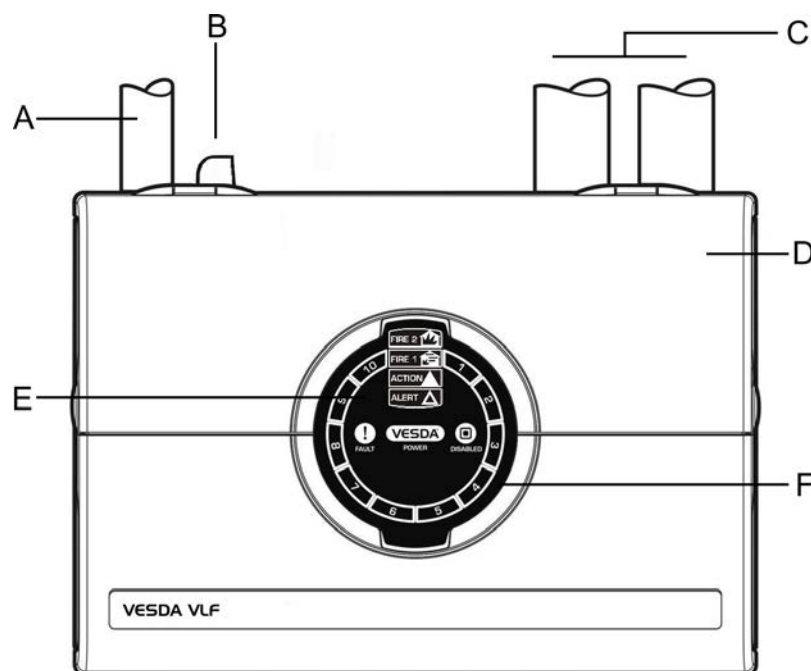


| Legend   |                        |          |                                            |
|----------|------------------------|----------|--------------------------------------------|
| <b>A</b> | Air inlet port         | <b>D</b> | Rear cable entry (not shown)               |
| <b>B</b> | Exhaust deflector      | <b>E</b> | Instant Recognition Display                |
| <b>C</b> | Cable entry ports (x2) | <b>F</b> | Smoke Dial (includes Instant Fault Finder) |

Figure 6-1: VESDA VLF detector front view

## 6.2 Instant Recognition Display

The Instant Recognition display provides you with an immediate understanding of smoke levels relative to Fire 1 alarm threshold.

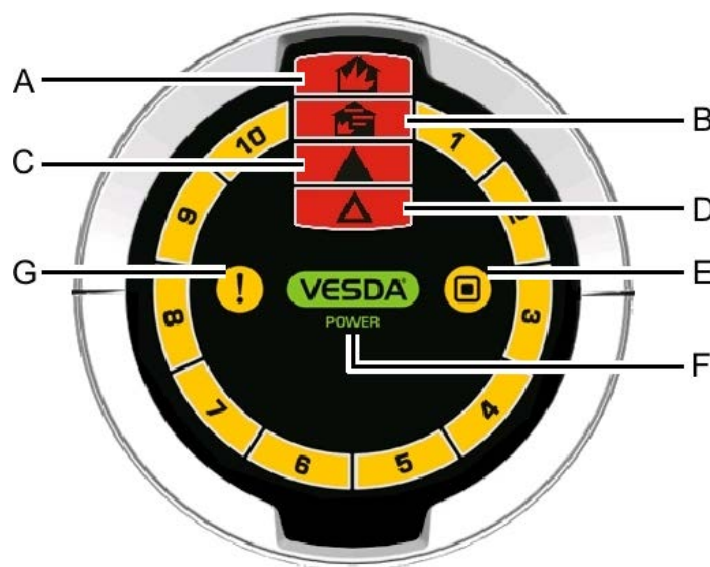

| Legend   |          |                                                                                             |           |
|----------|----------|---------------------------------------------------------------------------------------------|-----------|
|          | Option   | Definition                                                                                  | LED Color |
| <b>A</b> | FIRE 2   | Indicates the Fire 2 threshold has been reached.                                            | Red       |
| <b>B</b> | FIRE 1   | Indicates the Fire 1 threshold has been reached.                                            | Red       |
| <b>C</b> | ACTION   | Indicates the Action condition has been reached.                                            | Red       |
| <b>D</b> | ALERT    | Indicates the Alert condition has been reached.                                             | Red       |
| <b>E</b> | DISABLED | Indicates the unit has been disabled (solid) or is in standby mode (flashing).              | Yellow    |
| <b>F</b> | POWER    | Illuminates when the detector is powered.                                                   | Green     |
| <b>G</b> | FAULT    | Fault light continuously on indicates a Major Fault. When flashing indicates a Minor fault. | Yellow    |

Figure 6-2: Instant Recognition Display

**Note:** There are two sets of Instant Recognition display icons; both are shown throughout this manual. The international icon set can be identified by the lack of English text beside the icons.

## 6.3 Controls and Indicators

Control buttons are accessed by opening the field service access door. This door is opened by pressing in the security tab, on the right side of the detector, with a flat screw driver and then lifting the door by the finger clips on each side of the door (refer to Figure 6-3 below).

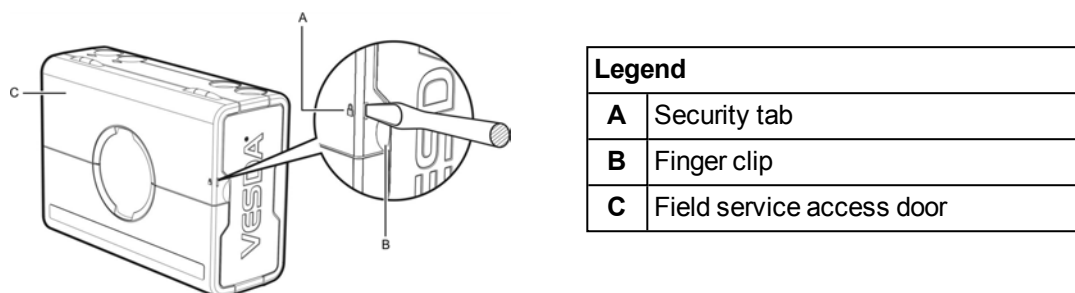


Figure 6-3: Field Service Access Door security tab and clip

### 6.3.1 Interface information and control buttons

Interface information and control buttons are located behind the field service access door.

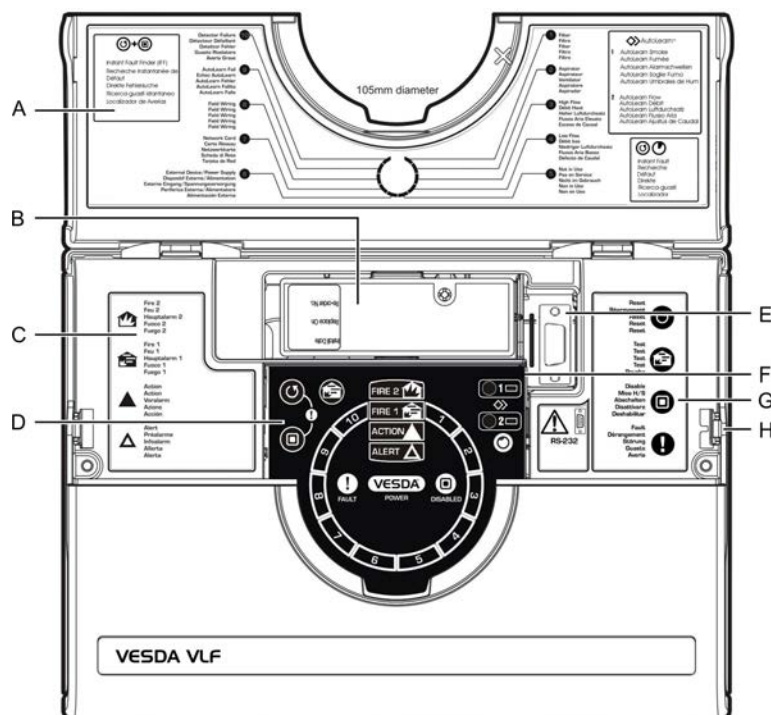


Figure 6-4: VESDA VLF with field service access door open

## 6.3.2 Detector control buttons

Table 6-1: Detector Buttons

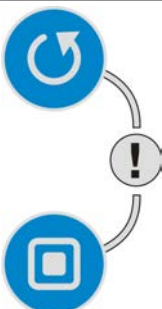
| Icon                                                                                | Button               | Use                                                                                                                                                        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Reset                | Resets the system and resumes normal operation.                                                                                                            | <p>Press and hold down this button to test the function of LEDs on the unit.</p> <p>To enable or lockout this button Xtralis VSC software is required.</p> <p>Release this button to clear latched faults and alarms. Alarm and fault lights will switch off, and if the system is still in alarm or fault mode, the lights will reappear after the appropriate delay.</p>                                                                                                                                                                     |
|    | Disable              | <p>Disables the fire relay outputs from actuating and reports a fault.</p> <p>Pressing Disable for 6 seconds will put the detector into Stand-by mode.</p> | <p>This button allows the operator to toggle between disable and normal modes. When disabled smoke and air flow are not reported to the system (e.g. FACP).</p> <p>To enable or lockout this button Xtralis VSC software is required.</p> <p>The fan continues to run when VESDA VLF is disabled but stops when it is in stand-by mode.</p>                                                                                                                                                                                                    |
|   | Instant Fault Finder | Indicates current active faults on the detector.                                                                                                           | <p>Pressing and holding in the Reset button and the Disable button together will show the fault type, by number, on the Smoke Dial.</p> <p>Refer to Section 6.4.3 on page 34 for the fault definitions.</p>                                                                                                                                                                                                                                                                                                                                    |
|  | Fire 1 Test          | <p>Simulates a Fire 1 condition and the alarm relay is activated after the appropriate delay.</p> <p><b>Note:</b> This will initiate a Fire 1 Alarm.</p>   | <p>By default this button is locked out. To activate this button Xtralis VSC software is required.</p> <p><b>Note:</b> Notify the monitoring authority before testing commences.</p> <p>To activate, press and release the Fire 1 Test button. All the segments of the Smoke Dial, and alarm conditions up to Fire 1 are activated (after the configured delay period). Press the Reset button to stop the test and clear any latched alarms.</p> <p><b>Note:</b> Remember to return the system to normal mode after the test is complete.</p> |

Table 6-1: Detector Buttons (continued...)

| Icon                                                                              | Button          | Use                                                                                                                                              | Description                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------------------------------------------------------|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | AutoLearn Smoke | <p>Automatically sets alarm threshold values based on the normal operating environment.</p> <p>Refer to Section 4.2 on page 25.</p>              | Pressing the recessed AutoLearn Smoke button initiates the automatic smoke alarm set-up mode. The LED, beside the button, will remain on for the duration of the AutoLearn process (up to 14 days which is also the default period). During this period the unit is online, alarms are communicated and default thresholds are active. To deactivate this function, press the AutoLearn Smoke button again. |
|  | AutoLearn Flow  | <p>The detector automatically measures air flow to the pipes and sets the air flow threshold values.</p> <p>Refer to Section 4.3 on page 26.</p> | Pressing the recessed AutoLearn Flow button sets the airflow fault thresholds as well as normalizing the detector's airflow. The LED, beside the button, will remain on for the duration of the AutoLearn process (up to 14 days which is also the default period). To deactivate this function, press the AutoLearn Flow button again.                                                                     |

## 6.4 Smoke level & Instant Fault Finder displays

Under normal operating conditions the circular Smoke Dial displays smoke levels in sampled air. Through Instant Fault Finder, the Smoke Dial temporarily changes the segments into fault indicators, with each segment corresponding to a specific fault condition.

### 6.4.1 Smoke level display

The smoke level is displayed on the Smoke Dial (A) and provides incident information essential for effective response in very early warning situations. This display provides you with an instant understanding of the smoke event relative to the Fire 1 Alarm Threshold. Between 1 and 10 segments may illuminate. Each segment is equivalent to 1/10 of a Fire 1 warning.



| Legend   |                                      |          |                 |
|----------|--------------------------------------|----------|-----------------|
| <b>A</b> | Smoke Dial and Fault Type indicator. | <b>C</b> | Disable button. |
| <b>B</b> | Reset button.                        | <b>D</b> | Fault light.    |

Figure 6-5: Smoke level and fault condition display

### 6.4.2 Instant Fault Finder

When a fault is registered on the detector, the fault light (D) remains on for Major Fault situations and flashes for Minor Fault.

The Instant Fault Finder function is operated by pressing the Reset and Disable buttons together. Instant Fault Finder provides rapid fault diagnosis and is an additional function of the Smoke Dial display. One or more segments of the Smoke Dial will illuminate, indicating the fault by number. The table below provides fault details and recommended actions.

### 6.4.3 VESDA VLF Troubleshooting with Instant Fault Finder

The Instant Fault Finder function aids rapid diagnosis of faults.

Table 6-2: Instant fault finder diagnosis

| Fault | Type      | Explanation                                                                                         | Action                                                                        |
|-------|-----------|-----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| 1     | Filter    | Air filter needs replacement due to dust or smoke contamination or has reached the end of its life. | Replace the air filter with a new unit remembering to reset the filter fault. |
| 2     | Aspirator | Aspirator fault has occurred.                                                                       | Initially replace the aspirator. If the fault remains replace the unit.       |

Table 6-2: Instant fault finder diagnosis (continued...)

| <b>Fault</b> | <b>Type</b>                         | <b>Explanation</b>                                                                                                        | <b>Action</b>                                                                                                                                                                                                    |
|--------------|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3            | High flow                           | High flow fault present (urgent or non-urgent). Flow readings are above user set flow limits or the detector maximum flow | Check the pipe network for breakages. Also check the suitability of the pipe network in ASPIRE.                                                                                                                  |
| 4            | Low flow                            | Low flow fault present (urgent or non-urgent). Flow readings are below user set flow limits or the detector maximum flow  | Check the pipe network for blockages. Also check the suitability of the pipe network in ASPIRE.                                                                                                                  |
| 5            | Not in use                          |                                                                                                                           |                                                                                                                                                                                                                  |
| 6            | External Device / Power Supply Unit | External equipment signaling a fault via the General Purpose Input.                                                       | Inspect the external device and also check that the GPI is set to the correct mode.<br><br>Also check that the EOL resistor is correctly connected.                                                              |
| 7            | Interface card                      | Interface Card needs replacement.                                                                                         | Replace the Interface Card.                                                                                                                                                                                      |
| 8            | Field wiring                        | General Purpose Input or Interface Card wiring.                                                                           | If no interface card is installed check the GPI wiring for an open circuit.<br><br>If an interface card is installed refer to the card manual.<br><br>Refer to Section 2.7.2 on page 13 for further information. |
| 9            | AutoLearn fail                      | AutoLearn Smoke or Flow failed.                                                                                           | Repeat AutoLearn Smoke or Flow process. Inspect logs if repeated failures occur. AutoLearn Flow will fail if there is an airflow fault on the detector. Fix airflow fault and restart AutoLearn.                 |
| 10           | Detector failure                    | A fault has occurred that cannot be fixed.                                                                                | Contact the supplier and replace the detector.                                                                                                                                                                   |

This page is intentionally left blank.

## 7 Factory Defaults

Table 7-1: Factory defaults

| Parameter                       | Allowed values                                    | Default values                   |
|---------------------------------|---------------------------------------------------|----------------------------------|
| Alert Smoke Threshold 1 & 2     | 0.025% - 2.0% obs/m*<br>(0.008% - 0.625% obs/ft.) | 0.08% obs/m<br>(0.025% obs/ft.)  |
| Action Smoke Threshold 1 & 2    | 0.025% - 2.0% obs/m*<br>(0.008% - 0.625% obs/ft.) | 0.14% obs/m<br>(0.0448% obs/ft.) |
| Fire-1 Smoke Threshold 1 & 2    | 0.025% - 20% obs/m*<br>(0.008% - 6.25% obs/ft.)   | 0.2% obs/m<br>(0.0625% obs/ft.)  |
| Fire-2 Smoke Threshold 1 & 2    | 0.025% - 20% obs/m*<br>(0.008% - 6.25% obs/ft.)   | 2.0% obs/m<br>(0.625% obs/ft.)   |
| Alert Verification Delay 1 & 2  | 0 - 60 seconds                                    | 10 seconds                       |
| Action Verification Delay 1 & 2 | 0 - 60 seconds                                    | 10 seconds                       |
| Fire 1 Verification Delay 1 & 2 | 0 - 60 seconds                                    | 10 seconds                       |
| Fire 2 Verification Delay 1 & 2 | 0 - 60 seconds                                    | 10 seconds                       |
| Alarm Latching Enable           | Enabled or Disabled                               | Enabled                          |
| Fault Latching Enable           | Enabled or Disabled                               | Disabled                         |
| Airflow – Major High Flow Fault | 100% - 150%                                       | 130%                             |
| Airflow – Major Low Flow Fault  | 50% - 100%                                        | 70%                              |
| Airflow – Minor High Flow Fault | 100% - 150%                                       | 120%                             |
| Airflow – Minor Low Flow Fault  | 50% - 100%                                        | 80%                              |
| AutoLearn Smoke                 | 15 min. – 15 days                                 | 14 days                          |
| AutoLearn Flow                  | 15 min. – 15 days                                 | 14 days                          |
| Smoke Test Button               | Enabled or Disabled                               | Disabled                         |
| Threshold set 1 and 2           | Day (1) & Night (2) / Disabled                    | Disabled                         |

\*For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

**Note:** If installing the detector as a UL compliant system the alarm signal connected to the control panel for the fire evacuation shall not be less than 2.0 %obs/m (0.64 %obs/ft.).

This page is intentionally left blank.

## 8 Specifications

### 8.1 Power Supply

|                              |                                  |
|------------------------------|----------------------------------|
| Supply Voltage               | 24 VDC nominal (18 - 30 VDC)*    |
| Power Consumption @ 24 VDC   | 9.8 W nominal, 11.7 W in alarm*  |
| Current Consumption @ 24 VDC | 410 mA nominal, 490 mA in alarm* |

\*For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

### 8.2 Case

|                    |                                                                   |
|--------------------|-------------------------------------------------------------------|
| Dimensions (WHD)   | 256 mm x 183 mm x 92 mm<br>(10 1/16 in x 7 1/5 in x 3 2/3 in)     |
| Weight             | 2 kg (approx. 4.4 lbs)                                            |
| IP Rating          | IP30                                                              |
| Mounting           | Upright, inverted or horizontal with appropriate mounting bracket |
| Maintenance access | Instant Fault Finder, Filter and Programming Port                 |

### 8.3 Operating Conditions

|                           |                               |
|---------------------------|-------------------------------|
| Detector Ambient          | 0°C to 39°C (32°F to 103°F)*  |
| Tested to (EN54-20)       | -10°C to 55°C (14°F to 131°F) |
| Sampled Air **            | -20°C to 60°C (32°F to 140°F) |
| Humidity (non-condensing) | 5% to 95%                     |

\* Product UL listed for use from 0°C to 38°C (32°F to 100°F).

\*\* Sampled Air temperature shall reach Ambient Detector temperature upon entry into Detector. Refer to Xtralis Design Guides & Application Notes for sampled air pre-conditioning.

### 8.4 Sampling Network

|                                                  |                                                                                                   |
|--------------------------------------------------|---------------------------------------------------------------------------------------------------|
| Air inlet pipe                                   | OD 25 mm (ID 21 mm) / IPS ¾ in. (OD 1.05 in.)<br>Alternate pipe sizes can be modelled with ASPIRE |
| Single pipe length                               | 50 m (150 ft.) max.                                                                               |
| Single pipe - Sampling holes                     | 5-8 sampling holes pre-engineered<br>For 9-24 sampling holes model with ASPIRE*                   |
| Branch (2) pipe length                           | 30 m (90 ft.) max. per branch                                                                     |
| Branch (2) - Sampling holes per branch           | 3-6 sampling holes pre-engineered<br>For 7-12 sampling holes model with ASPIRE                    |
| Return Air Sampling – U Shaped design per branch | 8-14 sampling holes pre-engineered<br>For 9-24 sampling holes model with ASPIRE                   |

\*For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

## 8.5 Area Covered

|         |                                   |
|---------|-----------------------------------|
| VLF-500 | 500 m <sup>2</sup> (5380 sq. ft.) |
|---------|-----------------------------------|

## 8.6 Field Wiring

|           |                                                         |
|-----------|---------------------------------------------------------|
| Access    | 3 x 25 mm (1 in.) Cable entries (1 rear entry)          |
| Terminals | 0.2 mm <sup>2</sup> - 2.5 mm <sup>2</sup> (30 - 12 AWG) |

## 8.7 Interfaces

- Power In/Out.
- Fire 1 Relay (changeover, 2A @ 30 VDC).
- Action Relay (changeover, 2A @ 30 VDC).
- Fault Relay (changeover, 2A @ 30 VDC).
- General Purpose Input (clean contact).
- External display port (with power limited output).
- RS232 programming port.

## 8.8 Alarm Ranges

|                          |                                                 |
|--------------------------|-------------------------------------------------|
| Alert, Action            | 0.025 – 2.0% obs/m<br>(0.008 – 0.625% obs/ft.)* |
| Fire 1, Fire 2           | 0.025 – 20% obs/m<br>(0.008 – 6.25% obs/ft.)*   |
| Individual Delays        | 0 - 60 seconds                                  |
| 2 Threshold sets (1 & 2) | Day and night                                   |

\*For code-specific information, refer to Codes and Standards Information for Air Sampling Smoke Detection on page iii.

## 8.9 Display

- 4 Alarm State Indicators (Alert, Action, Fire 1 and Fire 2).
- Fault and Disabled Indicators.
- 10-sector Smoke Level Indicators.
- 10-sector Instant Fault Finder.
- Reset, Disable and Test Controls.
- Smoke and Flow AutoLearn Controls and Indicators.

## 8.10 Event Log

- Up to 18 000 events stored.
- Smoke trend, flow trend, faults events, configuration events and operational events.
- Date and time stamp.

## 8.11 AutoLearn Smoke and Flow

- Minimum 15 minutes, maximum 15 days (default 14 days).
- During AutoLearn, thresholds are NOT changed from pre-set values.

## 8.12 Referencing

- Reference smoke level source for networked detectors (requires a VESDAnet Interface card).

## 8.13 Ordering Information

|                                                                    |                  |                                                               |
|--------------------------------------------------------------------|------------------|---------------------------------------------------------------|
| VESDA VLF-500                                                      | VESDA VLF-500-00 | European language set, English display labels.                |
|                                                                    | VESDA VLF-50001  | European language set, International display labels.          |
|                                                                    | VESDA VLF-500-02 | English + Asian language set, International display labels.   |
|                                                                    | VESDA VLF-500-03 | Scandinavian language set, International display labels.      |
|                                                                    | VESDA VLF-500-04 | English + Russian language set, International display labels. |
| Filter Cartridge                                                   | VSP-005          |                                                               |
| Aspirator                                                          | VSP-715          |                                                               |
| VESDAnet Interface Card                                            | VIC-010          |                                                               |
| Multifunction Control Card (MCC)                                   | VIC-020          |                                                               |
| Multifunction Control Card (MCC) with Monitored Power Output (MPO) | VIC-030          |                                                               |

This page is intentionally left blank.

# 9 Maintenance

## 9.1 Overview


The VESDA VLF continuously monitors its own operation and conducts frequent health checks. There are two serviceable items, the air filter cartridge and the aspirator.



**Caution:** Electrostatic discharge precautions need to be taken prior to removing the front cover from the detector otherwise damage may occur to the detector.



**Attention :** Il convient de prendre des précautions contre les décharges électrostatiques avant d'enlever le capot avant du détecteur, sinon l'appareil risque d'être endommagé.

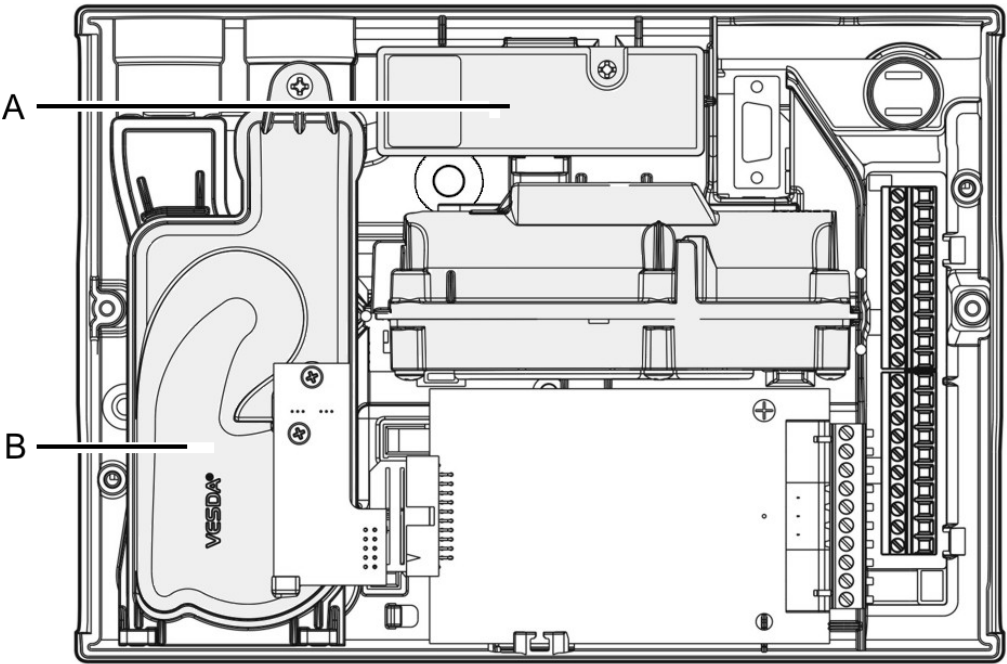

| Legend |                      |
|--------|----------------------|
| A      | Air filter cartridge |
| B      | Aspirator            |

Figure 9-1: Maintenance - replaceable items

## 9.2 Maintenance Schedule

To maintain the VESDA VLF-500 in peak working order follow the maintenance standards for your region and where no recommended standard exists see the table below. Please note, for environments that experience high levels of contamination, the frequency of maintenance will need to be increased. Maintenance should be conducted by a qualified service contractor.

Table 9-1: Maintenance schedule

| Action               | Frequency    | Details                                                                                                                                                                                        |
|----------------------|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Check pipe network   | 6 monthly    | Check pipe connections to ensure all pipe runs are intact and that pipe supports and joints are firm.                                                                                          |
| Airflow              | Yearly       | Check air flow via Xtralis VSC software. Compare the current reading with previous reading to determine if the flow rate has reduced.                                                          |
| Smoke test           | Yearly       | Conduct smoke tests and verify detector performance (refer to the VESDA System Design Manual).<br><br>Compare response times with those previously recorded and investigate any discrepancies. |
| Check power supplies | Yearly       | Test in accordance with suppliers instructions.                                                                                                                                                |
| Filter replacement   | 2 Yearly     | Recommended change out period. The filter status can be checked via Xtralis VSC software. Depending on the environment, the filter may require more frequent checking.                         |
| Clean sampling holes | As necessary | If frequent low flow faults occur clean the sampling pipe network by back flushing (refer to the VESDA System Design Manual).                                                                  |

## 9.3 Replace the Filter Cartridge

The VESDA VLF smoke detector uses a disposable air filter cartridge. This filter removes dust contamination from sampled air and provides a clean air bleed to preserve the detector chamber optics. The detector constantly monitors filter efficiency. To maintain the operational integrity of the smoke detector, it is recommended that the filter be replaced every 2 years, or when a filter fault occurs or more often for environments that experience high levels of contamination.

A fault is raised on the detector, when the filter needs to be replaced. During the replacement process the detector needs to be informed that a new filter has been installed. The detector must remain powered while the filter is replaced.


### Notes:

- Prior to any work or maintenance being carried out on the VESDA VLF take the necessary steps to advise the monitoring authority that power may be removed and the system disabled.
- Ensure the area surrounding the filter is clear of dirt and debris prior to replacement.
- The filter is for single use only, it cannot be cleaned and re-used.

### 9.3.1 Filter Replacement Steps

Ensure the detector remains powered up during filter replacement and a new filter cartridge is available:

1. Push in the security tab and lift up the field service access door (A).
2. Set the detector to 'Standby' mode by pressing the Disable button for 6 seconds. The Disabled LED begins to flash. After releasing the Disable button the disabled LED will slowly flash.
3. Undo the recessed retaining screw (C) and pull out the old filter (B).
4. Using your finger, firmly press the filter switch (D) (in the filter recess of the detector) 5 times within 5 seconds to confirm to the detector that a new filter is about to be installed (see inset). A LED next to the serial interface will flash each time you push the filter switch, and will continue flashing once you have successfully pressed the switch 5 times in 5 seconds.
5. Insert the new filter (VSP-005) and tighten the retaining screw.
6. Press the Disable button for 6 seconds to return the detector to normal operation.
7. Record the filter replacement date on the filter.
8. Close the field service access door.

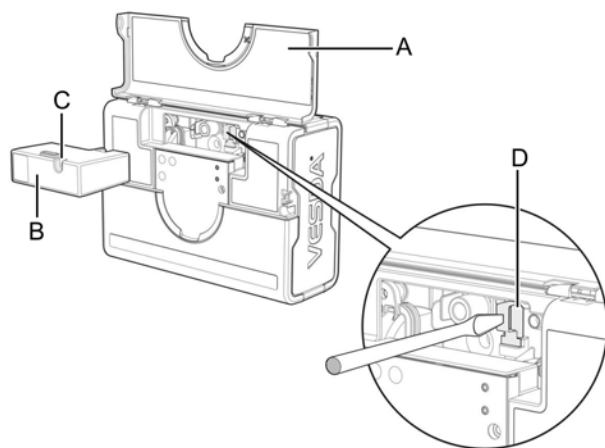

| Legend |                           |
|--------|---------------------------|
| A      | Field service access door |
| B      | Air filter cartridge      |
| C      | Retaining screw           |
| D      | Filter switch             |

Figure 9-2: Filter replacement

## 9.4 Aspirator Replacement

**Note:** Prior to replacing the aspirator advise the monitoring authority that power will be removed and the system disabled.



**Caution:** Electrostatic discharge precautions need to be taken prior to removing the front cover from the detector otherwise damage may occur to the unit.



**Attention :** Il convient de prendre des précautions contre les décharges électrostatiques avant d'enlever le capot avant du détecteur, sinon l'appareil risque d'être endommagé.

Aspirator removal (assumes normal mounting, refer to Figure 9-3):

1. Disconnect power to the detector.
2. Push in the security tab and lift up the field service access door.
3. Unscrew the two front cover retaining screws, lift and swing down the front cover.
4. Only disconnect the fan wiring loom from the connection point (E) at the aspirator.
5. Undo the retaining screw on the aspirator (A).
6. Swing out the aspirator, then lift and remove it from the detector.

**Notes:**

- Any time the aspirator is removed ensure the area surrounding the aspirator is clear of dirt and debris prior to replacement.
- Care must be taken during aspirator replacement. The aspirator must be correctly seated; this is essential so that gaskets are not damaged or dislodged from the underside of the aspirator.

### 9.4.1 Aspirator Replacement Steps

1. Clip the aspirator (VSP-715) into the retaining clip (D) and swing it back into the detector.
2. Tighten the retaining screw (A) (**do not over tighten**).
3. Reconnect the fan loom to the aspirator (E).
4. Replace the front cover and screw it into place.
5. Close the field service access door.
6. Reconnect power to the detector.

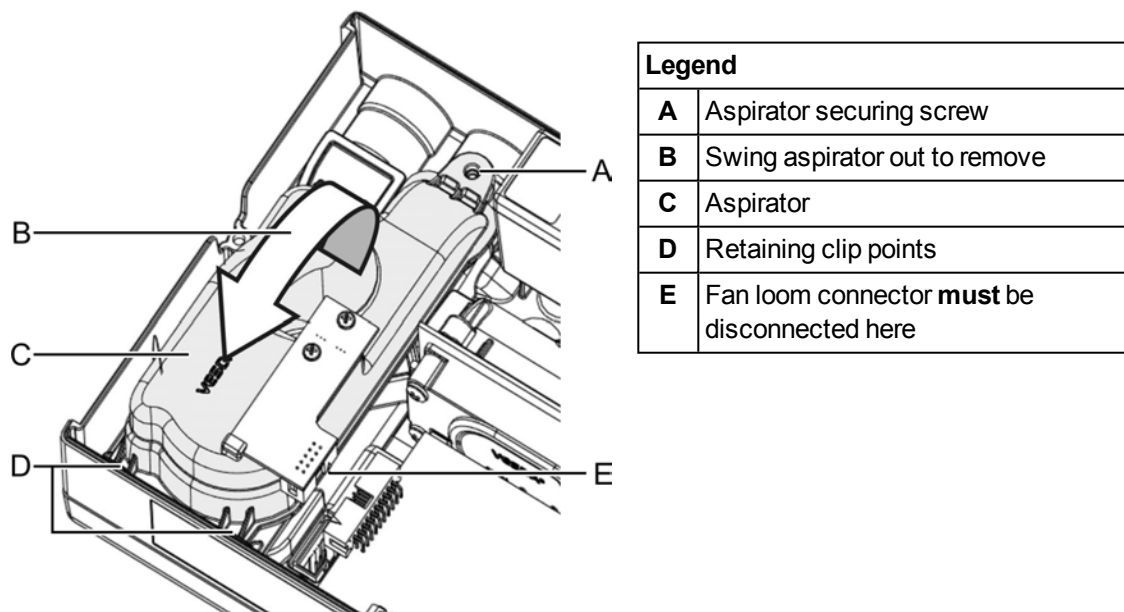


Figure 9-3: Aspirator replacement

## 10 Commissioning Forms

### 10.1 VESDA Commissioning Form

This is the main commissioning form for each customer site.

|                                          |  |
|------------------------------------------|--|
| <b>Customer Name</b>                     |  |
| <b>Site Address</b>                      |  |
| <b>Installer (Name &amp; Contact)</b>    |  |
| <b>Commissioner (Name &amp; Contact)</b> |  |

|                                                                                         |                      |
|-----------------------------------------------------------------------------------------|----------------------|
| <b>Checks</b>                                                                           | <b>Date:</b>         |
| 1. Wiring Checked<br>2. Detector Diagnostics<br>3. Display Diagnostics<br>4. Test Relay | 1.<br>2.<br>3.<br>4. |

|                                   |              |
|-----------------------------------|--------------|
| <b>Client Representative Name</b> |              |
| 1. Test witnessed by:             |              |
|                                   | <b>Date:</b> |

|                                                                                                                                                                                                                                                                                                    |  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <b>Hand Over Documents</b>                                                                                                                                                                                                                                                                         |  |
| 1. Copy of this form<br>2. ASPIRE Installation Data Pack<br>3. ASPIRE Bill of Materials<br>4. Commissioning form for each detector<br>5. Commissioning form for each interface card<br>6. Ancillary devices form<br>7. Smoke test results<br>8. Forms to comply with the local codes and standards |  |

|                                 |              |
|---------------------------------|--------------|
| <b>Customer's Signature</b>     |              |
|                                 | <b>Date:</b> |
| <b>Commissioner's Signature</b> |              |
|                                 | <b>Date:</b> |

## 10.2 VLF-500 Detector Commissioning Form

While connected via Xtralis VSC, for all VESDAnet systems, highlight the device, the zone or VESDAnet then select File > Print to file.

|                             |  |                                                     |  |  |
|-----------------------------|--|-----------------------------------------------------|--|--|
| <b>Address (VESDA Zone)</b> |  |                                                     |  |  |
| <b>VESDA Zone Name</b>      |  |                                                     |  |  |
| <b>Module Type</b>          |  | VLF-500                                             |  |  |
| <b>Firmware Version</b>     |  |                                                     |  |  |
| <b>Card Inserted</b>        |  | VESDAnet Interface Card or Multi-relay card or None |  |  |

|                             |                  |  |                                        |                  |       |
|-----------------------------|------------------|--|----------------------------------------|------------------|-------|
| <b>Alarm Thresholds</b>     |                  |  | <b>Significant Smoke</b>               |                  |       |
| <b>Day</b>                  | Alert            |  | <b>Instant Fire</b>                    | Enable / disable |       |
|                             | Action           |  | <b>Filter</b>                          | Service Period:  |       |
|                             | Fire 1           |  | <b>Reference Detector</b>              | Address Zone:    |       |
|                             | Fire 2           |  |                                        | Dilution%        |       |
| <b>Day/Night Changeover</b> | Enable / Disable |  |                                        | Delay (seconds)  |       |
|                             | Day starts:      |  | <b>Flow Threshold</b>                  | High Major%      |       |
|                             | Night starts:    |  |                                        | High Minor%      |       |
| <b>Night</b>                | Alert            |  |                                        | Low Minor%       |       |
|                             | Action           |  |                                        | Low Major%       |       |
|                             | Fire1            |  | Delay (seconds) Networked              |                  |       |
|                             | Fire2            |  | Flow Averaging Period (sec) Networked  |                  |       |
| <b>Delay</b>                | Alert            |  | <b>Airflow</b>                         |                  |       |
|                             | Action           |  | <b>Raw Flow</b>                        |                  | L/min |
|                             | Fire1            |  | <b>% Flow</b>                          |                  | %     |
|                             | Fire2            |  | <b>Maximum Transport Time observed</b> |                  | sec.  |

## 10.3 Display/Relay Configuration

|                  |                  |
|------------------|------------------|
| Button Lockout   | Enabled/Disabled |
| Smoke Test       |                  |
| Reset            |                  |
| Isolate          |                  |
| AutoLearn Smoke  |                  |
| AutoLearn Flow   |                  |
| Relays Connected | Yes/No           |
| GPI Connected    | Yes/No           |
| GPI Function     |                  |

## 10.4 Relay Configuration

| Relay  | 1 | 2 | 3 | Start-up | Latching |
|--------|---|---|---|----------|----------|
| Fault  | ✓ |   |   |          |          |
| Action |   | ✓ |   |          |          |
| Fire 1 |   |   | ✓ |          |          |

D= Normally De-energized; E= Normally Energized

## 10.5 VESDAnet Interface Card (VIC-010) (plug-in)

|                                   |               |
|-----------------------------------|---------------|
| VESDAnet Interface Card Installed | Yes/No        |
| Card Serial Number                |               |
| Preferred Port                    | Port A/Port B |
| Loop Open Ended on this card      | Yes/No        |

## 10.6 VESDAnet Multi-Function Relay Card (VIC-020/VIC-030)

| Relay                   | Relay 1 | Relay 2 | Relay 3 | MPO | GPI | Startup | Latching |
|-------------------------|---------|---------|---------|-----|-----|---------|----------|
| Alert                   | ✓       |         |         | ✓   |     |         |          |
| Fire 2                  |         | ✓       |         |     |     |         |          |
| Disabled                |         |         |         |     |     |         |          |
| Standby                 |         |         |         |     |     |         |          |
| Disable MPO             |         |         |         |     |     |         |          |
| Monitor External Device |         |         |         |     |     |         |          |

## 10.7 Ancillary Devices

Ancillary devices includes any remote displays, remote relay cards, AOM and SRM assigned to this VESDA VLF detector.

|                          |  |  |  |
|--------------------------|--|--|--|
| <b>Device Name</b>       |  |  |  |
| <b>Device Serial No.</b> |  |  |  |
| <b>Firmware Version</b>  |  |  |  |
| <b>Location</b>          |  |  |  |

## 10.8 ASPIRE Data

|                                  | <b>Group 1</b> | <b>Group 2</b> | <b>Group 3</b> | <b>Group 4</b> |
|----------------------------------|----------------|----------------|----------------|----------------|
| <b>Aggregate Sensitivity</b>     |                |                |                |                |
| <b>Balance</b>                   |                |                |                |                |
| <b>Suction Pressure (least)</b>  |                |                |                |                |
| <b>Endcap Sensitivity Factor</b> |                |                |                |                |
| <b>Pipe Flow Rate (L/min)</b>    |                |                |                |                |

## 10.9 Smoke Test

|                      |  |
|----------------------|--|
| <b>Test Results</b>  |  |
| <b>Test Method</b>   |  |
| <b>Type of Smoke</b> |  |
| <b>Test Date</b>     |  |

## 10.10 Air Sampling Test Results

|               |                                  | <b>Pipe or Branch 1</b> | <b>Branch 2</b> |
|---------------|----------------------------------|-------------------------|-----------------|
|               | Transport Time from End Cap Hole |                         |                 |
| <b>Test 1</b> | Initial Response                 |                         |                 |
|               | Alert                            |                         |                 |
|               | Action                           |                         |                 |
|               | Fire 1                           |                         |                 |
|               | Fire 2                           |                         |                 |
|               | Peak Smoke                       |                         |                 |

|               |                  | Pipe or Branch 1 | Branch 2 |
|---------------|------------------|------------------|----------|
| <b>Test 2</b> | Initial Response |                  |          |
|               | Alert            |                  |          |
|               | Action           |                  |          |
|               | Fire 1           |                  |          |
|               | Fire 2           |                  |          |
|               | Peak Smoke       |                  |          |

This page is intentionally left blank.

## 11 Glossary

|          |                                 |                                                                                                                                                                                                                          |
|----------|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b> | Aspirator                       | Impeller type fan used to draw sampled air into the detector.                                                                                                                                                            |
| <b>C</b> | Capillary Tubes                 | Flexible tubes attached to the sampling pipe network for sampling specific areas or objects away from the sampling pipe.                                                                                                 |
| <b>D</b> | Disable                         | Disables the fire relay outputs from actuating (previously known as Isolate) and indicates a fault.                                                                                                                      |
| <b>E</b> | Event Log                       | All VESDA detectors provide internal data logging of events which have occurred in the protected zone.                                                                                                                   |
| <b>F</b> | FCC Compliance                  | Federal Communications Commission.                                                                                                                                                                                       |
|          | Fire 1                          | This indicates a serious situation and may lead to automatic generation of a normal fire alarm.                                                                                                                          |
|          | Fire Alarm Control Panel (FACP) | A panel which all fire detection products report their status to.                                                                                                                                                        |
| <b>G</b> | General Purpose Input (GPI)     | The General Purpose Input is a programmable input.                                                                                                                                                                       |
| <b>H</b> | High Airflow Environment        | Where there are 10 or more air exchanges per hour.                                                                                                                                                                       |
| <b>I</b> | Instant Fault Finder            | Illuminates one or more segments of the Smoke Dial with corresponding fault numbers.                                                                                                                                     |
| <b>O</b> | Obscuration                     | The reduction in light passing through a uniform length due to the presence of particulates.                                                                                                                             |
| <b>R</b> | Relay                           | The connection on a VESDA detector which allows external equipment to be hard wired to it and be triggered when various conditions occur (example, sounding a siren at Alert threshold).                                 |
| <b>S</b> | Sampling Network                | The pipe network constructed to allow the VESDA detector to draw air for sampling.                                                                                                                                       |
|          | Sensitivity                     | Relative degree of response (i.e. activation of alarm condition) of a detector. A high sensitivity denotes response to a lower concentration of smoke than a low sensitivity, under identical smoke build-up conditions. |
| <b>V</b> | VESDA                           | Brand name for the range of smoke detectors.                                                                                                                                                                             |
|          | VESDA VLF                       | An air sampling smoke detector using light scattering to report smoke obscuration.                                                                                                                                       |
|          | Xtralis VSC                     | A PC based program tool.                                                                                                                                                                                                 |

This page is intentionally left blank.

## 12 Frequently Asked Questions (FAQ)

**Note:** For FAQs not specifically related to VESDA VLF, please visit [www.xtralis.com](http://www.xtralis.com).

### What are the order numbers for the VESDA VLF detectors?

Part Numbers can be found on the datasheets (visit [www.xtralis.com](http://www.xtralis.com) to download datasheets).

### Where do I obtain an approval certificate for my VESDA VLF?

Visit the approval website or [www.xtralis.com](http://www.xtralis.com) for the latest information.

### What do the buttons on the VESDA VLF front panel do?

The RESET button resets all latching faults.

The DISABLE button disables the fire relay outputs and reports a fault.

Pressing the DISABLE button for 6 seconds will put the detector into Stand-by mode.

Pressing RESET and DISABLE simultaneously accesses the Instant Fault Finder function. A number flashes on the round display to indicate which fault, if any, is present. The user interface is described in the user panels beneath the service door.

The TEST button simulates a Fire 1 alarm condition and the alarm relay is activated after the appropriate delay. Before pressing this button, you must ensure that the reporting device is isolated to prevent the initiation of FIRE response actions.

**AutoLearn Flow and AutoLearn Smoke** will start the environment study to create specific thresholds for the area being covered, assuming that the environmental conditions during the study period are comparable to normal operating conditions. The default period for AutoLearn is 14 days. Pressing the **AutoLearn Flow** button also normalizes the detector's airflow.

Pressing an **AutoLearn** button a second time aborts the AutoLearn function.

### What are the permissible flow normalisation limits for VESDA VLF detectors?

VESDA VLF-500: minimum = 12 liters per minute, maximum = 54 liters per minute

### What do I do if my VESDA VLF is showing a flow rate of 0 l/min?

Check whether the unit is in standby mode on the front panel. Pressing the standby button for 6 seconds will cancel this mode, however, it is advisable to first identify the reason for the detector being in standby mode. Xtralis VSC will also indicate standby mode, usually with a blue box that surrounds the detector in the Xtralis VSC device tree. Check if there is a FLOW SENSOR FAIL fault. If there is, you will need to return the detector for repair.

### Why did VESDA VLF AutoLearn Flow fail?

If the flow rate is outside of the detector operating limits, AutoLearn Flow will not work.

### Why is VESDA VLF AutoLearn Smoke having problems?

If a FIRE is detected, AutoLearn is aborted and the appropriate alarm raised. Environments with a high background smoke or pollution level, where this background exceeds the original threshold levels, will also cause AutoLearn to abort. AutoLearn should be run when the environment is displaying typical operating conditions. The default AutoLearn period is 14 days.

### When the Instant Fault Finder is pressed (Reset + Isolate buttons together), why do the AutoLearn Flow and AutoLearn Smoke LEDs start flashing instead of the fault numbers lighting up? The flashing stops when the blue buttons are released.

You have not pressed BOTH the RESET button and the DISABLE buttons simultaneously, you have ONLY pressed the DISABLE button. To put the VESDA VLF into STANDBY you press and hold down the DISABLE button until the AutoLearn Leds and DISABLED LED blink. This means keeping the button pressed for about 6 seconds. You do the same again to take the detector out of STANDBY. So, what you are doing is the 1st stage of putting the detector into/out of STANDBY. To make IFF work reliably, you need to press the RESET button BEFORE the DISABLE BUTTON. Several seconds can elapse between pressing these buttons but take care that you do not RESET the detector by accident.

**Can the deflector be removed from the VESDA VLF exhaust?**

It is a tight fit but it can be removed. With all VESDA detectors, we recommend returning all sampled air from the exhaust into the sampled environment.

**How do I change the filter on my VESDA VLF?**

Refer to the VESDA Maintenance Guide, available on the website under [www.xtralis.com](http://www.xtralis.com) for full details. VESDA VLF detectors need to have the front cover lifted. Secure the replacement filter and acknowledge the action via a configuration tool (Xtralis VSC or programmer).

**What do you recommend that the four VESDA VLF alarm relays be used for?**

'Alert', 'Action', 'Fire 1' and 'Fire 2'. Check whether your local codes require specific relays to be fixed. VESDA VLF has action and fire set to specific relays.

**What are the order numbers for the VESDA VLF demo kits?**

All model numbers provided are Xtralis model numbers, check with your local distributor.

VKT-050 is the VLF-500-00 Demo Kit.

VKT-051 is the VLF-500-01 Demo Kit.

VKT-052 is the VLF-500-02 Demo Kit.

# Index

## A

action .....15, 25, 29-30, 37, 40, 48-50, 55  
 air inlet .....6, 8, 11, 18, 29, 39  
 alert .....25, 29-30, 37, 40, 48, 50, 53, 55  
 ancillary devices .....47, 50  
 applications .....9, 11, 23, 27  
 aspirator .....10, 13, 34, 43, 46, 53  
     replacement .....46, 55  
 aspirator replacement ..... 46  
 ASPIRE2iii, iv, 11, 19-21, 23, 27, 34, 39, 47, 50  
 AutoLearn Flow 25-27, 29, 31-32, 34, 40, 49, 55  
 AutoLearn Smoke ... 25, 27, 29, 31-32, 34, 40,  
     49, 55

## B

branch .....19, 21, 39, 50

## C

cabinet .....7, 27  
 clearances ..... 6  
 commissioning ..... 18, 25, 27, 47, 49-50  
     air sampling test results ..... 50  
     AutoLearn Flow .....25-26, 31-32, 37, 49, 55  
     AutoLearn Smoke .....25, 31-32, 37, 40, 49  
     smoke test .....25-26, 37, 49  
 control buttons .....31-32  
 current .....14, 39, 44

## D

default settings .....25-26, 37  
 detector removal ..... 10  
 dimensions .....5, 39  
 disable .....13, 31-32, 34, 40, 48, 53, 55  
 disabled ..... 10, 13, 29-30, 37, 45-46  
 display ....8-9, 14, 25, 27, 29-30, 34, 40, 49, 55

## F

FACP .....15, 53  
 faq ..... 55

fault .....13, 15, 22, 27, 29-32, 34, 40, 49  
     latching ..... 55  
 features ..... 27  
 field service access 9-10, 12, 25-27, 31, 45-  
     door ..... 46  
 filter .....9, 34, 43, 45, 48  
     replacement .....27, 34, 44-45, 55  
 fire 1 .... 15, 25, 27, 29-30, 32, 34, 37, 40, 48-  
     50, 53, 55  
 fire 2 .....25, 29-30, 37, 40, 48, 50, 53  
 firmware ..... 50  
 flow threshold ..... 48  
 frequently asked questions ..... 55

## G

glossary ..... 53  
 GPI .....5, 13, 34, 40, 49, 53

## I

initial response ..... 50  
 installation .....5-9, 18-19, 22-23  
 instant fire ..... 48  
 instant recognition display ..... 27, 29-30  
 interface card ..... 9, 16, 27, 34, 48-49  
 inverted mounting ..... 7-9  
 isolate .....49, 53, 55

## L

latching ..... 49

## M

maintenance ..... 3, 14, 22-23, 39, 43-44, 55  
     aspirator replacement ..... 46  
     schedule ..... 44  
 mounting .....5-10, 18, 39, 46  
     clearances ..... 6  
     orientation .....6-8  
     surface ..... 7  
 mounting surface ..... 7, 22

**O**

open area ..... 27

**P**

peak smoke .....25, 50

pipe ....5-8, 11, 18-23, 25-27, 29, 34, 44, 50, 53

pipe connections

    air inlet .....6, 8, 11, 18, 29, 39

    exhaust .....5-6, 8, 11, 18, 23, 25, 29, 55

pipe network .... 7, 11, 19-23, 25-27, 34, 44, 53

    branched pipe .....21, 23

    duct ..... 23

    installation considerations ..... 23

    return air .....6, 11, 22-23, 27, 39

    single pipe ..... 20, 23, 39

power .. 10, 13-14, 18, 25, 30, 34, 39-40, 44, 46

**R**

reference detector .....40, 48

relay ..... 13, 15, 32, 40, 47, 49-50, 53, 55

remote display ..... 50

remote relay card ..... 50

reset ..... 13, 29, 31-32, 34, 40, 49, 55

return air grille .....22, 27

RS232 .....17, 31, 40

**S**

serial port .....17, 31

significant smoke ..... 48

smoke dial .....27, 29, 32, 34, 53

smoke level .....34, 40

smoke test .....25-26, 37, 44, 47, 49-50

specifications ..... 39

**T**

terminal block .....10, 12, 14-15

**U**

user interface .....8-10, 29, 55

**V**

VESDAnet .....27, 40, 48-49

VSC .....17, 25-27, 32, 44, 53, 55

**W**

warranty .....5, 11

wiring .....7, 10, 12, 14-15, 34, 40, 46-47

    general purpose input ..... 5, 13, 40, 53

    power supply .....13-14, 39

    relays .....15, 49, 55

    spare terminals ..... 14