

INSTALLATION AND MAINTENANCE INSTRUCTIONS

2012J Photoelectric Smoke-alarm with Steady Tone Sounder

Specifications

Supply Voltage Range:	10VDC~30VDC
Max. Standby Current :	60mA
Max. Alarm Current:	65mA
P-Horn Sound Output Level :	85dB(A)at 3m
Max. Interconnected Units:	24
Silence Mode Timeout Period:	8minutes
Silence Mode Indication:	Sounder Beeps and LED Flashes Green once every 40 secs.
Height:	55mm
Diameter:	135mm
Weight :	180g
Operating Temperature Range :	0°C to 50°C
Humidity:	5% to 93% R.H.

General Description

Smoke-alarms are designed to provide early warning of developing fires at a reasonable cost. They monitor the air and can sense smoke, providing precious minutes for occupants to escape before a fire spreads. Early warning fire detection is best achieved by the installation of smoke alarms in all rooms and areas of the building.


Model 2012J is a photoelectric smoke-alarm designed for open area protection for both residential and commercial applications. It has a built-in relay which may be used to activate auxiliary devices such as bells, horns, and door closers. The relay contacts automatically close 8 seconds after the unit goes into alarm, and automatically resets approximately 5 seconds after the alarm stops. A piezoelectric horn in each smoke-alarm produces an audible 85dB(A) steady tone evacuation signal when the unit alarms or an interconnected one alarms. This steady tone evacuation signal complies with AS3786. These smoke-alarms can be interconnected with the SIGSND and GND terminals for a system of up to 24 units per premises so when one smoke-alarm sounds its evacuation signal it causes the other connected smoke-alarms to sound as well. They also can be interconnected with the SIGRLY and GND terminals, when any one alarms, all the interconnected units' relays will be activated approximately 8 seconds after their horns sound. The smoke-alarm has a built-in silence/test push button to silence or test. If the silence/test button is pushed for less than 3 seconds, this is a silence instruction, the smoke-alarm will reduce its sensitivity and give an audible trouble signal for about 8 minutes. If the silence/test button is pushed and held for more than 3 seconds, this is a test instruction and will also cancel the silence mode(See "Testing" below for more detailed instructions.).

Smoke-Alarm Power Requirements

Power input rating for the smoke-alarm is 12/24VDC@0.065 amp. Power supply and smoke-alarm installation must conform to the electrical codes in your area. It is recommended that all wiring be performed by a qualified installer.

Smoke-alarm Limitations

- This smoke-alarm is self-resetting and does not latch into an alarm condition.
- Smoke-alarms will not sense a fire if the smoke does not reach the sensor. In order for a smoke-alarm to sense smoke, it must be installed in the immediate vicinity of the fire. In addition, smoke from fires in chimneys, in walls, on roofs, in remote parts of the building, or on another level from where the smoke-alarm is located, may not reach the smoke-alarm quickly enough for occupants to escape unharmed. For this reason, the installer shall install smoke-alarms on every level, in every sleeping area, and in every bedroom of the building.
- Smoke-alarms may not be heard. The alarm horn in this smoke alarm meets or exceeds current Australian Standards requirements. However, if the smoke-alarm is not located in the same room as the occupant, or if it is blocked by a closed door or normal noise, the alarm horn may not be heard. In addition, sound sleepers, or persons who are under the influence of drugs or alcohol may not hear the alarm or be able to react to it. Therefore, locate this smoke-alarm, which has a sounder rated at 85dB(A) at 3 meters, on every level, in every sleeping area, and in every bedroom of the building.
- In general, smoke-alarms may not always warn you about fires caused by carelessness and safety hazards like smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches, or arson.
- Smoke-alarms are not fool-proof. Like all electronic devices, smoke-alarms have limitations. No type of smoke-alarm can sense every kind of fire.

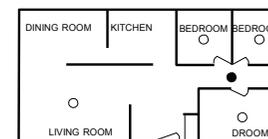

Note: Please dispose electronic waste following national or local regulations after being scrapped or replaced. Do not discard.

- DANGER: If the alarm horn sounds a smoke alarm and you are not testing the unit, the unit has sensed smoke or combustion particles in the air. THE ALARM HORN IS A WARNING OF A POSSIBLY SERIOUS SITUATION. IT REQUIRES YOUR IMMEDIATE ATTENTION.**
 - The alarm could be caused by a nuisance situation. Cooking smoke or a dusty furnace can cause the smoke alarm to sound. If this happens, open a window or fan the air to remove the smoke or dust. The smoke alarm will turn itself off as soon as the air is completely clear.
- DO NOT OFF POWER TO THE SMOKE ALARM. THIS WILL REMOVE YOUR PROTECTION.**

Monitoring Your Smoke-alarm

Once the smoke alarm is energized from an external power, a green LED flashes once about 40 seconds. This signals that the smoke alarm is receiving power and is in the detection mode. If the smoke alarm is not operating properly, the green LED will be OFF. (If so, have the smoke alarm repaired or replaced immediately.) When the smoke alarm senses smoke, the green LED will flash rapidly. If the initiating smoke alarm senses smoke and signals other interconnected smoke alarms to sound their alarm horns, their LEDs will stop flashing. See TABLE 2 for specific LED functions.

TABLE 2: SMOKE-ALARM STATUS

Smoke-Alarm Status	Electronic Hn	LED	Relay
Normal Standby	Silent	Flash every 40 seconds	Open
Silence State	Beep every 40 seconds	Flash every 40 seconds	Open
Local Alarm	Steady Tone	Flash rapidly	Closed after 8 seconds
SIGSND Signal Received	Steady Tone	Off	Open
SIGRLY Signal Received	Steady Tone	Off	Closed after 8 seconds
Failed chamber test	Beep every 40 seconds	Flash every 10 seconds	Open

The smoke-alarm will automatically return from Alarm to Normal state when the reason for alarm, as the presence of smoke, is completely removed.

As the fire is very dangerous for your family, usually you must draw a family escape plan including a map which shows all your home windows and doors, less than two escape routs, a safe meeting place and other required things in your area.

Cleaning and Maintenance

DANGER: Electrical Shock Hazard. Turn off power to the smoke-alarm at the main service panel before cleaning the smoke alarm.


This smoke-alarm has been designed to be as maintenance-free as possible. However, regular testing (see "Testing" above) and periodic maintenance are necessary.

To clean the smoke-alarm, turn off power and vacuum the outside of the smoke-alarm with the soft brush attachment of a vacuum cleaner. Do this at least once every year, preferably every six months. **DO NOT ATTEMPT TO CLEAN THE SMOKE ALARM IN ANY OTHER WAY.**

If the smoke-alarm requires service, do not attempt to service it yourself; this will void your warranty. Return the smoke-alarm to your local System Sensor distributor or agent. Enclose a note describing what is wrong with the smoke-alarm.

Special Note Regarding Smoke-Alarm Protective Guards

Smoke-alarms are not to be used with protective guards or cages unless the combination has been evaluated by an accredited testing laboratory and found to be suitable for that purpose.

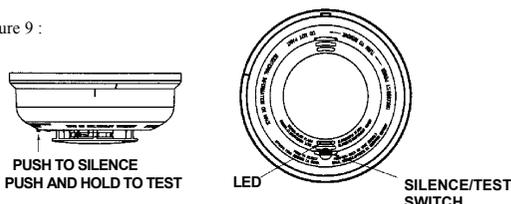

Connecting Auxiliary Devices with Relay

This smoke-alarm has a built-in relay which may be used to activate auxiliary devices such as bells, horns, and door closers. The relay contacts automatically close approximately eight (8) seconds after the unit goes into alarm, and automatically resets approximately five (5) seconds after the alarm stops. For wiring refer to Figure 8. Auxiliary voltage and current requirements must be within relay contact ratings and appropriate wiring must be used.

How to Interconnect Smoke Alarms

NOTE: Interconnect smoke alarms within one residential unit only. If smoke alarms are interconnected between residential units, nuisance alarms will occur when a smoke alarm in another residence is tested. The model 2012J has two interconnection modes which are shown in table 1.

TABLE 1: INTERCONNECTION MODES

Interconnection Mode	Interconnected Terminals	Electronic Horn	Relay
SIGSND	SIGSND and GND	Sound	Only the smoke alarms in local alarm are activated
SIGRLY	SIGRLY and GND	Sound	All the interconnected smoke alarms are activated

- Up to twenty-four 2012J smoke-alarms may be interconnected. The 2012J smoke-alarms may also be interconnected with 2012H when they all work at 12VDC supply voltage by using SIGRLY interconnecting terminal. If one smoke-alarm senses smoke, all of the interconnected units will sound in SIGSND mode, the relays of the interconnected units will be activated approximately eight seconds after horns sound in SIGRLY mode. After inter connecting the smoke-alarms, push and hold the test button for more than 3 seconds on one unit. The alarm horns on all of the other smoke alarms should sound if they are connected correctly.
- If any interconnected smoke alarm is activated by another unit, it senses smoke, the unit will go into local alarm state with the LED flashing quickly.
- Connect the smoke-alarms together by interconnecting all the SIGSND terminals to each other and all GND terminals to each other in SIGSND mode, interconnecting all the SIGRLY and GND terminals to each other in SIGRLY mode. (See Figure 7.) Use 22 gauge (#22AWG) or larger two-conductor standard wire.
- If smoke alarms will not be connected. DO NOT use the SIGSND, SIGRLY and GND terminals.
- The LEDs on all smoke alarms should flash once about 40 seconds when external power is turned on to the smoke alarms. Test smoke alarms after interconnection wiring are complete.

Cautionary Note: Test interconnection wiring after installation is completed.


Test each unit in a system and make sure all other units alarm. FAILURE TO OBSERVE ANY OF THESE CONDITIONS CAN CAUSE SYSTEM MALFUNCTION AND/OR DAMAGE TO THE SMOKE ALARMS.

Testing Information

- You should test your smoke alarm at least once a month to assure yourself of its operation. Test the smoke alarm by firmly depressing the test switch located on the smoke-alarm cover (marked "Push and Hold to Test") FOR 3 SECONDS. (See Figure9). The alarm horn should sound, and the LED should flash rapidly. When the test switch is pushed and held for more than 8 seconds, the relay will be activated.
- In an interconnected system, all of the smoke-alarms should sound their alarm horns when any one of the test buttons is pushed and held for more than 3 seconds. The alarm horn sounds if the smoke-alarm is working properly. **This is the only way to be sure the smoke-alarm is working. Test the smoke-alarm monthly. If the smoke-alarm fails to test properly, have it repaired or replaced immediately.**

Please refer to insert for the Limitations of fire alarm systems

Figure 2: Recommended smoke-alarm protection for single-floor residence with more than one sleeping area:

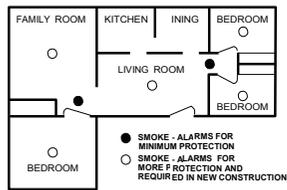


Smoke-alarms shall be installed outside of each separate sleeping area in the immediate vicinity of the bedrooms and on each additional story of the family living unit, including basements and excluding crawl spaces and unfinished attics. In new construction, a smoke-alarm also shall be installed in each sleeping room.

For better protection, we also require the installation of a smoke-alarm inside every bedroom in existing construction.


- Install a minimum of two smoke-alarms in any household, no matter how small it is. Put a smoke alarm in the hallway outside of every separate bedroom area. (See Figure 1.) A minimum of two smoke alarms are required in homes with two bedroom areas. (See Figure 2.)
- Put a smoke-alarm on every level of a multi-level residence. (See Figure 3.)
- Install basement smoke-alarms on the ceiling at the bottom of the basement stairwell. (See Figure 3.)

Figure 3: Recommended smoke-alarm protection for a multi-level residence:

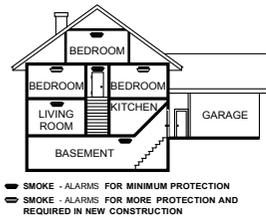


- Install smoke-alarms on the ceiling as close to the center of the room as possible. If this is not practical, install it on the ceiling no closer than 4 inches (10 cm) from any wall or corner. (See Figure 4.)
- If wall-mounting is permitted by local and state codes, and ceiling mounting is not practical, install smoke-alarms on an inside wall between 4 and 6 inches (10 and 15 cm) from the ceiling. (See Figure 4.)

Figure 4: Recommended smoke-alarm mounting locations:

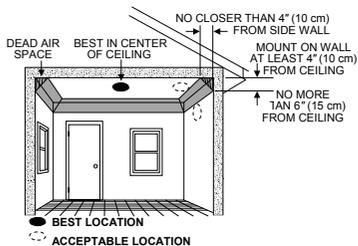

- Put smoke-alarms at both ends of a bedroom hallway if the hallway is more than 30 feet (9 meters) long. In addition, large rooms will require more than a single smoke-alarm if the room is over 900 square feet.
- Rooms or areas that do not have smooth ceilings, or which have short, transom-type walls coming down from the ceiling require additional smoke-alarms.
- Install second-floor smoke-alarms on the ceiling at the top of the first-to-second floor stairwell. Be sure no door or other obstruction blocks the path of smoke to the unit.
- In rooms with sloped, peaked, or gabled ceilings, install smoke-alarms 3 feet (0.9 meter) measured down on the slant from the highest point of the ceiling. See Figure 5.


Figure 5: Recommended smoke alarm location in rooms with sloped, gabled or peaked ceilings:

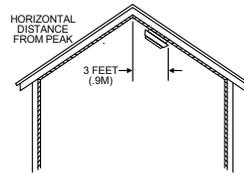

Where Smoke-Alarms Should NOT Be Installed

- In or near areas where combustion particles are normally present such as Kitchens; in garages where there are particles of combustion in vehicle exhausts; near furnaces, hot water heaters, or gas space heaters. Install smoke alarms at least 20 feet (6 meters) away from kitchens and other areas where combustion particles are normally present.
- On the ceiling in rooms next to kitchens where there is no transom between the kitchen and these rooms. Instead, install the smoke alarm on an inside wall, furthest from the kitchen (See Figure 6). Be sure not to install smoke alarms within 4" of the ceiling or any corner or more than 6" from the ceiling.

Figure 6: Recommended smoke alarm locations to avoid air streams with combustion particles:

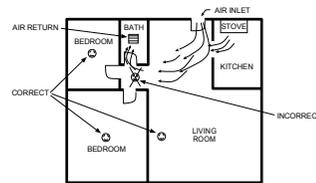


- In damp or very humid areas, or next to bathrooms with showers. The moisture in humid air can enter the sensing chamber as water vapor, then cool and condense into droplets that cause a nuisance alarm. Install smoke-alarms at least 5 feet (1.5 meters) away from bathrooms.
- In very cold or very hot rooms or areas. Operating temperature of the smoke alarm is 40°F to 100°F (4°C to 38°C).
- In dusty, dirty, or insect-infested areas. Dust and dirt can build up on the smoke-alarm's sensing chamber and make it overly sensitive, or can block openings to the sensing chamber and keep the smoke alarm from sensing smoke.
- Near fresh air inlets or returns or excessively drafty areas. Air conditioners, heaters, fans, and fresh air intakes and returns can drive smoke away from smoke alarms, making the units less effective.
- In dead air spaces at the top of a peaked ceiling or wall/ceiling inter sect. Dead air may prevent smoke from reaching a unit.
- Near fluorescent light fixtures. Install smoke alarms at least 10 feet (3 meters) away from such light fixtures.

Installation Requirements

Warning: Electrical Shock Hazard. Turn off power at the main fuse box or circuit breaker to the area of smoke alarm installation before beginning installation procedures.

- Mount smoke alarm to a 4-inch octagonal junction box only. Mount the 12/24 Volt D.C. power supply to a 4" square junction box 2-1/8" deep only. (If necessary, add an extension ring if the selected box does not have adequate volume.) The power supply may be mounted remotely from the unit.
- All wiring must be performed by a licensed electrician and installed in compliance with the Canadian Electrical Code, applicable local codes, and any special requirements of the local authority having jurisdiction.
- Use only the specified wire gauge. Maximum interconnect bus length is 5,000 feet, #14 – 22 AWG cable.
- The smoke alarm includes a tamper-resist feature that, when activated, requires a tool for smoke alarm removal. The following smoke alarm installation instructions include how to activate this feature.

Figure 7:

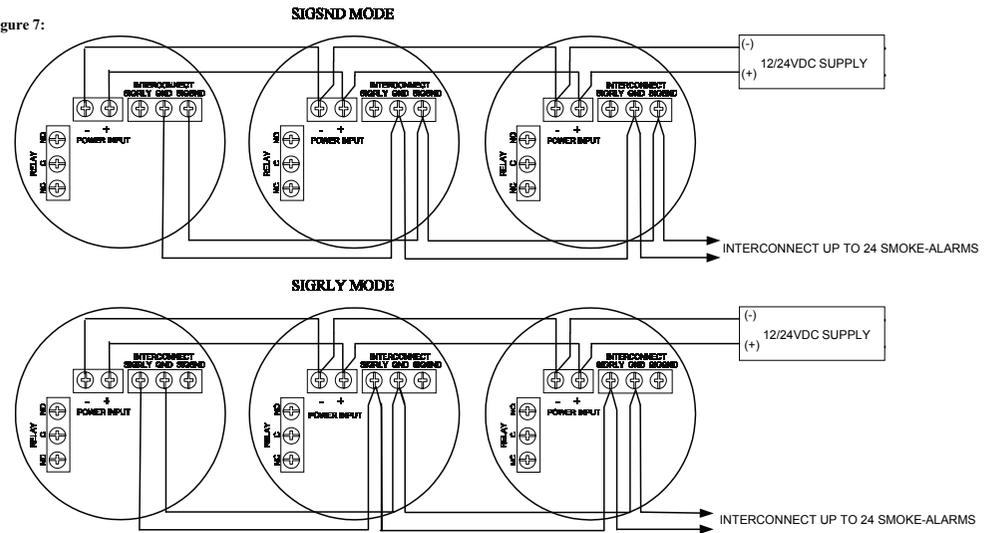

Maximum power bus length in meters, given number of units (maximum per bus) and wire size (mm²). Supply Voltage = 12VDC

WIRE SIZE(mm ²)	1 UNIT	2 UNITS	3 UNITS	4 UNITS	5 UNITS	6 UNITS	7 UNITS	8 UNITS	9 UNITS	10 UNITS	11 UNITS	12 UNITS
1.5	3302	1652	1101	826	660	551	471	413	366	331	301	275
1.0	1633	817	544	408	327	273	233	205	182	163	149	135
0.75	819	411	273	205	163	138	117	103	91	82	75	68


WIRE SIZE (mm ²)	13 UNITS	14 UNITS	15 UNITS	16 UNITS	17 UNITS	18 UNITS	19 UNITS	20 UNITS	21 UNITS	22 UNITS	23 UNITS	24 UNITS
1.5	254	236	220	206	194	183	174	165	157	150	144	138
1.0	126	117	109	102	96	91	86	82	78	74	71	68
0.75	63	59	55	51	48	46	43	41	39	37	36	34

For 24VDC supply voltage, the maximum power bus length is 4 times as long as 12VDC supply voltage. Maximum interconnect bus length: 2000 meters, 0.75mm² or larger cable. All wiring must conform to local electrical codes..

Installation Instructions

1. Turn off power at main service panel.
2. Using wire connectors, connect power supply output wires to the bus line wires supplying power to the remote smoke-alarms. (See Figure 7.) Use color-coded bus wires.
3. Mount power supply to junction box and cover junction box with a 4" square box cover, using box mounting screws.
4. Install a junction box where you plan to install the smoke alarm. (See type and size for junction box above.)
5. Install bus line wires from power supply output to junction box. Use #14-18AWG wire only. See Figure 7 to determine maximum power bus length for wire size and number of interconnected smoke-alarms.
6. Connect color-coded DC power bus wires to power input screw terminals, located on smoke alarm back. If smoke alarms will be interconnected or the relay used, see following sections for specific installation instructions.
7. Remove unit from mounting bracket by turning the smoke alarm counterclockwise and pulling the smoke alarm away from the bracket.
8. Remove small tab on mounting bracket to activate tamper-resist feature, if desired. (To release a smoke alarm with this feature, push up on locking tab with screwdriver while turning smoke alarm counterclockwise.)
9. Install mounting bracket to junction box.
10. Connect power wires to the smoke alarm(s) as shown in Figure 7. Be sure to tighten each terminal screw to secure wire in place. Tug wire to be sure it is connected properly.
11. Attach smoke alarm to mounting bracket by aligning arrows on side of mounting bracket 1-inch to the right of the nib on the smoke alarm. Rotate until the arrow and nib line up. (See Figure 8).
12. After installing all smoke alarms, turn on power at the main service panel. Check for the green LED to flash once about 40 seconds. This means the smoke alarm is receiving power. Check all smoke alarms.
13. Note: If the LED does not flash, power is not getting to the smoke alarm. Check wiring. If LED still does not flash, return the smoke alarm to the manufacturer for repair.

Figure 8:

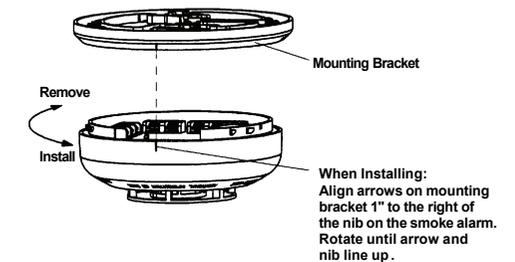

14. Test each smoke alarm in the system. (See "Testing" below for more detailed instructions.)